


Convection Toaster Oven

Instruction Manual

SKU: VH861
HOUSEHOLD USE ONLY

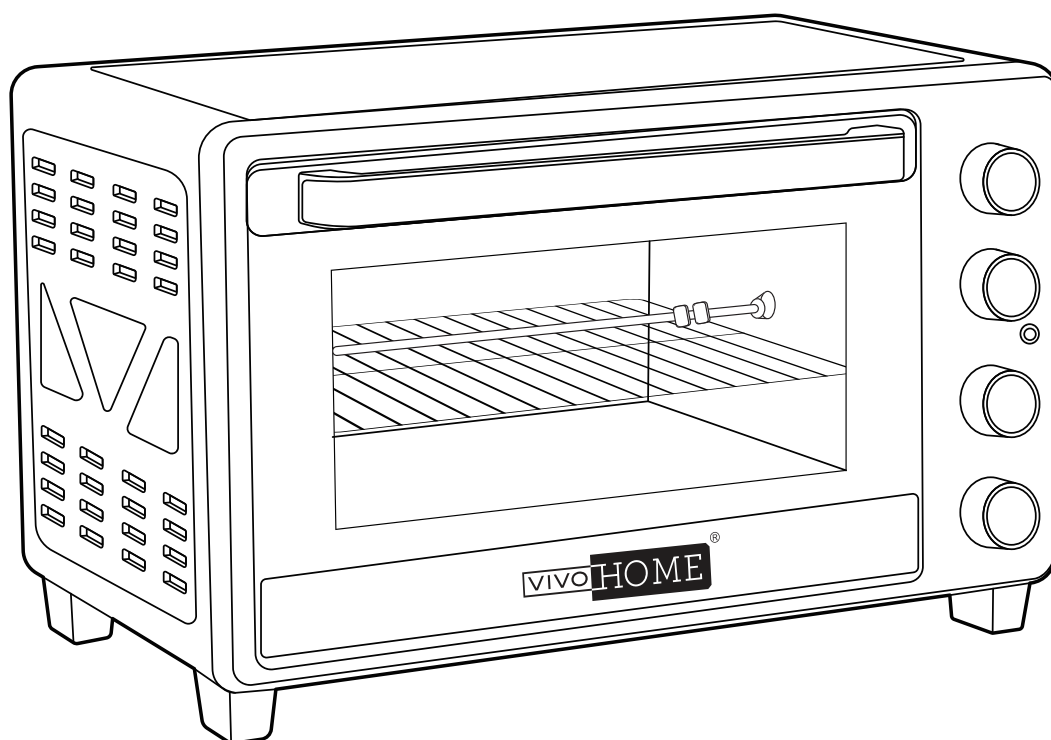

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

PRODUCT SPECIFICATION

Model No.: TO3202-RCL

SKU: VH861

Power: 1600W

Voltage/Frequency: 120V, 50Hz/60Hz

Capacity: 37QT(35L)/6slices / 13.1"Pizza

Temperature range: 150~450°F

Certificate: ETL approved

IMPORTANT SAFEGUARDS


When using this electric oven, basic precautions should always be followed, included the followings:

1. Read all instructions.
2. Do not touch hot surface, use handles and knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surface.
6. Do not operate appliances with damaged cord or plug or after the appliance malfunctions, or have been damaged in any manner. Return the appliance to the nearest authorized service center for examination, repair, or adjustment.
7. Do not use other mismatched accessory, it may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven keep at least 4 inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the timer control knob to "OFF" position, then remove the plug. Always hold the plug, but never pull the cord.
12. Extreme cautions must be used when moving an appliance containing hot oil or other hot liquid.
13. Do not use metal to touch any part of oven when operating.
14. Be extreme cautions when remove the tray or disposing of hot grease or other hot liquid.
15. Do not clean with metal scouring pads pieces can break off the pad and touch electric parts, creating a risk of electric shock.
16. Never leave the appliances unattended while broiling or toasting.
17. Oversized foods and metal utensils must not be inserted in the oven as they may create a fire or risk of electric shock.
18. A fire may cause if oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation, Do not store any item on the oven during operation.

19. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
20. Do not place any of the following materials on the oven: cardboard, plastic, paper or anything similar.
21. Do not store any materials, other than recommended accessories in the oven.
22. Always wear protective, insulated oven gloves when inserting or removing any items from the hot oven.
23. This appliance is for household use only, do not use outdoor.
24. Do not use appliance for other than intended use.
25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
26. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.
27. If the supply cord is damaged, it must be replaced by the After-sales Service Center or a similarly qualified person in order to avoid a hazard.

PARTS OF APPLIANCE

- A: Housing
- B: Front panel
- C: Upper door clip
- D: Door handle
- E: Glass door
- F: Back panel
- G: Down door clip
- H: Oven foot
- I: Temperature control knob
- J: Function dial (OFF/Upper heating/Down heating/ Up&down heating)
- K: Function dial(OFF/Rotisserie/Convection/Rotisserie&Convection)
- L: Timer knob
- M: Power indicator
- N: Rotisserie set
- O: Rotisserie handle
- P: Bake & rack handle
- Q: Bake rack
- R: Bake tray
- S: Crumb tray

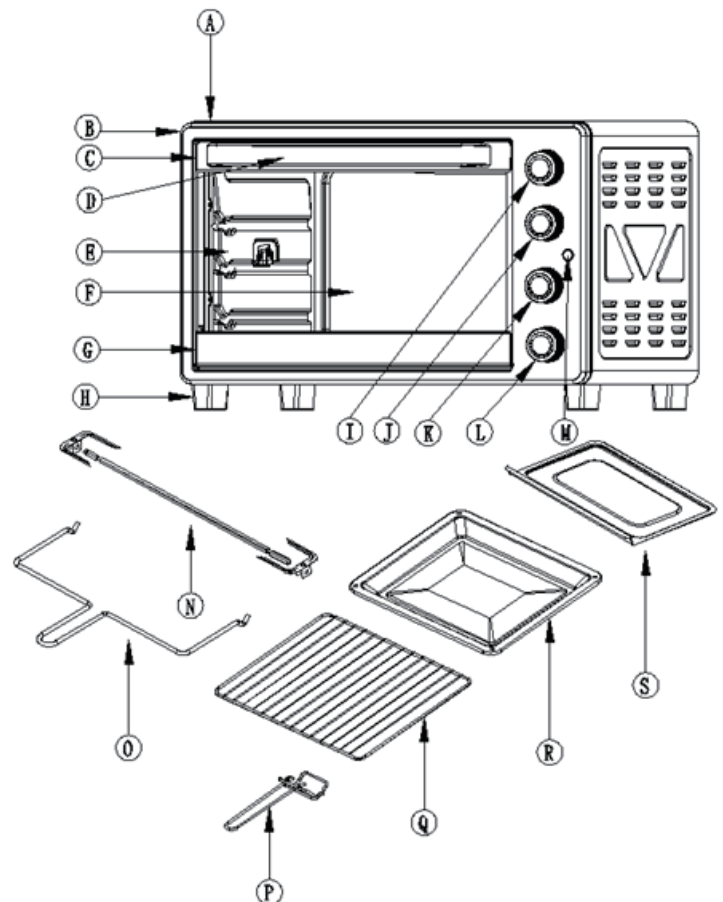

PARTS OF APPLIANCE

Before using your oven for the first time.

Be sure to

1. Make sure that the oven is unplugged and the TIMER knob is on the OFF position.
2. Remove all the accessories and wash them in hot soak water or in the dishwasher.
3. Thoroughly dry all the accessories and re-assemble in oven. Plug the power cord into the wall socket and you are ready to use your oven.
4. After re-assembling your oven, we recommend that you run the oven at the max temperature for approximately 15 minutes to eliminate any dirty oil on its surface.
5. The oven may emit smoke with first time use under normal operating conditions and will soon disappear after 5 minute.
6. Temperature control knob have eight marks with "OFF", "150°F", "200°F", "250°F", "300°F", "350°F", "400°F" and "450°F", Heating elements will not be turned on between the range of 0 to 150 °F (no reach the silkscreen at 150 °F). Due to the thermostat is very sensitive parts. It will be effected by the climate change around. It is normal if the heating elements start working when the temperature control knob is approaching "150°F".

FUNCTION KNOB

1. Set the selector to "↔" ROTISSERIE position, and adjust the operation time at timer knob, then the rotisserie function will be started. Then set the desired baking function, top & bottom grill temperature and time accordingly.
2. Set the selector to "✳" CONVECTION position, and adjust the operation time at timer knob, then the convection function will be started. Then set the desired baking function, top & bottom grill temperature and time accordingly.
3. Set the selector to "↔✳" ROTISSERIE & CONVECTION position, and adjust the operation time at timer knob, convection & rotisserie function will be started together. Then set the desired baking function, top & bottom grill temperature and time accordingly.

HOW TO USE THE ROTISSERIE FUNCTION

1. Place the crumb tray in the lowest grill position on the inner liner to catch the oil dripping from the food during baking.
2. Put the whole chicken/meat skewered with a seasoning on the rotisserie set and fix it with two tines and tighten with a fastening screw.
3. Use the temperature knobs to select the desired temperature.
4. Set the Function knob to the "↔" or "↔⌘" function position.
5. The power indicator lights up when the timer knob is set the desired baking time. Then the rotisserie set starts rotating, the cooking process starts operation.
6. Hear a "ding" sound when the cooking process is completed. Make sure the food is cooked thoroughly and can be taken out by the rotisserie handle.
7. Unplug the power plug after use.

CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. The appliance must be cool down and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable grill rack and bake tray can be washed, as normal kitchen ware.
5. Clean outer surface of appliance with damp cloth.
6. Do not use abrasive cleaner or sharp utensils to clean the oven, as scratching may weaker it and cause shattering.
7. Let all removable accessories and surfaces dry thoroughly prior to plugging oven in the wall socket.

NOTE:

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

Please contact customer service via support@vivohome.com with any questions, comments, or concerns. Thank you for using VIVOHOME products in your home!

**Thank You For Purchasing From
VIVOHOME**

✉ support@vivohome.com
www.vivohome.com
MADE IN CHINA