

 
 
KRUPS

Heliora

Model #192


Heliora Time

Model #369

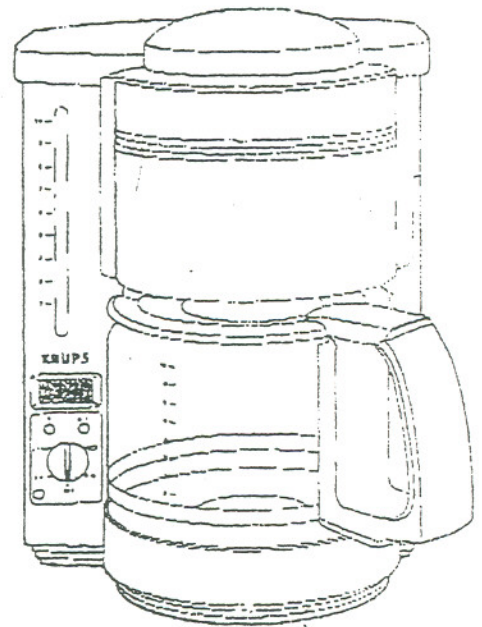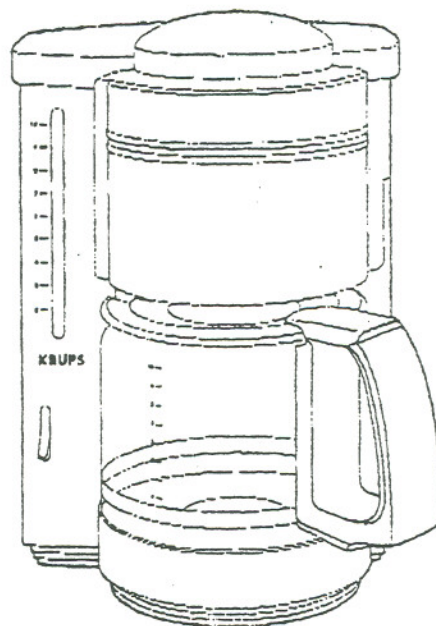












Krups Heliora





 
Krups Heliora Time

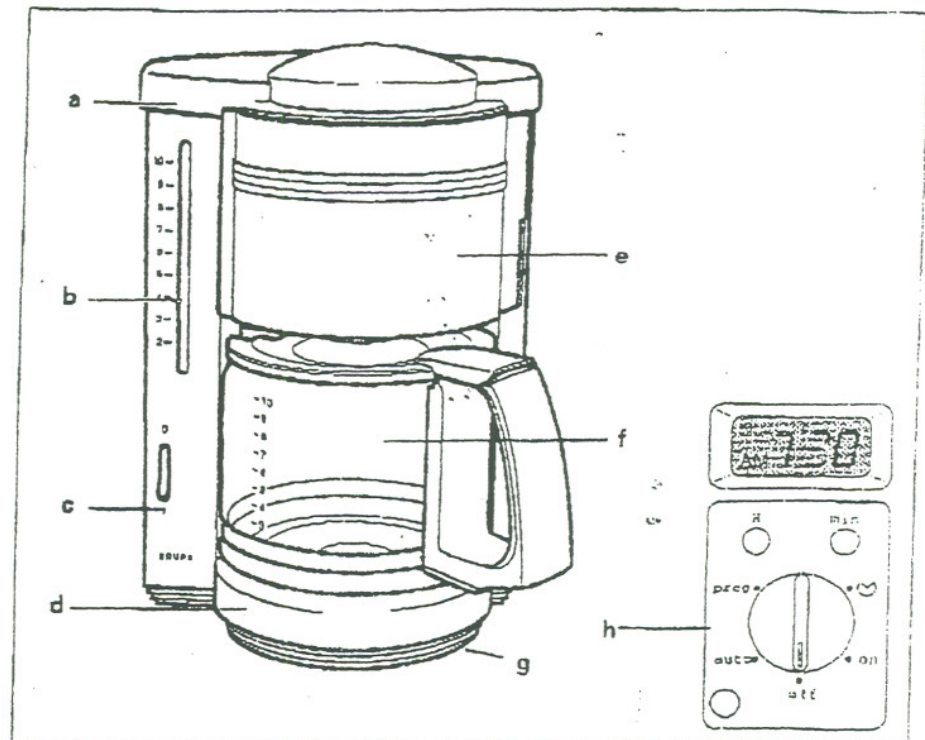

USA

                - a: Hinged lid
- b: Water level indicator
- c: ON/OFF switch
- d: Warming plate
- e: Swivel filter
- f: Glass carafe
- g: Hidden cord storage
- h: Program Selector panel (model #369)
 - Off
 - On Switch on without pre-programming
 - ☉ Set the time
 - Prag Pre-set the time
 - Auto Activate pre-programmed time

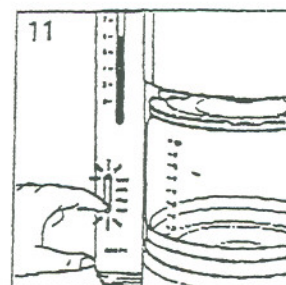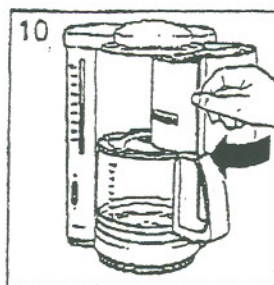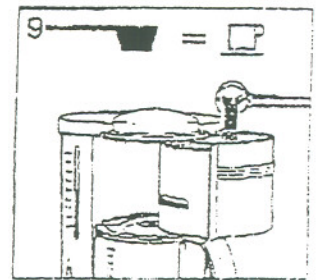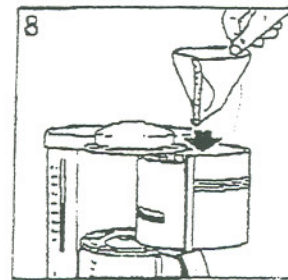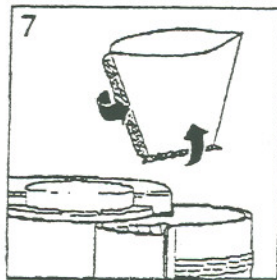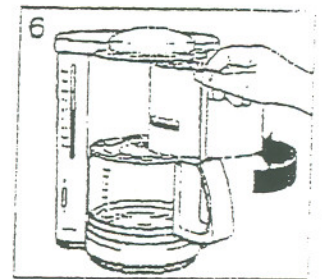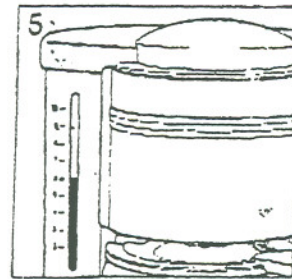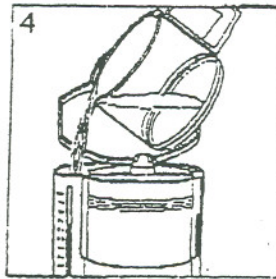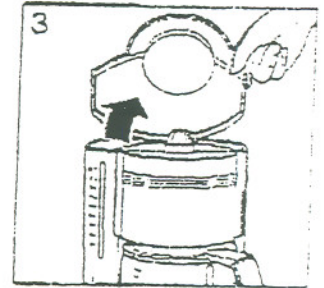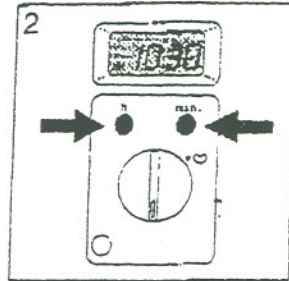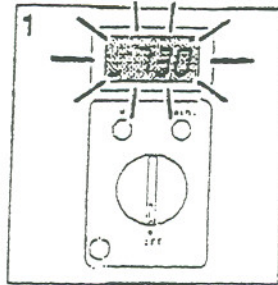

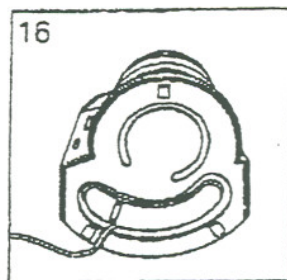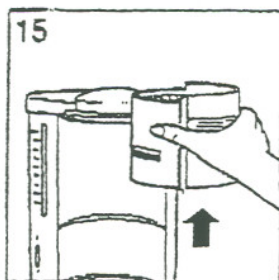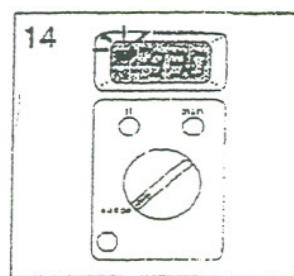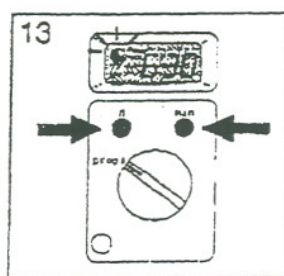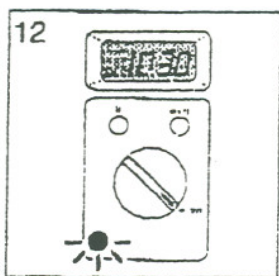

Features

This new KRUPS coffee maker has the following features:

- 24 hour programmable clock with auto shut-off (model #369).
- Exclusive KRUPS deep brew system with special filtering action for maximum flavor.
- One-piece removable swivel filter is convenient to use and easy to clean.
- "Stop and Serve" feature lets you serve a cup or two while brewing continues. Allows you to remove the carafe for 20 seconds without coffee dripping onto the warming plate.
- Hinged water container lid will not get lost and will protect against dust and dirt.
- Water level indicator is easy to read.
- Automatic warming plate will keep coffee at drinking temperature at all times. (Coffee solubles are unstable; therefore, when kept hot for a prolonged period of time, coffee loses its aroma. We recommend not serving coffee which has been kept warm for more than one hour due to the loss of aroma and flavor.)
- Automatic warming plate has non-stick coating for easy cleaning. Raised edges keep carafe firmly in place.
- KRUPS' specially designed heating and tubing system minimizes calcification and leaves virtually no residual water in the system when brewing is finished.
- Hidden cord storage allows you to set the cord to desired length and/or out of the way.

Setting the Time (#369)

- Plug in the KRUPS "Heliara Time". Make sure the selector panel (h) is in the "Off" position.

The LCD display will be flashing intermittently (see fig. 1). This is your signal to set the digital clock.

- Turn the selector switch to position 1. Set the hour and minutes by pressing "H" and "Min" buttons respectively (see fig. 2). The time is now set.

Preparing Coffee

Before making your first pot of delicious coffee, we recommend operating the coffee maker once or twice with water only, without ground coffee or a filter to remove any possible dust.

The lid of the glass carafe must be properly positioned during the brewing process. Position the lid over the carafe and press snugly into place.

Make sure the swivel filter is properly closed during the brewing process. When closing the filter, you will feel a noticeable resistance when the handle of the filter approaches the body of the coffee maker. Push firmly until the filter is locked in place. When the water container lid is closed, it should touch the top of the filter holder handle.

⚠ Caution: If the swivel filter is not completely closed, the "Stop and Serve" trigger will not function properly, which may cause hot water or hot coffee to overflow.

The "Stop and Serve" mechanism functions as long as the glass carafe is inserted into the machine and sits

properly on the warming plate and the swivel filter is properly closed.

Filling the water chamber

- Open the hinged lid (see figure 3).
- Using the glass carafe, pour in the desired quantity of water (see figure 4).
- The exterior water level indicator shows you how much water you are pouring into the container (see figure 5).

The amount of freshly brewed coffee delivered after the brewing process will always be slightly less than the amount of water put into the water container. This is due to some water absorption by the ground coffee. Therefore, it is recommended that you fill the carafe to slightly above the desired cup level so that you will have the number of cups you desire.

Place the carafe on the warming plate with the carafe lid in position.

- Swing the swivel filter to your right (see figure 6).
- Insert a paper filter with the seam folded over and pointing towards the handle of the filter holder (see figures 7 and 8).

If you use a gold tone filter, lift the water tank lid to put it in the filter holder and to take it out.

- Use one slightly rounded scoop of coffee for each cup of water (see figure 9).

After using your KRUPS coffee maker several times you can adjust the coffee/water ratio to suit your own taste.

- Close the swivel filter by pushing it to the left (see figure 10), and make sure that it is properly closed.

Attention: Make sure the paper filter does not tip over when closing the filter. If this happens, the water might run between the paper and the filter holder, producing a very weak cup of coffee.

For Heliora (model #192) :

- Plug in the coffee maker. Switch the "ON/OFF" to "I" position (see figure 11).

For Heliora Time (model #369) :

- Turn the selector switch to the "On" position. The red indicator light will illuminate, indicating that the brewing process has begun (see figure 12).

"Stop and Serve" feature

The "Stop and Serve" feature automatically stops the flow of brewed coffee through the filter cone if the glass carafe is removed from the warming plate during the brewing cycle. You have about 20 seconds between the removal of the carafe and its reinsertion to allow for the service of one or two cups of coffee.

The "Stop and Serve" device closes off the cone so effectively that there is no dripping onto the warming plate. Once the carafe is replaced, the brewing cycle and flow of coffee into the carafe are resumed.

 
⚠ Caution: If coffee does drip onto the warming plate after removal of the carafe, it is usually an indication that too much ground coffee has been placed into the paper filter. This causes the water that jets into the filter cone to overflow between the paper filter and the sides of the filter cone. The overflow carries coffee

grounds that interfere with the snap-shut action of the filter holder, so brewed coffee continues to drip through. If this blockage and subsequent dripping do occur, replace the carafe immediately and allow the full brewing cycle to run its course. Do not swing out the filter until the brewing cycle is complete.

- As long as the coffee maker is on, the warming plate will keep the coffee hot.

Setting Wake-up time (model # 369)

This feature enables you to enjoy freshly brewed coffee at any pre-selected time within a 24-hour period. To use this feature, you must first set the digital clock (see "Setting the Time").

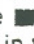- Turn the selector switch to the "Prog" setting. The  symbol will flash intermittently in the display area.
- Set the hour and minutes in which you would like the brewing process to commence by pressing the "H" and "Min" buttons respectively (see figure 13).

 
"Wake-Up" time is now set.

Preparing Wake-up coffee (model # 369)

To enjoy delicious "wake-up" coffee that is freshly brewed and hot, first set the "wake-up" time (see "Setting Wake-up Time").

- Put in ground coffee.
- Fill the water chamber to the desired number of cups.

- Place the carafe back on the warming plate.

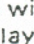- Turn the selector switch to the "Auto" setting (see figure 14). The  symbol will remain constant in the display, indicating that the coffee-maker has been programmed.

At the pre-programmed time, the indicator light will illuminate, indicating that the brewing process has begun.

Note :

If the selector switch is left in the "Auto" position, the coffeemaker will turn itself on everyday at the pre-programmed time. If you do not wish for this to occur, turn the coffee maker to the "Off" position after each use.

Programming Auto Shut Off (model # 369)

The programmable auto shut-off feature allows you to keep coffee hot for up to 5 hours, and to shut off automatically, to suit your needs. The auto shut-off will initially be set to shut off after 1 hour, unless otherwise programmed. Auto shut-off will be effective not only when you are manually preparing coffee, but also when used with the wake-up timer.

When you first plug in the coffeemaker, the auto shut-off will be programmed for 1 hour. To adjust the keep warm time :

- Turn the switch to the "Off" position.
- Press the "Min" button. The blinking cup will appear in the display and auto shut-off will be set at 1 hour.
- You can increase the keep warm time in increment of 1 hour, up to 5 hours by keeping the "Min" button pressed and additionally pressing the "H" button.

- Once you have programmed the keep warm time, it will be stored in memory until manually changed.
- If not keep warm time is set, the coffeemaker will automatically shut itself off after 1 hour.

Cleaning

Always unplug the coffee maker before cleaning.

- Remove the filter holder (see figure 15) and clean it, the carafe and carafe lid in a solution of hot water and mild liquid soap. These parts can also be placed in the upper level of your dishwasher for safe, effective cleaning.

Never use scouring agents.

Never immerse the appliance itself in water or any other liquid. To clean, simply wipe off with a damp cloth.

Never use a cloth to clean the inside of the water chamber, as this may leave fuzzy deposits in the chamber. Just rinse with cold water periodically.

Hidden cord storage

- The power cord can be tailored to the length required by using the hidden cord storage located underneath the coffee maker (see figure 16).

Decalcifying

When to decalcify: minerals found in water can clog the coffee maker or reduce its efficiency. You will know when such a cleaning is necessary by an obvious slowdown in the brewing time. This extended time indicates that

there is a calcium deposit in your coffee maker.

To prevent this:

- Fill the carafe one quarter full of vinegar, then add cold tap water to the top. Pour the water/vinegar mixture into the reservoir opening.
- Place the empty carafe on the keep warm plate and switch on to "ON" position. After the water/vinegar mixture has been cycled through, switch off to "OFF" position.
- Rinse by cycling 2 or 3 more carafes of plain cold tap water. Do not pour any liquid other than cold tap water with vinegar into water chamber when cleaning.

For best results ...

... always use fresh, cold water (warm water might be stale and have mineral deposits which would impair the flavor of the coffee).

... we recommend that you grind your own beans. Freshly ground beans deliver more aroma and flavor.

... serve coffee immediately after brewing.

... never reheat coffee.

Accessories

Permanent gold tone filter	Mod. #053
KRUPS paper filters	Size 4
Replacement carafe	Mod. #016

Limited One Year Warranty

Your KRUPS Heliora is covered by the following warranty (glass carafes are excluded from warranty):

If within one year from the date of purchase this KRUPS product fails to function because of defects in materials or workmanship, KRUPS North America will, at its option, repair or replace the unit without charge, provided the owner has a proof of date of purchase.

This warranty will be void if malfunction was caused by damage to the product by accident, misuse, use on frequency or voltage other than marked on the product and/or described in the instructions, abuse including tampering, damage in transit, or use for commercial purposes. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

GUARANTEE OF PERFORMANCE

This fine KRUPS product is manufactured according to a rigid code of quality standards, and, with minimum care, should give years of satisfying service. However, should the need arise for repairs or for replacement parts within or after the warranty period, please call our CONSUMER SERVICE DEPARTMENT:

(800) 526-5377

24-hours a day, 7 days a week

You will be provided with specific instructions on how to get your product repaired, as well as the name and address of your nearest authorized KRUPS Service Center.

The department will also be able to answer any general product questions you may have.

Before calling the Consumer Service Department, please have the model number of your KRUPS appliance available. You must have this information before calling our Consumer Service Department so that we may better answer your questions. The model number can be located by looking at the bottom of your appliance.

This product is model #192 or #369.

Any general correspondence can be addressed to:

KRUPS North America, Inc.
P.O. Box 3900
Peoria, IL 61612

SPECIAL CORD SET INSTRUCTIONS

Regarding your cord set:

- A. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer extension cords are available and may be used if care is exercised in their use.
- C. If a long extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- D. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

- C. Do not use a cracked carafe or a carafe having a loose or weakened handle.
- D. Do not clean carafe with cleansers, steel wool pads, or other abrasive material, which will reduce the strength of the glass.

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized KRUPS Service Center.

Do not immerse base in water or any other liquid.

To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by authorized service personnel only.

- Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
- Never use warm or hot water to fill the water container! Use cold water only!
- Never refill the water chamber while this KRUPS coffee maker is in operation, in the "ON" position. Turn the KRUPS coffee maker off and let cool down for 10 minutes before refilling with water.
- Before turning your KRUPS coffee maker on, please make sure that:
 1. the swivel filter is properly closed;
 2. the lid for the glass carafe is properly attached to the glass carafe;
 3. the glass carafe sits flat on the inside circle of the heating plate.
- Keep your hands and the cord away from hot parts of the appliance during operation.
- Never clean with scouring powders or hard implements.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions and information in this instruction book and any other literature included in this carton referring to this product before operating or using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized KRUPS Service Center for examination, repair, or adjustment (see Guarantee of Performance).
- The use of an accessory not evaluated for use with this appliance may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn appliance to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Snap lid securely onto glass carafe before serving beverages.
- Appliance with glass carafe:
 - A. The carafe is designed for use with these appliances. It must never be used on a range top.
 - B. Do not set a hot carafe on a wet or cold surface. Thermal shock may result from sudden changes in temperature.