 



■ Operation guide (The setting key on the back of the remote control is P2)  
( The motor setting key is P1)

 
1.Programming




2.Limit setting

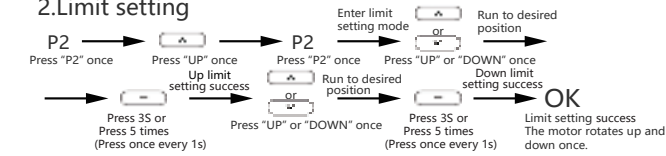


3.Limit fine adjustment



 
4.Delect Limit



 
5.Add emitter (Emitter "A" is coded emitter, Emitter "B" is uncoded emitter)



6.Delete emitter (Single deletion and total deletion)

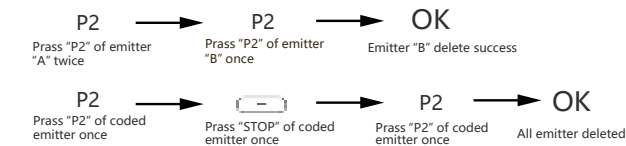

 7.Deadman setting



8.Change direction

Press the setting key, the motor will rotate forward and backward twice, and the change direction success.

9.Restore factory settings

Press the setting key, the motor will rotate forward and backward for four times, and the factory setting will be restored.

10.Title movement

Just use the title movement emitter

No.GS-145

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

■ FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



Tubular Motor Gateway Operation Guide

■ Download APP


Scan the QR code below and download the TUYA smart app



(Note: Please register the TUYA account with your mobile phone number to facilitate the binding of Mijia and Tmall Genie)




1. Press and hold the gateway setting key, release your hand after hearing the voice prompt "Please release", and enter the distribution network mode.

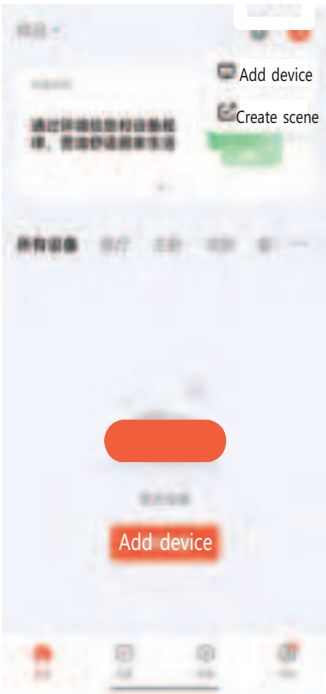

2. Open "TUYA APP" and click "+" on the upper right to add a device



3. Find the device, wait for the "multi-function gateway" to pop up and click "Add"

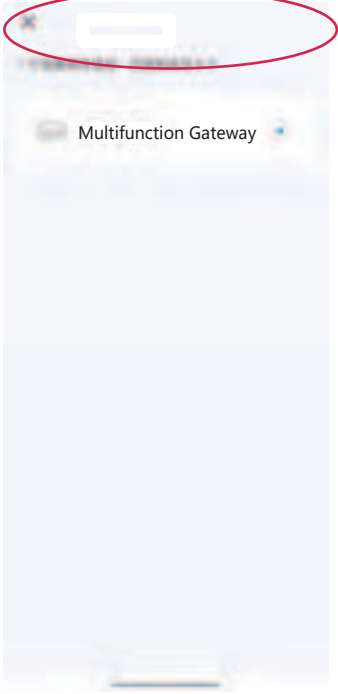

4. Wait for the distribution network to succeed

