

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Ocho Nails x22plus lamp



Importer:

ACTIVESHOP Sp. z o.o.
Ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland


www.activeshop.com.pl

Rev. A/01/2025



Device functions:

1. Motion sensor
2. LED display
3. Time setting for 30s/mute device
4. Time setting for 60s/rotation of the display
5. Time setting for 90s
6. Button to set low temperature and device run time to 120s
7. Power socket
8. On/off switch

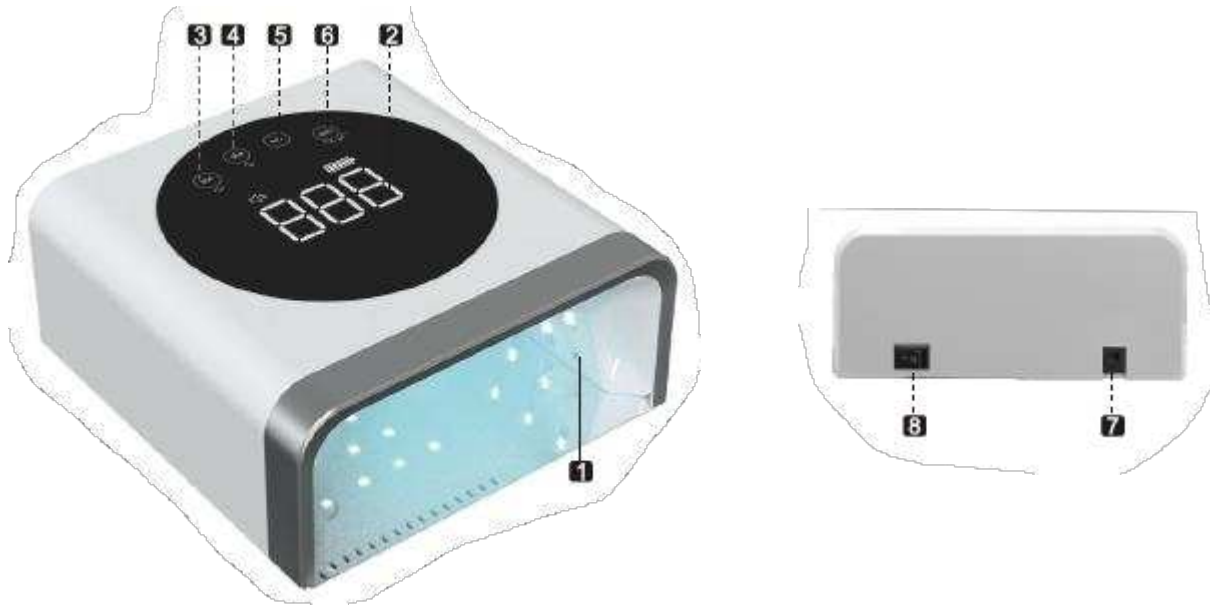

Product Description

Ocho Nails lamp is designed for professional use. It allows you to quickly cure UV/LED gels and hybrids.

Suggested time for:

- base gel 30s
- color gel 90s
- top gel 10s

Operating Instructions

1. Connect the device to the power supply and turn it on. Put your hand inside, then the 120S mode will turn on by default. You can also stop or start the current mode by moving your hand to the center of the device.
2. Insert your hand inside the device and press the "120S" button to activate the painless manicure mode. Press "120S" again to turn off the painless manicure mode. Remove your hands or put them back in. You can also stop or start the current timer mode.
3. Put your hand in and press the "30S, 60S or 90S" button to set the running time. Press the button again to close the "30S, 60S or 90S" manicure mode. Remove your hands or put them back in. You can also stop or start the current mode.
4. Press and hold the button to turn off the sound, then press and hold the button to adjust the digital display to forward or reverse mode.

5. Aging function: Press and hold the "90S" button for 5 seconds, the digital display will show "FFF" and the LED will turn on. Only turning off the power can end this mode.

Device specifications:

Model: X22plus

Input power: 24V 1.5A

Power: 72W

Led: 36 LEDs (365-

405nm) Power supply:

-input power 100-240V 50/60hz

-output power DC12.6V

Cable length: 142cm.

Device dimensions: 21x22x9cm Maximum

operating time: 1,5/2h

Note

- please read the instructions carefully before use
- to avoid damage to the device use the power adapter included in the package
- to avoid damage to the device or electric shock keep the lamp away from water and other liquids
- if you do not use the device, disconnect it from the power supply
- do not use the device if it is damaged
- do not use the device if the power supply is damaged
- in order to avoid shortened life, the lamp should not operate for more than 600s at a time of single use
- when using, do not look directly at the LED light to avoid damage to your eyesight

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel can avoid undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.

4. Immediately remove the plug from the socket and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unsupervised when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow in accordance with rules for

discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then sent to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORT

The device should be transported at temperatures in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

