

INSTRUCTIONS

PARTY LIGHT FLASHY

PACKAGE CONTENTS

- Party light
- Power adapter
- Mounting bracket
- 2 × washer, bolt
- Remote
- Instructions

TECHNICAL SPECIFICATIONS

- Rated voltage: 100–240 V AC, 50/60Hz
- Size: 9.7 × 9.5 × 12.4 cm
- Green laser wavelength: 532 nm
- Red laser wavelength: 650 nm
- Working temperature: 10–40 °C
- Cooling system: fan



SETUP

- Place the light onto a flat surface, connect the power adapter to the device and plug the adapter into an electrical socket.
- Alternatively, you can mount the light onto a wall or ceiling with the included mounting bracket. Once you mount the bracket to the wall or ceiling, use the bolts and washers to secure the light onto the mounting bracket. The picture below shows you the correct way to do that.



- Tighten the bolts on both sides to secure the light in the bracket, then connect to the power supply.

HOW TO USE



1. Motor control (mode select)
2. Power supply port
3. Power switch

- Turn on the device by using the power switch on the back.
- Switch between different lighting modes by pressing the mode select button (1).

- Setting the power switch to “Auto” lets you switch between different automatic lighting modes with the mode select button.
- Setting the power switch to “Music” lets you switch between different lighting modes that react to sounds with the mode select button.
- Pressing and holding the mode select button will speed up the motor or turn it off.
- You can also use the included remote to control the light.

1. ON/OFF button
2. Stop light rotation
3. Strobe mode
4. Automatic lighting modes
5. Sound activated lighting modes
6. Laser color
7. Light color
8. Timer

NOTE: Before you use the remote for the first time, pull out the plastic battery protector.

WARNINGS

- Do not look directly into the lights. This might cause eye damage or even blindness.
- Store in a dry and dark place. The device can be damaged by water or moisture.
- Keep away from open flames and heat.
- This is not a toy. Keep away from children.
- Only use the product for its intended purpose.
- Only use the included power adapter.
- Do not block the fan at the back of the device. This might cause the device to overheat.

WARRANTY

The warranty is valid for 24 months. You can claim it from DfVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in

the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



	<p>WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.</p>
--	---

REMOTE CONTROL

