



## Installation, Operating and Servicing Instructions



### CT2 Conveyor Toaster

Please make a note of your product details for  
future use:

Date Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer: \_\_\_\_\_

\_\_\_\_\_

# CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-5
Operating Instructions	5-6
Cleaning	7
Servicing, Maintenance and Component Replacement	7
Fault Finding	7
Spare Parts List	8
Accessories	8
Service Information and Guarantee	9

## IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



### **WARNING!**

This symbol is used whenever there is a risk of personal injury.



### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.



### **NOTE:**

This symbol is used to provide additional information, hints and tips.

**KEEP THIS MANUAL FOR FUTURE REFERENCE**

## WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned, and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is always accessible.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance, or cleaning.

## TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
CT2	465	365	495 (650 inc. toast tray)	23.6

## CHECK LIST OF ENCLOSURES

Warranty Card
Instructions Manual
Wire feed rack
Crumb tray
Toast tray

## INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire    Earth    E

Blue wire                    Neutral    N

Brown wire                  Live        L

Fit feet to holes provided in base. Install this appliance on a level, heat resistant surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances A 100mm B 1000mm – see Fig 1.

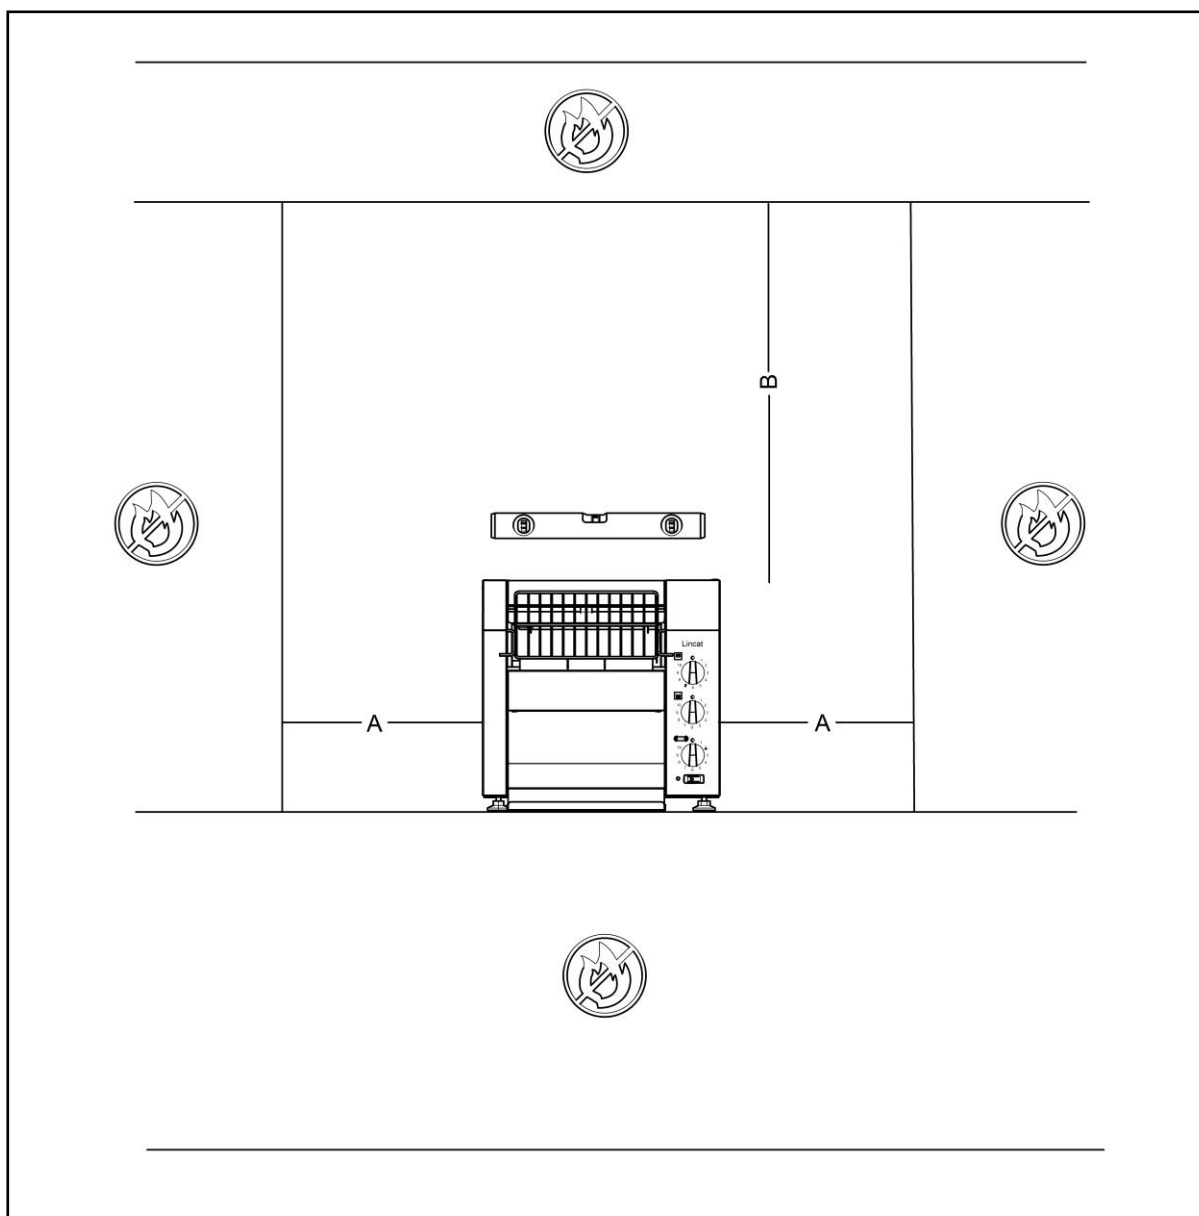


Fig 1

### Power Rating

Model	kW	Amps
CT2	3.0	13

# OPERATING INSTRUCTIONS

The **EcoSence** CT2 toaster is fully automatic adjusting the element power according to demand to achieve the greatest energy savings.

Fit the crumb tray (F) so it is flush at the front and secured internally.

Place the toast tray (H) onto the front of the appliance.

Place the wire toast rack (G) into the toast tray.

Connect the appliance to the electricity supply.

Turn switch (B) to the ON position. The WAIT Amber neon (C) illuminates and the control panel cooling fan will start. The belt is stationary at this point.

In approximately 4 minutes the Green READY neon (D) will illuminate, and the belt will start.

Feed product into the toaster via the wire feed rack (E).

The browning control (A) is shown in the central control position and has two positions anticlockwise, lighter, and lightest, and two positions clockwise darker and darkest.

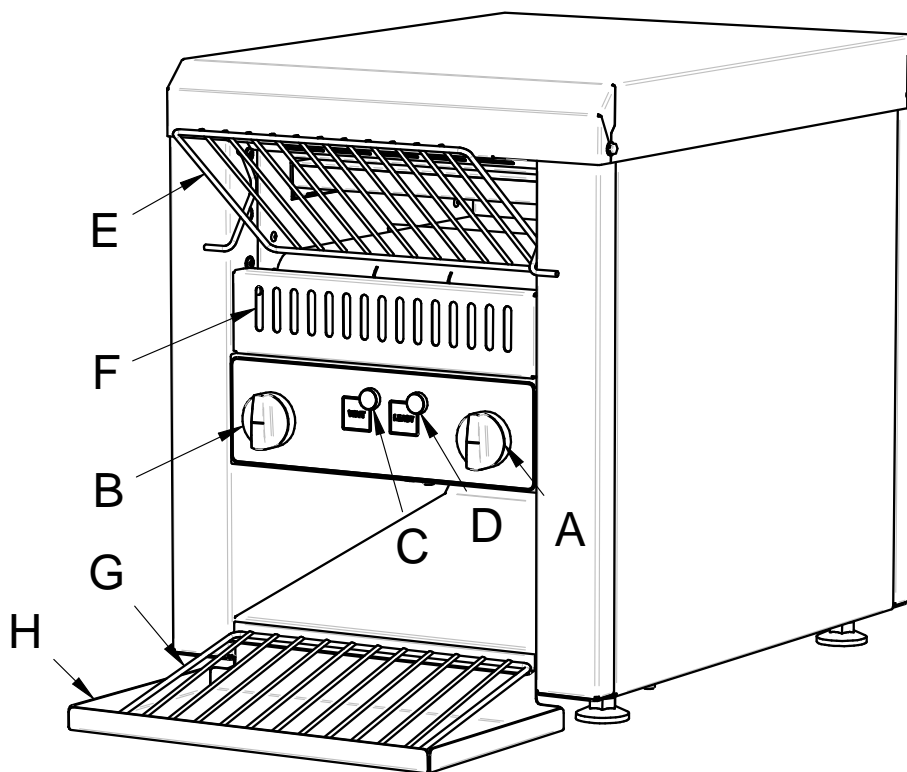


Fig. 2

For most products the central control position will produce suitable results.

Best results are obtained by using bread at least one day old.

Note that items placed on the conveyor will return upside down into the toast tray.

## **CLEANING**



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

Do not remove crumb tray when the appliance is running as it will be hot.

## **SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT**

All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

## **FAULT FINDING**

Please refer to the Service Help Desk number on the final page of this manual

## SPARE PARTS LIST

Part Number	Description
BE11	PTFE Bearing
CB31	Control PCB
CH12	Drive chain
CV02	Conveyor chain
EC101	Upper Element Assembly
EC102	Lower Element Assembly
FA120	Cooling fan
FE10	Foot
KN251	Control knob
MO13	Motor and fan blade
NE46	Green neon
NE47	Amber neon
OES01	Optical transceiver
OL57	Overlay
PL202	Plug and lead (CT2).
PL203	Plug and lead (CT2/EURO).
S/R0079	Cooling fan
SP06	Sprocket – driven 20 Tooth
SP128	Sprocket – driver 16 Tooth
SW14	Rotary switch
TC61	Thermocouple
WR07	Feed rack
WR08	Wire toast rack

## SERVICE INFORMATION

For help with the installation, maintenance, and use of your **Lincat** equipment, please contact our service department:

**☎ UK: 01522 875520**

For non-UK customers, please contact your local Lincat dealer.

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
  - Product code
  - Type number
  - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

### GUARANTEE

This unit carries a comprehensive UK mainland 2-year warranty. The guarantee is in addition to and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.