


Panasonic®

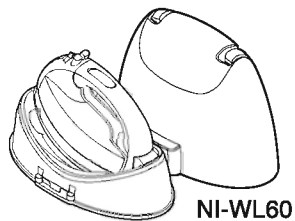

NI-WL60

使用说明书 Operating Instructions 无绳蒸汽电熨斗 Electric Cordless Steam Iron

型号/Model No. NI-WL60/WL50/WL40

安全信息

电熨斗的安全使用	2
重要安全指示	2-3
特别提示	3

功能

各部位的名称及功能	4
功能表	5
防水垢功能	5
自动断电功能	5
防漏水功能	5

操作

蒸汽电熨斗的使用方法	6-8
干式电熨斗的使用方法	8
喷水(喷雾)功能的使用	8
衣物纤维及熨衣方式	8

规格

规格	8
----	---

保养方法

保养方法	9
------	---

常见故障及处理方法

常见故障及处理方法一览表	9
--------------	---

售后服务

售后服务	9
------	---

SAFETY INFORMATION

SAFE USE OF THE IRON	10
IMPORTANT SAFETY INSTRUCTIONS	10-11
SPECIAL INSTRUCTIONS	11

FUNCTION

COMPONENTS IDENTIFICATION	4
FUNCTION	5
ANTI CALCIMUS FUNCTION	12
AUTOMATIC SHUT-OFF	12
AUTOMATIC WATER SEAL	12

OPERATION

HOW TO USE AS A STEAM IRON	12-15
HOW TO USE AS A DRY IRON	15
HOW TO USE THE SPRAY FEATURE	15
FABRIC AND IRONING RECOMMENDATIONS	15

SPECIFICATION

SPECIFICATION	15
---------------	----

MAINTENANCE

MAINTENANCE	16
-------------	----

GENERALLY MALFUNCTION AND TACKLING METHOD

GENERALLY MALFUNCTION AND TACKLING METHOD	16
---	----

AFTER SERVICE

AFTER SERVICE	16
---------------	----

衷心感谢您使用 Panasonic 蒸汽电熨斗！

为了保证您能正确使用产品，请仔细阅读使用说明书并妥善保管本使用说明书。

Sincerely thanks for using a Panasonic Iron.

Before operating this unit, please read these instructions completely and save these instructions carefully.

松下·万宝(广州)电熨斗有限公司

Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd.

广东省广州市番禺区钟村镇万宝基地 原产地: 中国 电话: (020) 84770888

Wanbao Base Zhongcun Town Panyu District Guangzhou City Guangdong Province China

Panasonic客户咨询服务中心: 400-810-0781; 800-810-0781(固定电话)

Panasonic customer and service center: 400-810-0781; 800-810-0781(Fixed Tel)

感谢您购买 Panasonic 蒸汽电熨斗！

本产品仅限于家庭使用。请在熨衣板上使用您的电熨斗熨烫衣物。

电熨斗的安全使用

您和他人的安全是最重要的！

我们在产品和说明书上提供了重要的安全资讯，请认真阅读并遵守相关条款：



这是安全警告符号，它警告您潜在的危險，有可能使您和他人受伤甚至死亡。相关安全条款附在文字“警告”或“注意”之后，它们的含义是：



警告

如果阁下没有遵照此指示操作，阁下可能会受到严重的伤害甚至死亡。



注意

阁下必须注意，否则潜在的危險可能使阁下受到轻度或中度的伤害。

安全条款告诉您哪些潜在的危險，怎样减少被伤害的几率和阁下未按照此指示操作时可能会导致的后果。

重要安全警示



警告

为减少烫伤、电击、火灾或伤害到身体，请您使用此熨斗时，必须遵守相关的安全预防措施，包括：

使用此电熨斗前请认真阅读此说明书中所有的条款。

在使用前请认真阅读以下内容

1. 在电熨斗接通电源期间，使用者不能离开，并避免让小孩接触熨斗。（会造成烫伤、触电、砸伤）
2. 不允许用电源线缠绕熨斗底板。（会损坏电源线）
3. 本产品的电源线有任何损坏时，为了确保安全，请勿擅自更换电源线，务必委托本公司的维修站更换。请勿将本产品的电源线用于其它电器产品。（会造成烫伤、触电，异常会造成受伤）
4. 使用过程中，应避免底板和隔热板等高温部位接触身体、不耐热物体和金属钮扣等金属物体。（会造成烫伤、损坏物品或损坏底板涂层）
5. 给水箱加水或倒水时必须拔出插头，切断电源。（会造成触电）
6. 熨斗只能与附送的电源座搭配使用。（会造成触电、火灾）
7. 本熨斗必须插入带地线连接的电源插座中。（会造成触电、火灾）
8. 发生异常时（有烧焦、冒烟等）须立即停止使用并拔出插头，然后向本公司的维修站咨询。（会造成触电、火灾）
9. 电熨斗损坏或曾经掉落并能看到明显损坏的痕迹或漏水，用户请不要自行

拆机维修，应送指定维修中心修理，否则后果自负。（会造成触电、火灾）

- 电熨斗必须放在稳固的表面，当电源座放在台面时，保证下面支撑面是稳固的。（会造成底板刮花，熨斗倒下会造成身体受伤或烫伤）
- 不要在电源线缠绕的状态下使用电熨斗。（会很快损坏电源线）
- 本产品不适合以下人士（包括小孩）使用：身体官能或心智能力退化者，或是经验与使用知识缺乏者。他们需要有负责其安全的人员在旁监督，或指示产品的使用方法，方可使用。
- 请勿让小孩将本产品当成玩具。

警告

不要用手接触高温部（底板表面，隔热板、水箱下面）。




（会造成烫伤。）



不要让热的蒸汽碰到手或身体其它部位。



（会造成烫伤。）

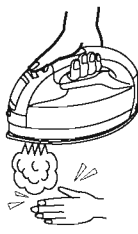

不熨衣时请将电熨斗放回电源座，无绳电熨斗不能连续熨衣而不放回电源座加热。（见第7页第⑦点）

（会造成底板刮花，熨斗倒下会造成身体受伤、烫伤。）

使用蒸汽时不要倾斜、晃动太厉害！



（会造成热水飞出而造成烫伤。）



禁止此类情况发生。



请按图示去做。

特别提示

警告

请不要在同一个电路回路中使用其它高功率的电器。


注意

为减少个人伤害或损伤电熨斗：

- 不要使用清洁类产品清洗电熨斗，这样可能会导致损害电熨斗的工作部位。
- 在蒸汽电熨斗里请不要使用水添加剂或其它像柠檬、香水等代替品，它们会沾污衣物。
- 如果在使用后未将蒸汽旋钮设在干式(关)位置，残留的水可能流到底板而导致在下一次使用时造成烫伤。
- 用户应小心使用产品并避免产品掉落。（可能会造成水箱漏水）

各部位的名称及功能 COMPONENTS IDENTIFICATION

NI-WL60

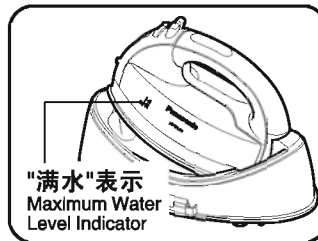

温度选择按钮
Temperature Selected Button

锁定扣
Release Button

把手
Handle


调温刻度对照表
Fabric Guide Chart

电源座
Power Base

喷水(喷雾)按钮
(仅NI-WL60)
Spray Mist Button
(NI-WL60 Only)

蒸汽喷射按钮/
垂直喷射按钮
Jet of Steam Button/
Vertical Steam Button

蒸汽旋钮 Steam/Dry Selector

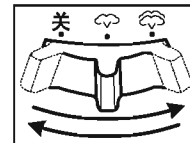

干式(关) Dry | 标准蒸汽 Light Steam | 加强蒸汽 Regular Steam

注水口盖
Water Fill Cover

喷水(喷雾)嘴
(仅NI-WL60)
Spray Nozzle
(NI-WL60 Only)

底板
Soleplate

水箱
Water Tank

电源线
AC Power Cord

插头保护套(请妥善废弃, 以免小孩吞食.)
Plug Cover (Abandon properly and avoid children swallowing.)

电线收藏袋(仅NI-WL60/WL50)
Cord Bag (NI-WL60/WL50 Only)


收藏箱
Cover Case

NI-WL60/WL50

NI-WL40

锁定按钮
Case Lock Button

NI-WL50/WL40

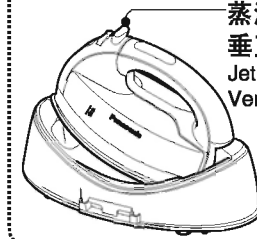

蒸汽喷射按钮/
垂直喷射按钮
Jet of Steam Button/
Vertical Steam Button

温度选择按钮
Temperature Selected Button

1. 温度表示指示灯(红)
Temperature Control Indicator (red)

2. 断开指示灯(绿)
" Off " Indicator (green)

绿灯亮时表示熨斗已断电不再加热，若要再通电，按温度选择按钮至所需要的温度。

The light turns on when the iron has automatically shut itself off, the heater will not work; to reheat your iron, simply push " 设定 " pad until the red light appears at the desired temperature indicator.



3. 温度选择按钮
Temperature Selected Button
● 按温度选择按钮时
When push the Temperature Selected Button



按顺序切换
Regulated as follows

本产品符合 GB4706.1-2005, GB4706.2-2007, GB4343.1-2009, GB17625.1-2003 国家标准。
This product conforms to GB4706.1-2005, GB4706.2-2007, GB4343.1-2009, GB17625.1-2003 Standard.


功能表 FUNCTION

功能 Function 型号 Model	无绳设计 Cordless	收藏箱 Cover Case	防水垢装置 Anti Calcium Cassette	自动断电 Automatic Shut-Off	防漏水装置 Auto-Valve System	喷射蒸汽/ 垂直喷射蒸汽 Jet of Steam/ Vertical Steam	喷水(喷雾) Spray	球面底板 Curved Soleplate
NI-WL60	是Yes	是Yes	是Yes	是Yes	是Yes	是Yes	是Yes	是Yes
NI-WL50	是Yes	是Yes	是Yes	是Yes	是Yes	是Yes		是Yes
NI-WL40	是Yes	是Yes	是Yes	是Yes	是Yes	是Yes		是Yes

防水垢功能

- 在水箱里装有防水垢装置，能软化水质，降低水中矿物质含量；使水垢不会积聚在熨斗中，延长熨斗的使用寿命。


- 一般自来水也能长期使用，而不降低蒸汽性能。

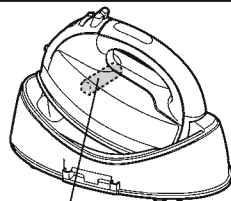

防水垢装置(水箱内)

自动断电功能 当您忘记切断电源时，可自动断电


- 电熨斗放在通电的电源座上静止约10分钟后，加热电路会自动断电。
- 再通电
 - * 若要再通电，按温度选择按钮至所需要的温度。
 - * 在自动断电状态下遇到停电再通电情况时，电熨斗会处于自动断电状态。

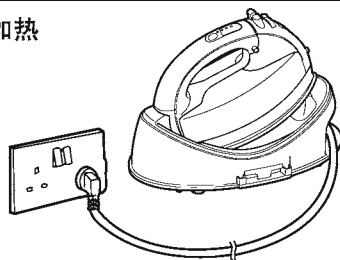

防漏水功能

在底板上面装有防漏水装置，在使用时，如果底板温度低于约 110°C，防漏水装置就会动作，将蒸汽槽封闭，避免因水滴漏出底板沾污衣物。

此外，使用后不用通电底板也会自动干燥，防止因为漏水导致底板腐蚀。

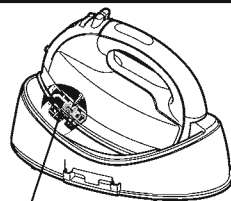


防漏水装置

蒸汽电熨斗的使用方法 对于低温，中温及热敏感的布料，可在衣服不易看到的地方试熨，必要时垫布熨烫。

- 取出收藏箱：将收藏箱放在桌面上，左右拉开两端的锁定按钮后向上提。（见下页图示）

NI-WL60/WL50

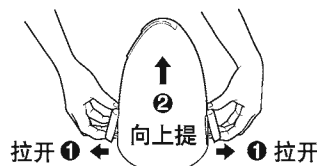

NI-WL40



- 解开电源线，将电源线插板插入电源座。



 
- 注意：**① 电源线插板插入电源座内，必须确实插到底。
② 给水箱加水时，插头不能插入连接电源插座。

- 将蒸汽旋钮拨到“关”位置。然后按下锁定扣，取下水箱。


- 打开注水口盖。然后注入水到“满水”刻度。

- 注意：**① 加水时，注意竖立熨斗观察水量。加水不要超过“满水”刻度。
② 要使用干净的自来水。
③ 给水箱加水时，插头不能插入电源插座。

- 关闭注水口盖。装上水箱，直至听到“喀嚓”一声。




- 按下锁定扣的同时
- 取下水箱

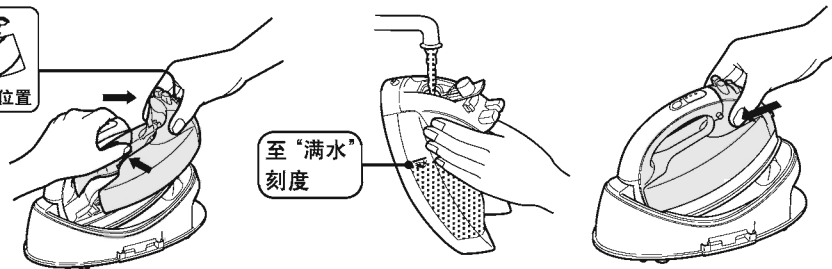

- 将插头插入电源插座，接通电源。将熨斗确实放入电源座，把温度设定按钮按到可产生蒸汽的温度区（“高”、“中”、“低”位置均可）。

- 注意：**① 电熨斗接通电源期间，使用者不能离开。
② 使用加强蒸汽或喷射蒸汽时，应选择蒸汽温度区的“高”位置。低档温度会漏水。

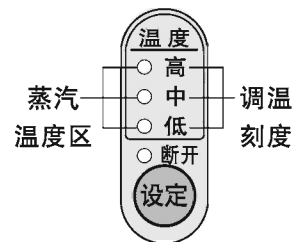

- 7 a) 待温度指示灯从闪烁变为点亮(熨斗在使用过程中, 温度下降再加热时, 灯不再闪烁)。
b) 拨蒸汽旋钮, 选择所需的蒸汽量, 即可开始熨衣。


注意: ① 熨斗装牢于电源座上才能供电; 不熨衣时请将电熨斗放回电源座加热, 以保持所选温度; 电熨斗只能放在电源座上, 请勿放于其他地方。

* 必须使用附送的电源座。

- ② 在使用蒸汽过程中, 每约30秒钟需要给熨斗充电一次。


* 按使用条件而异。

蒸汽旋钮(每拨一次如下图切换)

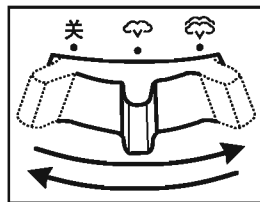

标准蒸汽: 适用于只需少量蒸汽熨烫的薄布料及混纺布料。

加强蒸汽: 适用于需要较多蒸汽熨烫的厚布料及皱褶严重的布料。

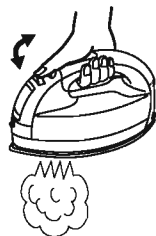

干式(关) 标准蒸汽 加强蒸汽

8 喷射蒸汽的使用

- a) 适用于特厚布料及难于消除皱褶的布料, 在使用的同时清洗蒸汽孔。
b) 开始使用时可能不出蒸汽, 空打喷射按钮几次直到蒸汽出来。
c) 为了防止热水从底板滴出, 按动喷射按钮的间隔不能小于2-5秒。
d) 使用垂直喷射蒸汽时, 可将衣物挂在衣架上。将熨斗离开身体远一些, 使其靠近衣物但不接触它。熨烫多皱褶的衣物时, 用空的手拉紧衣物并隔2-5秒按动喷射按钮。

注意: ① 使用喷射蒸汽功能时, 应将蒸汽旋钮拨到“关”位置。将温度设定按钮推至“高”档, 否则可能有水滴出。

- ② 不要对人身身体部分和穿在身上的衣服使用喷射蒸汽。




- 9 无论电熨斗水平或竖立都能清楚观察水量。当水箱中的水较少时, 取下水箱重新加水, 其操作按④-⑥步骤进行。

- 10 a) 熨衣完毕, 按动温度选择按钮到“断开”灯点亮, 然后拔出插头。

- b) 先将蒸汽旋钮拨到“关”位置, 然后按下水锁定扣取下水箱。

- c) 彻底倒空水箱中的水。

- d) 装好水箱, 应将蒸汽旋钮保持在“关”位置。

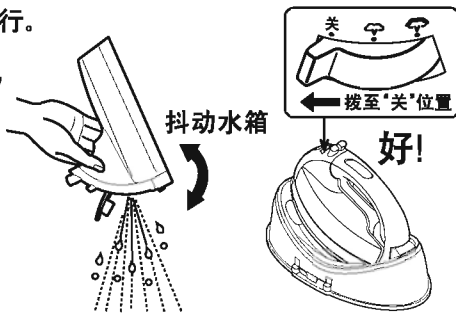


- 11 电熨斗使用后, 在冷却和保管时, 应将蒸汽按钮保持在“关”位置。将熨斗放回电源座, 将收藏箱垂直压入电源座后放于安全处保管。

- 即使熨斗是热的也可以收藏。

(NI-WL60/WL50)

(NI-WL40)

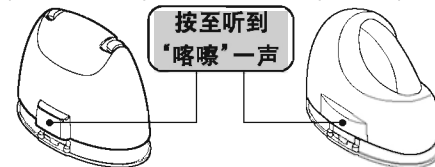


干式电熨斗的使用方法

- 按照蒸汽熨斗的使用方法①步骤取出收藏箱, 将蒸汽旋钮拨到“关”位置。
- 在熨斗确实放入电源座的情况下, 将插头插入电源插座, 接通电源。
- 根据电源座上《调温刻度对照表》, 按动温度选择按钮至适当的温度位置, 待温度指示灯从闪烁变为亮着不动时, 即可进行熨衣。
- 熨衣完毕, 请即拔出插头, 将熨斗放回电源座, 再将收藏箱垂直压入电源座后放于安全处保管。

喷水(喷雾)功能的使用(仅NI-WL60)

重复按喷水(喷雾)按钮, 直至喷雾产生, 即可使用。

喷水(喷雾)功能主要用于熨烫较厚的棉、麻布料。

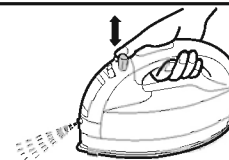

衣物纤维及熨衣方式

- 注意: 1. 对于热敏感的布料, 应垫布在衣物上熨烫, 以免变形或损坏。
2. 熨混纺衣物时, 应根据耐热性较差的纤维来选择温度。
3. 熨不同布料的衣物时, 先熨烫耐热性较差的衣物。

衣物纤维	温度设定	较好的熨衣方式
腈纶 醋酸纤维	低	干熨衣物里面或垫布在衣物上熨烫。
尼龙 丝绸		干熨衣物里面。
涤纶 人造丝	中	干熨衣物背面; 熨衣领、衣袖、口袋时, 可轻轻地熨烫衣物正面。
羊毛		轻轻地熨烫衣物正面。
棉布	高	宜采用蒸汽熨烫, 可根据衣物的厚薄和皱褶程度进行喷雾, 对黑色衣物应熨背面, 以免出现“镜面”现象。
亚麻		


规格

额定电源	220V ~ 50Hz	功 能	蒸汽/干式熨烫
额定功率	NI-WL60/WL50:1600W; NI-WL40:1300W	蒸汽产生方式	滴下方式
插头/电源线	单相三极插头/长约1.6m	自动温控器	调温范围“低”-“高”(约120-205℃)
尺 寸	长约29cm, 宽约18cm, 高约21cm	熨 烫 面 积	160 cm²
重 量	(收藏时)约1.9kg, (本体)约1.0kg	贮 水 量	120 ml
放置方式	电源座式	指 示 灯	指示灯调温指示

保养方法

拔出插头，待电熨斗充分冷却后

- 用软布擦拭电熨斗底板及其他部份。
- 出现较严重的污渍时，可用软布沾中性洗涤剂擦拭。

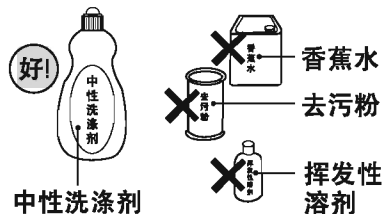

自动清洗

- 利用喷射蒸汽清洗底板汽化室和蒸汽孔。参照第7页的《喷射蒸汽的使用》，多次按动蒸汽喷射按钮直到无蒸汽喷出。



常见故障及处理方法一览表（请参照本表格进行检查）

故障	检查部位	插头	温度选择按钮	蒸汽旋钮	蒸汽喷射按钮	蒸汽孔	排水方法	调温刻度对照表
不出蒸汽		○	○	○		○		
蒸汽量太小			○	○		○		
蒸汽孔漏水		○	○		○			
熨烫表面腐蚀				○			○	
不发热	○	○						
布料烧焦萎缩			○					○
处理方法 (不能处理时与销售店联系)	是否插好? 熨斗是否 确实插入 电源座?	确认位置 是否正确?	来回2-3次 拨蒸汽旋钮 回复到蒸汽 位置。保管 时拨至干式 (关)位置。	按动按钮 的间隔为 2-5秒。	参考<保 养方法> 进行清洁 处理。	冷却前要 进行排水。	根据指示 适当设定 温度。垫 布在衣物 上熨烫。	

售后服务

关于售后服务等，如有不明白之处，请向销售店或致电 800-810-0781 咨询。

① 保修证（另附）

在购买本产品时从销售店领取，阅读完后，妥善保管。必须确认保修证上是否记载了「购买日期、销售店名」等。

② 需要修理时

按上述表格自我检查后仍然不能处理时，请与维修店联系。

保修期内

向维修店要求修理，按保修证规定，向维修店提交需修电熨斗、保修证及购机发票。

超过保修期内

向维修店要求修理，按规定进行收费修理。

Thank you for buying a Panasonic Iron

This appliance is intended for household use only. Please use your iron on an ironing board.

SAFE USE OF THE IRON

Your safety and the safety of others are very important

We have provided important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. It is used to alert you to potential hazards that can kill or injure you and others. The safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These words mean:



WARNING

This describes issues which could cause death or serious injury.



CAUTION

This describes issues which could cause injury or damage your belongings.

The safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, or injury to persons:

basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE IRON

1. Do not leave the iron unattended while it is connected to the electrical source. Keep it away from children.
2. Do not loop Cord around iron Soleplate.
3. If the supply Cord is damaged it must be replaced by our service agent in order to avoid a hazard.
4. During operating, should prevent such high-temperature parts as the Soleplate or Heat-insulated Plate etc., from contacting body, thermo-labile objects and metal buttons and other metal objects so as not to scald or damage of objects.
5. Should unplug and cut off the power supply before you add in or empty out water from Water Tank.
6. This iron must be used with its Power Base.
7. Must use the electrical outlet with earth connection.
8. Should stop using and pull out the Plug immediately while abnormal occurs (such as scorch, smoke etc.) to avoid fire or electric shock, then contact with our service agent.
9. If the iron was damaged or has been dropped and there are visible signs of damage or if it is leaking, do not repair the iron by yourself, it should be repaired by the designated service center; otherwise the user should take all responsibilities of damage.


- The iron must be used and rested on a stable surface. When placing the iron on its Power Base, ensure that the surface under the Power Base is stable.
- Do not use the appliance when the Cord is entangled. The supply Cord might be damaged as a result.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING

Don't touch the high temperature parts (such as Soleplate surface, Heat-insulated plate, underside of the Water Tank)




(May be scalded.) Don't touch.

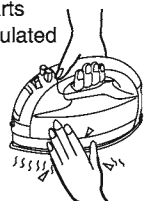

Don't touch the hot steam with your hands or other parts of your body.



(May be scalded.)

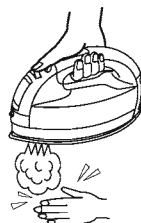


! Please set the iron back to Power Base while you don't iron clothes, after use a period of time, please put the iron back to Power Base to reheat (refer to P13 point 7). (To avoid scratch on the surface or hurt by the dropped iron.)

Don't slant or shake the iron too much.



(May be scalded by hot water.)

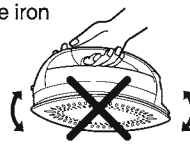

Prohibit such accident occurring.



Operating accord with the drawing.

SPECIAL INSTRUCTIONS

WARNING

To reduce the risk of electric shock or fire:

Do not operate another high wattage appliance in the same circuit, to avoid a circuit overload.


CAUTION

To reduce the risk of personal injury and damage to your iron:

- Never use steam iron cleaning products in the iron, as they may damage working parts of the iron.
- Do not use water additives or substitute water such as linen or scented water in the steam iron. They can stain fabrics.
- If the Steam/Dry Selector is not at Dry (关) position after using, remaining water will move into the Soleplate and can result in burns at the next use of the iron.
- Be careful to use the product to avoid falling, it may cause water leakage.

ANTI CALCIUM FUNCTION

- The built-in Anti Calcium Cassette in the Water Tank, softens water; continuously reduces mineral content in the water. Reduces scale buildup in the vaporizing chamber of the iron, making it possible to use steam function for a long period of time.
- Ordinary water can be used in this iron for a long time, and steam function doesn't weaken.

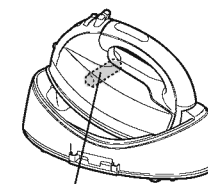


Anti Calcium Cassette

AUTOMATIC SHUT-OFF

When you forget shutting off power, it will automatically shut off.


- The iron will automatically shut itself off if the iron has been left on the Power Base more than about 10 minutes.
- Turn iron back on
 - To turn the iron back on to resume ironing, simply push the Temperature Selected Button until the red light appears at the desired Temperature Indicator.
 - At the situation of Auto Shut-Off, if the supply power shut off, after electricity resume, the iron will at the situation of shut off.

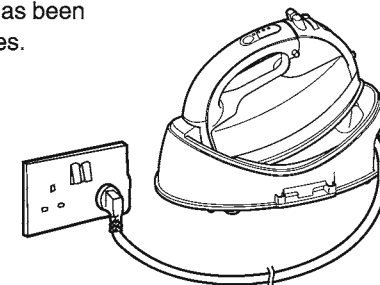

AUTOMATIC WATER SEAL

Auto-Valve System built-in the Soleplate, when the temperature of the Soleplate drops below 110°C, The valve for the vaporizing chamber in the iron automatically close and stops the water from going in further. This prevents water from spitting out the Soleplate, staining the clothes.

Besides it is unnecessary for you to heat the Soleplate again and it will automatically dry, store the iron when it cooled.

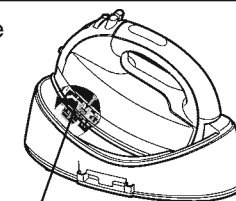


Auto-Valve System

HOW TO USE AS A STEAM IRON


(for low, medium temperature and heat-sensitive fabric, try to iron invisible place of fabric; if necessary use a press cloth on top of fabric.)

- Remove the Cover Case: Place the unit on a firm and stable surface, while pull/press the Case Lock Button, lift the Cover Case to open.


NI-WL60/WL50

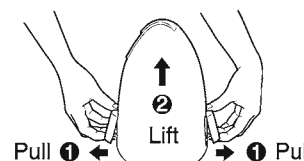

NI-WL40

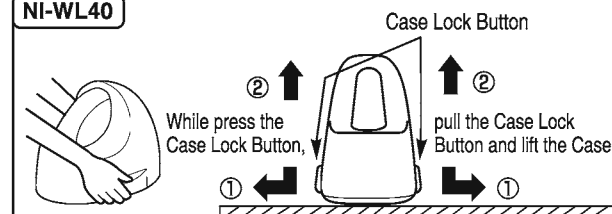

- ② Pull the Cord-holder, get the AC Power Cord; insert AC Power Cord into Power Base.

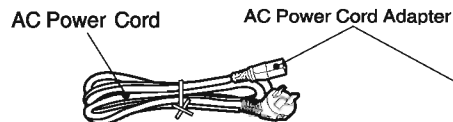

Notice:

- ① The Power Cord Adapter must be inserted into Power Base securely.
- ② While fill Water Tank with water, don't plug the AC Power Cord into electrical outlet.

- ③ Move the Steam/Dry Selector to Dry (关) position. Press the Water Tank Release Button; take out the Water Tank.

- ④ Open the Water Fill Cover. Fill the Water Tank up to "满水 (MAX)" line.


Notice:

- ① Observe the volume of water at upright position, do not overfill above "满水 (MAX)" indication.
- ② Using pure tap water.
- ③ While fill Water Tank with water, don't plug the AC Power Cord into electrical outlet.



- ⑤ Close the Water Fill Cover. Re-install the Water Tank to the main unit, until a click sound is heard.



- ① Push the Release Button.
- ② Remove the Tank.

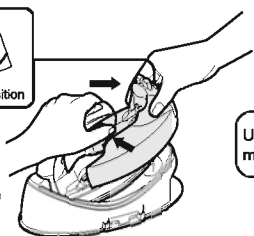

Up to "满水" mark

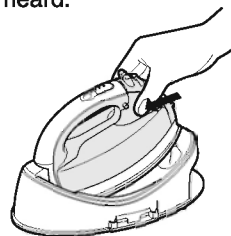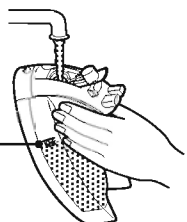

- ⑥ Plug the AC Power Cord into electrical outlet, connect to power supply. Set the iron on the Power Base securely. Push the Temperature Selected Button until the red light for steam zone starts blinking.

Notice:

- ① Do not leave the iron unattended while it is connected to the electrical source.
- ② When use Regular Steam or Jet of Steam, please set the Temperature Selected Button to "高" zone. Low temperature will lead to water leakage.


- ⑦ a) Preheat the iron until the Indicator Light change from blink to illumination (while the iron being use, it reheats itself when the temperature declines, the light doesn't blink.)

- b) Move the Steam/Dry Selector, select steam quantity; and start to iron.

Notice:


- ① The iron should be set on the Power Base securely for connecting to power supply, while not in use, please set back to Power Base, the Power Base will maintain the selected temperature. Just put the iron into Power Base, don't put it at other place.

* This iron must be used with its Power Base.

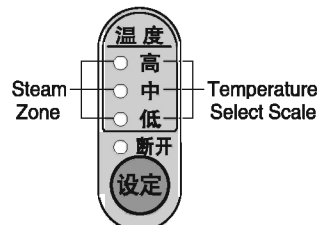


- ② When use for steam iron, the iron should be preheated every 30 seconds.
* Different time for different condition.

Steam/Dry Selector (switch as the following)

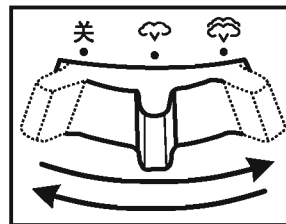


Dry(关) Light steam Regular steam

- Light steam: for thin or delicate fabrics requiring a small amount of steam.
- Regular steam: for fabrics requiring a lot of steam (i.e. thick materials, items with stubborn wrinkles.)

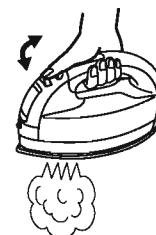


⑧ How to use the Jet of Steam feature

- a) For fabrics of thick materials and with stubborn wrinkles, and cleaning the steam vents at the same time.
- b) Pump the Jet of Steam Button several times before using for the first at each ironing session.
- c) The interval should not be less than 2-5 seconds when using the Jet of Steam, to avoid the hot water dripped from the Soleplate.
- d) When using Vertical Steam, hang the garment on a clothes hanger. Hold the iron away from your body close to but not touching the fabric. Pull the fabric tight with your free hand and after 2-5 seconds press the Jet of Steam Button.

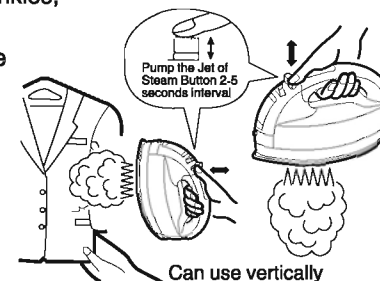


Notice:

- ① When using Jet of Steam, keep the Steam/Dry Selector in the Dry(关) position and set the Temperature Selected Button to "高" zone, or some water will drop from iron.
- ② Never iron clothes on the body or point your iron at anyone when steaming.

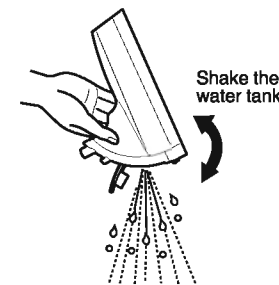


- ⑨ The water volume can be observed very clearly whatever in vertical or horizontal position. Please pull out the Plug when the volume of water is low, and refill the iron according to the step ④-⑤.

- ⑩ a) After ironing, push the Temperature Selected Button until the "OFF(断开)" light turns on, pull out Plug.
- b) Move the Steam/Dry Selector to the "Dry(关)" position, press the Water Tank Release Button, take out the Water Tank.
- c) Empty water from Water Tank.
- d) Re-install Water Tank, keep the Steam/Dry Selector in the "Dry(关)" position.

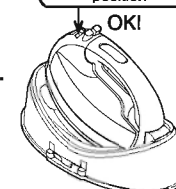

- 11 After ironing, while cool down and store; always keep the Steam Button in the Dry(关) position; set the iron back to Power Base. Push the Cover Case vertically until heard the sound clicks; then store the iron at safe place.

- You can restore the iron even it is hot.

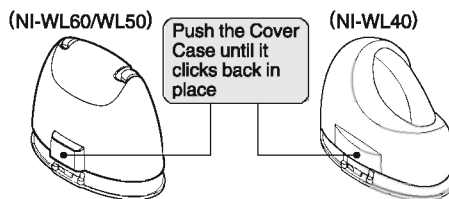


HOW TO USE AS A DRY IRON

1. Remove the Cover Case same as step 1 of " HOW TO USE AS A STEAM IRON ", Move the Steam/Dry Selector to the Dry(关) position.
2. Set the iron on the Power Base securely, plug the AC Power Cord into electrical outlet; connect to power supply.
3. According to 《 Temperature Select Indication 》 push the Temperature Selected Button to the desired position. Preheat the iron until the Indicator Light change from blink to illumination, and start to iron.
4. After ironing, pullout Plug, set the iron back to Power Base. Push the Cover Case vertically until heard the sound clicks; then store the iron at safe place.

HOW TO USE THE SPRAY FEATURE (NI-WL60 Only)

Repeat to pump the Spray Mist Button till it works.

The spray feature is particularly helpful for ironing thick materials such as cotton, linen fabric.

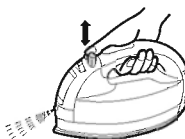

FABRIC AND IRONING RECOMMENDATIONS

- Notes : 1. For heat-sensitive fabric, try to iron using a press cloth on top of fabric, otherwise it will ruin or damage.
2. Iron belended fabrics, setting temperature for lower-temperature fiber.
3. Iron clothes with worse heat resistance first while ironing the different kinds of cloth.

Fabric	Temperature setting	Ironing recommendations
ACRYLIC ACETATE	Low (低)	Dry iron on reverse side, or use a press cloth on top of fabric.
NYLON SILK		Dry iron on reverse side.
POLYESTER RAYON	Med (中)	Dry iron on reverse side. To touch-up collars, cuffs, pockets, etc., iron lightly on right side.
WOOL		Iron lightly on right side.
COTTON	High (高)	Steam ironing is suggested. iron dark fabrics on reverse side to avoid unwanted sheen.
LINEN		


SPECIFICATION

Rated voltage	220V ~ 50Hz	Function	Steam/Dry Iron
Power	NI-WL60/WL50:1600W; NI-WL40:1300W	Steam generations way	Drop
Plug / Cords	Single-phase three pole plug/1.6m long	Thermostat	Temperature range: "低"~"高" (120-205℃)
Dimensions	29cm long, 18cm width, 21cm height	Iron surface	160 cm ²
Weight	(Restored) about 1.9kg. (Iron) about 1.0kg	Reservoir capacity	120 ml
Stand mode	Power Base	Lamp	Temperature Select Indicator

MAINTENANCE

Unplug iron, wait until iron cools completely.

- Wipe off iron Soleplate and other part with a damp and soft cloth.
- For serious stain, use a neutral detergent.

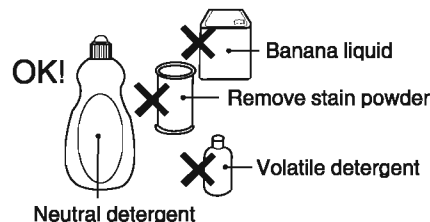

Self-cleaning

- Cleaning the steam chamber of Soleplate and steam. vents with Jet of Steam, accord to 《 How to use the Jet of Steam feature 》 (P14), pump the Jet of Steam Button Several times until steam is invisible.



GENERALLY MALFUNCTION AND TACKLING METHOD (please check with this table)

Check Malfunction	Plug	Temperature Selected Button	Steam/ Dry Selector	Jet of Steam Button	Steam hole	The way of drainage	Temperature Select Indication
No steam	○	○	○		○		
Too small steam		○	○		○		
Dripping	○	○		○			
Corroding			○			○	
No heat	○	○					
Scorch		○					○
Dealing method (Contact with sales agent if can't deal with)	Connect well?	Position is correct?	Move the Steam /Dry Selector 2 - 3 times, reset to steam position, keep on Dry(关). position while storing.	The interval time of pressing Button should be 2-5 seconds.	Cleaning according to "MAIN-TENANCE."	Drainage before the iron cooling.	Select temperature accord indication or use a press cloth.

AFTER SERVICE

For after service, if there are any questions, please inquiry to shop or telephone 800-810-0781

① Warranty card (append)	Get the warranty card from shop when purchases this product. Read completely and store carefully, confirm the warranty card have been recorded [purchased date, name of the shop etc.].
② Require repairing	Contact with service agent if can't deal according to above table.
Warranty period	According to the warranty card, provide the service agent with the electric iron and warranty card and invoice.
Exceed Warranty period	Repair by service agent, it will be charged according to regulations.

中国印刷 发行: 2010年6月 i82005-5N92B

© 2010 松下·万宝(广州)电熨斗有限公司版权所有, 未经许可不得复制和散发, 否则违法必究。
© 2010 Panasonic Wanbao Home Appliances Electric Iron (Guangzhou) Co., Ltd. All Rights Reserved.