

尺寸：140\*210mm

# anko

## Instruction Manual

Keycode:43300273/43300259/43300297

 
Projection Lamp

### Production Specification


USB Input Power: DC 5V 1A

Remote control: 2x1.5V AAA batteries (not included)

### Accessories :

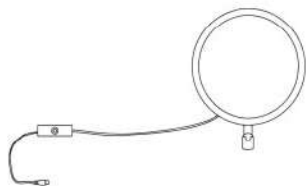


Projection lamp

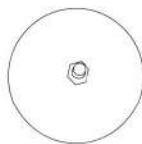 

Base



 Rob



Remote control


### Instruction of Using:

 1. Connect the USB cable to a USB power supply (not included) with output voltage DC5V 1A and then turn on the power on/off switch.
2. Put 2\*1.5V AAA batteries on the remote control. Press the button "ON" to turn the light on, then select the light color you like.
3. You can adjust the angle of the light by turning the top steel ball.
4. Put the projection light on a surface, and then adjust the light to a proper position and project it onto the wall. It is recommended to place the lamp 0.5 meters away from the wall for the best projection effect.

### Remote control:

Please note: Please make sure the switch on the cable is "on" before use, then start to use remote control to select light mode.

When operating, aim the remote control at the infrared receiver on the light-emitting surface of the product and make sure that there are no interfering obstacles between the remote control and controller.

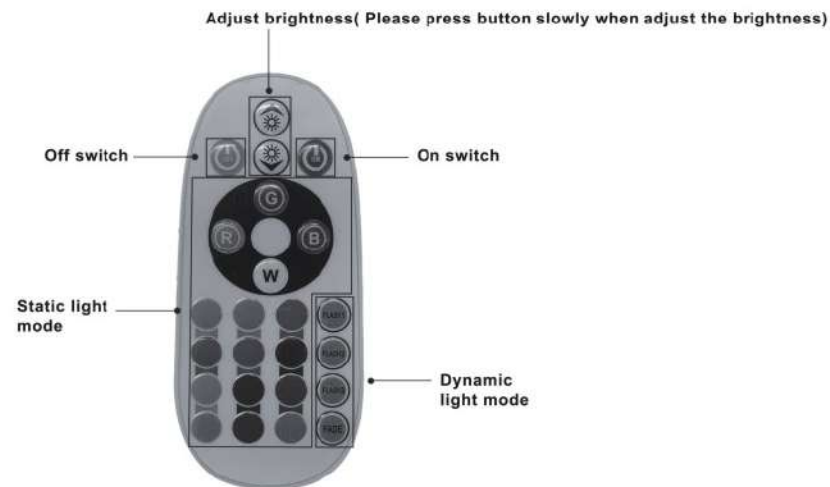

### Battery Installation (For Remote Control):

This item requires 2x1.5VAAA batteries (Not included).

Battery installation by an adult is required.

### BATTERY WARNING:

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- The supply terminals are not to be short-circuited.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.
- Dispose of batteries responsibly.
- Do not dispose of in fire.