 
 
 
 
 




Original	Replacement	Original	Replacement
 On / Standby	 Power	 SP A/B	 Yellow / YouTube / Repeat
 Display	 Display / Media	 Up	 Up
 DVD	 Shift + 2	 Menu	 Menu / Home
 VCR / DVR	 D.Menu / Top	 Left	 Left
 CBL / SAT	 AV / Input / RDS	 Enter	 OK
 GAME / TV	 Shift + 1	 Right	 Right
 MULTI CH	 TV/Radio /	 Setup	 Setup / OPT /
 AUX	 Shift + 7	 Down	 Down
 TAPE	 Shift + 5	 Return	 Back / Return
 TUNER	 Shift + 6	 Audio	 Audio / Lang I/II
 CD	 Shift + 3	 I<<	 I<< / Preset-
 PHONO	 Shift + Audio / Lang I/II	 >>I	 >>I / Preset+
 Muting	 Mute / Dimmer	 <<	 << / Tune-
 CH/Disc+ /	 CH+ / Page+	 Play	 Play / Slow
 Vol+	 Vol+	 >>	 >> / Tune+
 CH/Disc- / Album-	 CH- / Page-	 Pause / Play Rev.	 Pause / Step / Freeze
 Vol-	 Vol-	 Stop	 Stop / Hold



