## Strona główna » Hisense » Hisense HS3100 3.1CH Soundbar z bezprzewodowym subwooferem Instrukcja obsługi

# Hisense

Instrukcja obsługi soundbara HS3100 3.1CH z bezprzewodowym subwooferem



Soundbar 3.1CH z bezprzewodowym subwooferem Model: HS3100

#### zawartość

- 1 HS3100 3.1-kanałowy soundbar z bezprzewodowym subwooferem
- 2 Ważna instrukcja bezpieczeństwa
- 3 Co jest w pudełku
- 4 Identyfikacja części
- 5 Przygotowania
- 6 Umiejscowienie i montaż
- 7 połączeń
- 8. Połącz z subwooferem
- 9 Podstawowa obsługa
- 10 Obsługa AUX / OPTICAL / HDMI ARC
- 11 Obsługa USB

- 12 Obsługa Bluetooth®
- 13 Menu konfiguracji
- 14 Rozwiązywanie problemów
- 15 Specyfikacje
- 16 Znaki towarowe
- 17 Dokumenty/zasoby
  - 17.1 Odniesienia

## Soundbar HS3100 3.1CH z bezprzewodowym subwooferem



Przed rozpoczęciem korzystania z soundbara prosimy o dokładne przeczytanie niniejszej instrukcji i zachowanie jej na przyszłość.

## Ważna instrukcja bezpieczeństwa



Symbol błyskawicy z grotem strzałki w trójkącie równobocznym ma na celu ostrzeżenie użytkownika o obecności nieizolowanego "niebezpiecznego napięcia" wewnątrz obudowy produktu, które może być na tyle silne, aby stanowić ryzyko porażenia prądem elektrycznym osób.

△Wykrzyknik w trójkącie równobocznym ma na celu ostrzeżenie użytkownika o obecności ważnych instrukcji dotyczących obsługi i konserwacji (serwisowania) w dokumentacji dołączonej do urządzenia.

#### 1.1 Bezpieczeństwo

 Przeczytaj niniejszą instrukcję – Przed rozpoczęciem korzystania z produktu należy przeczytać wszystkie instrukcje dotyczące bezpieczeństwa i obsługi.

- Zachowaj tę instrukcję Instrukcję bezpieczeństwa i obsługi należy zachować do wykorzystania w przyszłości.
- 3. Należy przestrzegać wszystkich ostrzeżeń Należy przestrzegać wszystkich ostrzeżeń umieszczonych na urządzeniu oraz w instrukcji obsługi.
- 4. Postępuj zgodnie ze wszystkimi instrukcjami Należy przestrzegać wszystkich instrukcji obsługi i użytkowania.
- 5. Nie używaj tego urządzenia w pobliżu wody Urządzenia nie należy używać w pobliżu wody lub wilgoci na przykład w wilgotnej piwnicy lub w pobliżu basenu itp.
- 6. Czyścić wyłącznie suchą szmatką.
- 7. Nie blokuj żadnych otworów wentylacyjnych. Zainstaluj zgodnie z instrukcjami producenta.
- 8. Nie należy instalować urządzenia w pobliżu źródeł ciepła, takich jak kaloryfery, grzejniki, piece i inne urządzenia (w tym wzmacniacze) wytwarzające ciepło.
- 9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- 13. Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17. Minimum distance around the apparatus for sufficient ventilation is 5cm.

- 18. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 19. No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 20. Batteries should be recycled or disposed of as per state and local guidelines.
- 21. The use of apparatus in moderate climates.

#### 1.2 Caution

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device mustremain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalenttype.

## 1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

Do not place this unit close to strong magnetic fields.

Do not place this unit on the amplifier or receiver.

If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.

- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

## **⚠** Battery usage CAUTION

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:


- Install all batteries correctly, + and as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon- Zinc) or rechargeable (Ni-Cd, Ni- MH, etc.)batteries.
   Remove batteries when the unit is not used for a long time.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**C** € We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations 2017.

#### What's in the Box

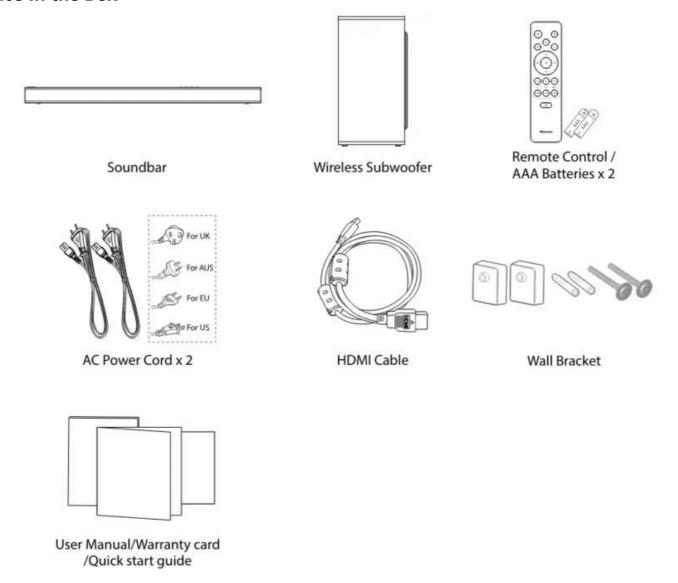


- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

## **Identifying the Parts**

## 3.1 Soundbar

Ġ.

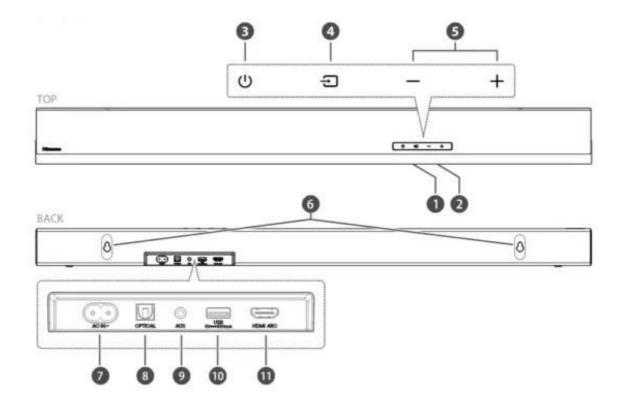

#### 1. Remote Control Sensor

Receive signal from the remote control.

2. Display Window

Show the current status.

## 3. **O(ON/OFF)** button

Switch the soundbar between ON and Standby mode.

4. **SOURCE)** button

Select the play function.

5. (+/- **VOL)** buttons

Increase/decrease the volume level.

- 6. Wall bracket screws
- 7. AC~ Socket

Use to connect the power cable.

- 8. **OPTICAL** Socket
- O Connect to an optical audio output on the T V.
  - 9. AUX Socket


Connect to an external audio device.

10. USB Socket

Insert the USB device to play music.

#### 11. HDMI ARC Socket

Connect to a TV via HDMI cable.

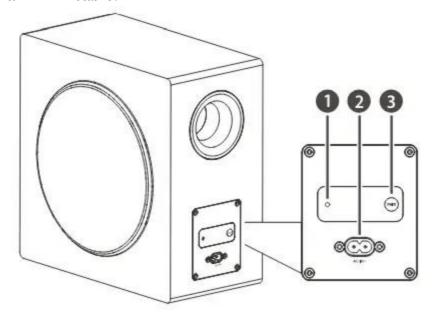

#### 3.2 Wireless Subwoofer

### 1. Pairing Indicator

Light stops blinking once the subwoofer is paired with the soundbar. 2.

#### **AC IN~ Socket**

Use to connect the power cable.

#### 3. PAIR button

Press activate the pairing function between the soundbar and subwoofer.

## 3.3 Remote Control


- 1. U Switch the soundbar between ON and STANDBY mode.
- 2.  ${\bf SURR}$  Adjust the surround ON/OFF.
- 3. **VOL+/VOL** Increase/decrease the volume level.
- $_{7}$   $^{*}$  5.  $^{\bowtie}$  (MUTE) Mute or resume the sound.

button Select the play function.

Select the Bluetooth mode.

- 8. **EQ** Select a preset sound affect.
- 9. ₩/₩ Skip to previous/next track in Bluetooth/USB mode.

- 10. Play/pause/resume playback in Bluetooth/USB mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 11. **DIMMER** +/-Adjust LED brightness.
- 12. TREBLE+/- Adjust treble level.

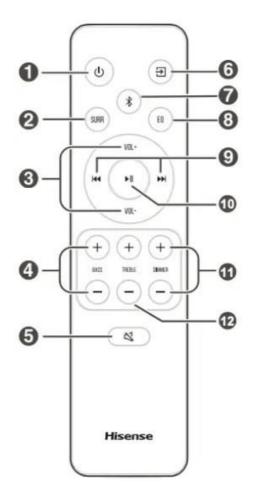

## **Preparations**


## **4.1 Prepare the Remote Control**

The provided Remote Control allows the soundbar to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the soundbar and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the soundbar, it may operate incorrectly. Conversely, the other products may operate incorrectly.

#### 4.2 Replace the Remote Control Battery

- 1. Press and slide the back cover to open the battery compartment of the remote control.
- 2. Insert two **AAA** size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3. Close the battery compartment cover.

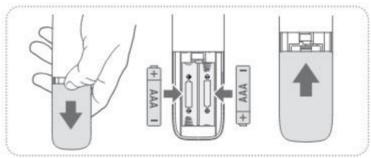

#### **Precautions Concerning Batteries**

- Be sure to insert the batteries with correct positive "⊕" and negative "⊖" polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as
  corrosion or battery leakage may occur and result in physical injury, and/or property damage,
  and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
  - Never recharge a battery unless it is confirmed to be a rechargeable type.


### **Placement and Mounting**

#### 5.1 Placement

- A If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the soundbar on the wall directly below the TV screen.

## 5.2 Wall Mounting (if using option-B)


- Installation must be carried out by qualified personnel only. Incorrect assembly can result insevere personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the soundbar and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

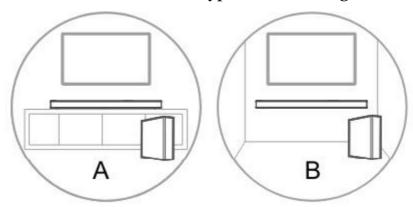

#### WARNING

**O** 

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.
- 1. Drill 2 parallel holes ( $\emptyset$  5.5-6 mm each according to wall type) in the wall. The distance between
  - the holes should be 670 mm.
- 2. Insert the supplied wall anchors into 2 screw holes on the wall. Insert the supplied wall bracket screws through the wall brackets into the wall anchors. Fix and tighten the screws on the wall.
- 3. Hang the unit on the wall mount brackets.

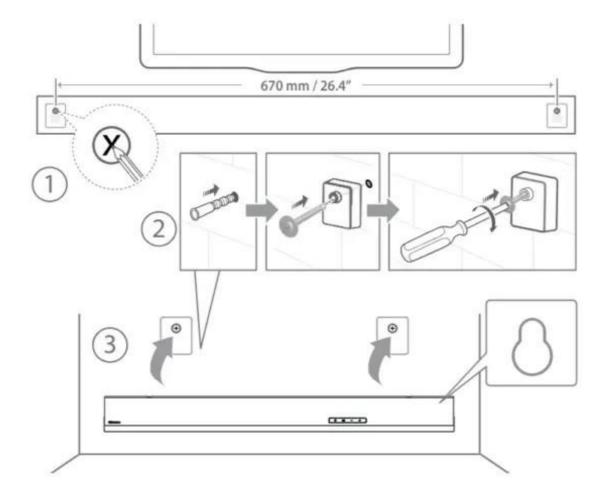


#### **Connections**

#### 6.1 Use the HDMI ARC Socket

The ARC (Audio Return Channel) function allows you to send audio from your ARC- compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL + / - and MUTE) of the soundbar.

• Connect the **HDMI** cable from soundbar **HDMI ARC** socket to the HDMI ARC socket on your ARC compliant TV. Then press the remote control to select **HDMI ARC**.

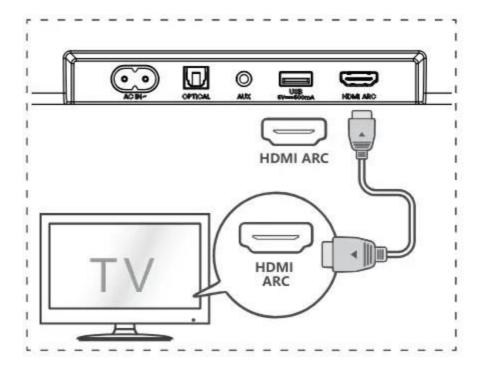


## Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.

#### 6.2 Use the Roku TV

ullet If you have a Roku TV<sup>TM</sup>, simply plug in the HDMI cable to the ARC ports and follow the Roku TV Ready<sup>TM</sup> on-screen instructions.




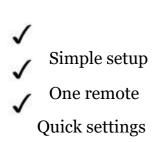

0

## **6.3** Use the Hisense Ez Play Function

For Hisense Ez Play, when the Soundbar connects with a Hisense TV via HDMI ARC, the will be a Soundbar Setting menu on the TV, and you can control this menu via you TV remote to control most of the Soundbar features.

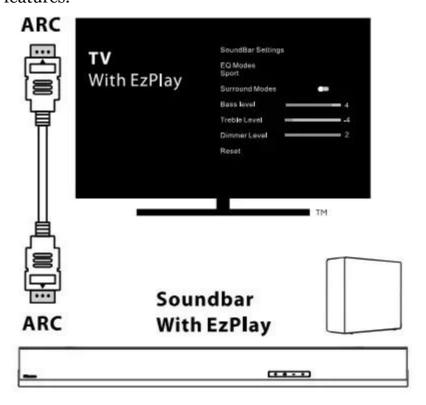

TV menu example (different models may have diferent menus): **Setting-sound-Soundbar Setting.** 

SoundBar Settings	5
EQ Modes Sport	
Surround Modes	•
Bass level	4
Treble Level	-4
Dimmer Level	2
Reset	


### **Note:**

- $\bullet\,$  This function is available only when both Soundbar and TV support Hisense Espley. This
- function requires Soundbar and TV connected via HDMI ARC, and the CEC of the TV must be trend ON.

• If Everytime setting right, for the first time connect, there would be a tip on the TV screen to guide you find the Soundbar setting menu.

### **6.4** Use the OPTICAL Socket

– Use the OPTICAL cable to connect the TV's OPTICAL OUT socket and the OPTICAL socket on the soundbar.

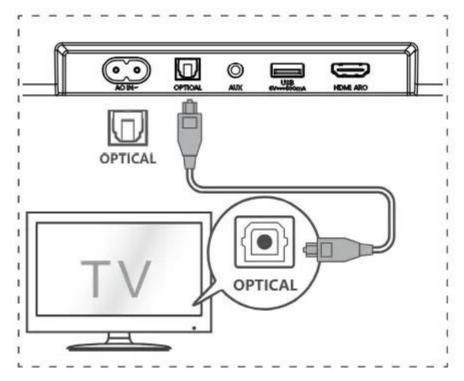


#### Tip:

The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL input.

## **6.5** Use the AUX Socket

A. Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphonesocket to the **AUX** socket on the soundbar.

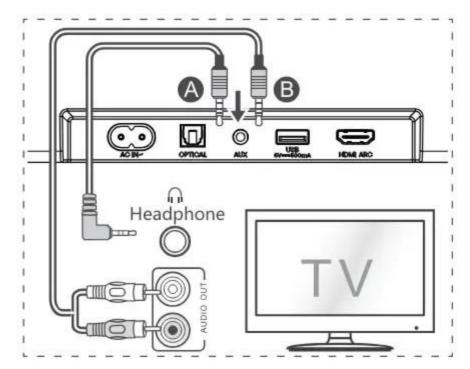

B. Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the soundbar.

## 6.6 Connect Power Risk of product damage!


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the soundbar.
- Before connecting the AC power cord, ensure you have completed all other connections.

#### Soundbar

Connect the mains cable to the AC~ socket of the soundbar and then into a mains socket.

#### Subwoofer

Connect the mains cable to the AC~ socket of the subwoofer and then into a mains socket.

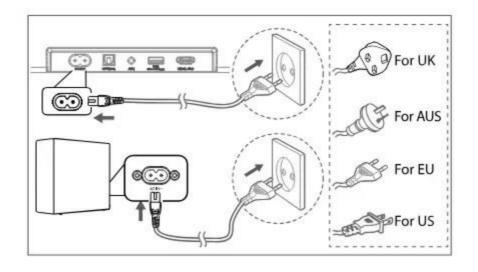

\* Power cord quantity and plug very by regions.

## Pair up with the Subwoofer

## 7.1 Automatic pairing

The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

• Determine the status based on the wireless subwoofer indicator.

LED State	Status
Fast blink	Subwoofer in pairing mode
Constant on	Connected / Pairing successful
Slow blink	Connection / Pairing Failed

#### **NOTE:**

0

- Do not press the PAIR button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the soundbar manually.

## 7.2 Manual pairing

- 1. Ensure that all the cables are well connected and the soundbar is in Standby mode.
- 2. Press and hold the PAIR button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.

- 3. Press the button on the soundbar or on the remote control to switch the soundbar on.
- 4. Press and hold the button on the <sup>→</sup>Soundbar or on the remote control for a few seconds.
- 5. After the wireless connection succeeded, the Pair Indicator will light up.
- 6. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 4 minutes. Repeat step  $1 \sim 4$ .

#### **NOTE:**

- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.
- The subwoofer should be within 6m (19.7 feet) of the soundbar in an open area. If the
- soundbar is not connected with the subwoofer and it is in On mode, the POWER
   Indicator will flash. Follow step 1 ~ 4 above to pair the subwoofer to the soundbar.

## **Basic Operation**

#### 8.1 Standby/ON

It will automatically turn on when the power cord is connected.

- Press the button to switch the soundbar STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the soundbar OFF completely.

## 8.2 Auto-Standby / Auto-Wake Feature

[Auto-Standby] Your soundbar has been programmed to enter STANDBY mode automatically when no audio is detected for 15 minutes. For example, this would happen when pausing playback, or should the soundbar be left on accidentally.

[Auto-Wake] If a TV or an external device is connected (AUX / OPTICAL / HDMI ARC mode), the unit will switch on automatically when the TV or the external device is switched on. To disable this feature, please follow the steps below:

- 1. During ON mode, press and hold the ▶ button for 3 seconds to open the menu.
  - The unit's display will scroll "MENU".
- 2. Press the button 6 times in succession: the display shows: Auto Wake **[ON / OFF].** or Press the button 5 times in succession: the display shows: Auto Standby [ON / OFF].
- 3. Select the content with **VOL**+ /− buttons on the remote control, and then press the button to confirm your selection and exit the settings.
  - Repeating these steps will toggle the feature "ON" and "OFF".

### 8.3 Select Modes

Press the (SOURCE) button repeatedly on the soundbar or on the remote control to select the AUX, OPTICAL, HDMI ARC and USB mode. The selected mode will show on the display.

• The selected mode will show on the display.

Display	Mode
ARC	HDMI ARC
OPT	OPTICAL
BT IN NO BT	Bluetooth Connected Not Connected
AUX	AUX
USI NOUSI	USB No USB connected

### 8.4 Adjust the Volume

- $^{ullet}$  Press the **VOL+ / -** buttons on the soundbar or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the (MUTE) button on the remote control. Press the (MUTE) button again or press the VOL + button to resume normal listening.

## 8.5 Turn the Surround Sound ON/OFF

- Press the SURR button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound. 8.6 Adjust the Bass/Treble
- $^{ullet}$  Press the **BASS** + / buttons on the remote control to adjust bass level.
- Press the **TREBLE+/ buttons** on the remote control to adjust treble level.

## 8.7 Select Equalizer (EQ) Effect

While playing, press the EQ button on the remote control to select desired preset equalizers: MOVIE, MUSIC, GAME, NEWS, SPORT, NIGHT.

## 8.8 Adjust the Brightness

• Press the DIMMER+ / - buttons on the remote control to select brightness level.

#### 8.9 Factory reset

Reset device to default setting.

• Switch the soundbar on the optical mode, press and hold the button on the soundbar, the soundbar will enter factory reset mode and turn to standby state.

MODE	DEFAULT
SOURCE	ARC
Volume	30
Surround	Off
Dimmer	MAX
Bass	0
Treble	0
EQ	MOVIE
Auto Wake	OFF
Auto Standby	ON (Except the United States)


## **AUX / OPTICAL / HDMI ARC Operation**

- 1. Ensure that the soundbar is connected to the TV or audio device.
- 2. Press the (SOURCE) button repeatedly on the soundbar or on the remote control to select the **AUX**, **OPTICAL**, **HDMI ARC** mode. The selected mode will show on the display.
- 3. Operate your audio device directly for playback features.
- 4. Press the VOL +/ buttons to adjust the volume to your desired level.

**Tip:** The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM or Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL input.

## **USB Operation**

1. Insert the USB device.

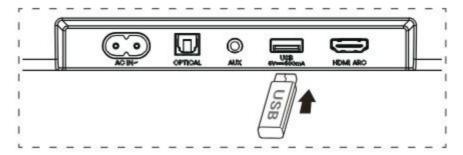

- 2. Press the  $\bigcirc$  (SOURCE) button repeatedly on the soundbar or on the remote control to select the USB mode.
- 3. During playback:

Start, pause or resume play

Skip to the previous or next track

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play WAV / WMA / MP3 / FLAC.
- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.

## **Bluetooth® Operation**

Through Bluetooth, connect the Soundbar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your Soundbar speakers.

## First time pairing

- 1. Press the → (SOURCE) button on the soundbar or \$\\$ button on the remote control to select Bluetooth® mode.
  - The display will show NO BT.
- 2. Activate your Bluetooth device and select the search mode.
- 3. Select "**Hisense HS3100**" in the pairing list. After audio prompt, the system is successfully connected and and the display will show **BT IN.**

• If you want to connect your soundbar with another Bluetooth device, press and hold the \*button on the remote control to disconnect the currently connected Bluetooth device. Follow step 2-3 to pair your Bluetooth device.

## To disconnect the Bluetooth function, you can:

- Switch to another function on the unit.
- Disable the function from your Bluetooth device.
- Press and hold the ≯ button on the remote control.

#### Listen to music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video

Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.

- 1. Pair your device with the player.
- 2. Play music via your device (if it supports A2DP).
- 3. Use supplied remote control to control play (if it supports AVRCP).

► Start, pause or resume play

► Skip to the previous or next track

Tips:

- The operational range between the Sound Bar and the device is approximately 8 metres.
- Before connecting a Bluetooth® device to the Sound Bar, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the Sound Bar can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

## 🤄 Setup Menu

- 1. During ON mode, press and hold the ▶∥button for 3 seconds to open the menu.
- 2. Select the content with the ₩/▶ buttons.
- 3. Change the initial values for each of the settings with VOL + / buttons.
- 4. Press the ▶ button to confirm your selection and exit the settings.

• If no button is pressed within 10 seconds, the system will automatically exit the menu.

Display ₩/₩	Description VOL+/ —
MOVIE	Select Equalizer (EQ) effect (MOVIE, MUSIC, GAME, NEWS, SPORT, NIGHT)
SUROFF	Switch Surround Sound ON / OFF
BAS O	Adjust the Bass Level
TRE O	Adjust the Treble Level
EMIL	Adjust the Brightness DIM 0/ DIM 1 / DIM 2 / DIM 3
AUTO WAKE OFF	Switch Auto Wake ON / OFF
AUTO STANJBY ON	Switch Auto Standby ON / OFF
BASSBOOST ON	Switch: Bass Boost ON / OFF

## Troubleshooting

0

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this soundbar, check the following points before requesting service.

- Ensure that the AC cord of the apparatus is properly connected .No power
  - Ensure that there is power at the AC outlet.
- Press (standby) button to turn the soundbar on.

	Before you press any playback control button, first select the correct
	source.
Remote control	
does not	• Reduce the distance between the remote control and the soundbar.
	• Insert the battery with its polarities (+/ - ) aligned as indicated.
work	
	Replace the battery.
	Aim the remote control directly at the sensor on the front of the soundbar
	Make sure that the soundbar is not muted. Press MUTE or+ (VOL) button to resume normal listening.
	• Press Obutton on the soundbar or on the remote control to switch the soundbar to standby mode. Then press the button again to switch the soundb ar on.
	Unplug both the soundbar and the subwoofer from the mains socket, thenplug them again. Switch on the soundbar.
	• Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDM
No sound	
	I, OPTICAL) connection.
	• The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer t he better).
	<ul> <li>The soundbar may have lost connection with the subwoofer. Repair the units by following the steps on the section "Pair up with the Subwoofer".</li> <li>The soundbar may not be able to decode all digital audio formats from theinput source.</li> </ul>
TV has display p	
roblem • Som	to the instruction manual of your TV. m HDMI source.
I can't find the B	

• Ensure the Bluetooth function is activated on your Bluetooth device.

name of this so

• Ensure you have paired the soundbar with your Bluetooth device.

undbar on

• The soundbar has a Bluetooth® function that can receive a signal within 8 my Bluetooth d metres. Keep a distance within 8 metres between the soundbar and your Blu evice for etooth® device.

Bluetooth pairin

g

This is a 15 mins	
power	
off function, one	When the unit's external input signal level is too low, the soundbar will be t
of the ERPII sta	urned off automatically in 15 minutes. Please increase the volume level of y
ndard requirem	our external device.
ent for saving p	
ower	

## **Specifications**

	T	
Power Supply	100-240V~ 50/60Hz	
Power Consump tion	50 W < 0.5 W (Standby)	
USB	5V = 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , WAV / WMA / MP3 / FLAC.	
Dimension (Wx HxD)	902 x 62.3 x 91 mm / 35.5" x 2.4" x 3.6"	
Net weight	1.6 kg / 3.5 lbs	
Audio input sen sitivity	500mV	
Frequency Resp onse	120Hz – 20KHz	
Operating Temp erature	0°C – 45°C	
Brand Hisense		Hisense
Model	HS3100	
Coundban		I

#### Soundbar

#### Subwoofer

Power Supply	100-240V~ 50/60Hz
Power Consump tion	40 W < 0.5 W (Standby)
Dimension (Wx HxD)	161 x 303 x 304.5 mm / 6.3" x 11.9" x 12"
Net weight	3.6 kg / 7.9 lbs
Frequency Resp onse	40Hz – 150Hz

#### Amplifier (Max audio power)

Total	480 W
Soundbar	300 W
Subwoofer	180 W

#### **Remote Control**

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

• Design and specifications are subject to change without notice.

#### **Trademarks**



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by The HISENSE International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## **■■Dolby** Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



For DTS patents, see <a href="http://patents.dts.com">http://patents.dts.com</a>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, Digital Surround, Virtual:X, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, United Kingdom and Mexico. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email **rokutvready@roku.com**.

# Z CE CH

△ WARNING: This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov. FCC INFORMATION (for US customers) NOTE:

• This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

- determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver sconnected

- Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may causeundesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

## IC Notice: CAN ICES-3(B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

#### Warning:

- This equipment should be installed and operated with minimum distance 20cm between theradiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible forcompliance could void the user's authority to operate the equipment."



#### **Documents / Resources**



Hisense HS3100 3.1CH Soundbar with Wireless Subwoofer [pdf] User Manu al

HS3100 3.1CH Soundbar with Wireless Subwoofer, HS3100, 3.1CH Soundbar with Wireless Subwoofer, Soundbar with Wireless Subwoofer, Wireless Subwoofer, Subwoofer



<u>Hisense HS3100 3.1CH Soundbar with Wireless Subwoofer</u> [pdf] User Manu al

HS3100 3.1CH Soundbar with Wireless Subwoofer, HS3100, 3.1CH Soundbar with Wireless Subwoofer, Soundbar with Wireless Subwoofer, Wireless Subwoofer, Subwoofer

#### References

#### User Manual

#### Manuals+ | Prześlij | Głębokie wyszukiwanie | Polityka prywatności | @manuals.plus | YouTube

Ta strona internetowa jest niezależną publikacją i nie jest ani powiązana, ani popierana przez żadnego z właścicieli znaków towarowych. Znak słowny "Bluetooth®" i logo są zarejestrowanymi znakami towarowymi należącymi do Bluetooth SIG, Inc. Znak słowny "Wi-Fi®" i logo są zarejestrowanymi znakami towarowymi należącymi do Wi-Fi Alliance. Jakiekolwiek użycie tych znaków na tej stronie internetowej nie oznacza żadnego powiązania ani poparcia.

