

spare part list: GT804/GT806 Econom CL for cattle



GT367812 Spur gear



GT367200 Cutter head housing



GT367201 Rocker



GT367202 Vibratory spring blade



GT367203 Sleeve



GT367205 Regulating screw

spare part list: GT804/GT806 Econom CL for cattle



GT367207 Cylinder screw



 
GT367802 Spacer piece, left



GT367803 Spacer part, right



GT610405 Nut

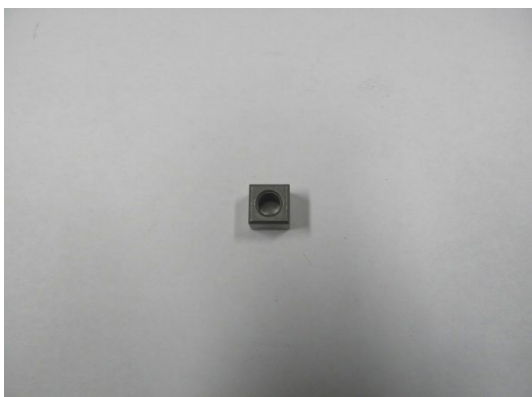


GT610304 Rocker



GT610307 Spring link

 spare part list: GT804/GT806 Econom CL for cattle

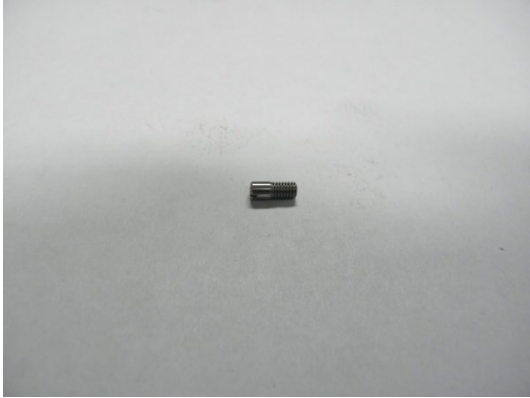

TA008295 screw shaft



TA010017 Screw M4x16



TA016336 screw M5 x 16 Tx 25



TA007765 Screw M3x8



GT801 Li-Io-batterie



GT803 Charger

spare part list: GT804/GT806 Econom CL for cattle



GT800215 PT-Screw



GT800240 Ring o engine



GT800249 switch **(before 11.17)**



GT804249 switch **(after 11.17)**



GT800895 Engine compl. packed



GT800222 Spring clip

 


GT800819 Hard case

spare part list: GT804/GT806 Econom CL for cattle



TA013894 case sticker

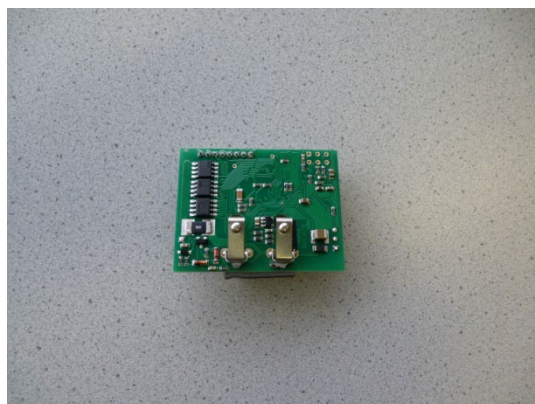

GT800850 Steuerung (**before 11.17**)
GT804850 Steuerung (**after 11.17**)



GT800801 Lower case



GT800802 Upper case



GT800804 Filter



GT604 Oil packed

spare part list: GT804/GT806 Econom CL for cattle



TA009222 Screwdriver



TA012169 Cable UK



TA012170 Cable EU



TA012168 Cable USA
Canada Japan