



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu/DVD		Menu
	Guide		Guide
	[■][■■■]		3D
	Exit/Back		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[<<]		Format
	→ ▢ ←		TV/R
	[i+] / [≡i]		Info
	Text / [≡][/≡][]		Text
	■/■/■ / [▼]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual





Original	Replacement
 << / [≡>]	 <<
 << / [≡>]	 OPT Options
 >> / Subtitle	 SUBT Subt
 >> / Subtitle	 >>
 ▲	 HOME SMART Smart
 ■ / [≡>]	 Stop
 ■<<< / [≡>]	 ZOOM Eject
 ■<<< / [≡>]	 I<<
 >>> / [⊖][≡X]	 >>I
 >>> / [⊖][≡X]	 RETURN BACK Back
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / 	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / 	 <<
 7	 7	  / 	 TV/R
 8	 8	  / Subtitle	 >>
 9	 9	  / Subtitle	 Subt
 0	 0	 	 Smart
  Menu/DVD	 TOP MENU MENU	  / 	 Stop
  Exit/Back	 CLEAR EXIT	  / 	 Eject
 Up	 Up	  / 	 I<<
 Left	 Left	  /  [X]	 >>I
 OK	 OK	  /  [X]	 Back





Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Mute	 Mute	 Play	 Play
 1	 1	 >>>	 >>>
 2	 2	 >>>	 >>>
 3	 3	 >>>	 >>>
 4	 4	 >>>	 >>>
 5	 5	 >>>	 >>>
 6	 6	 >>>	 >>>
 7	 7	 >>>	 >>>
 8	 8	 >>>	 >>>
 9	 9	 >>>	 >>>
 0	 0	 >>>	 >>>
 Source	 Source	 >>>	 >>>
 P+	 P+	 >>>	 >>>
 P-	 P-	 >>>	 >>>
 Vol-	 Vol-	 >>>	 >>>
 Vol+	 Vol+	 >>>	 >>>

