

## Wired remote control operation

### Step 1

Attach the controller to the socket on the control box.



### Step 2

Operate the controller and winch the item as desired.



## Wired & wireless remote control operation

### Wireless remote control operation

#### Battery installation

##### . Step 1

Remove the four screws from the wireless transmitter

##### Step 2

Inset new battery.

##### Step 3

Rejoin both sections ensuring alignment is correct and the four screws are tight.

## Operation

To activate your wireless remote control press and hold the ON/OFF button until the red indicator light flashes. If after 10 seconds the indicator light fails to illuminate replace the battery or use the wired remote control.

Press the button “IN”, the blue LED on and blinking red LED, the winch cable will wrap “IN”. Release the button, the winch will stop.

Press the button “OUT”, the green LED on and blinking red LED light, the winch will wrap “OUT”. Release the button, the winch will stop.

To switch off the wireless remote control press and hold the ON/OFF button until the indicator lights goes out.

The wireless remote control will automatically switch off after several minutes without use.

### FCC CAUTION: (15.19 Labeling requirements.)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### (15.21 Information to User)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

#### RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Reset learning function


If the transmitter needs to be replaced, please carry out the following steps to match the new transmitter to the receiver.

### Step 1

Press and hold “ON/OFF” button on the transmitter, don't release the button until the reset matching function is completed.

### Step 2

Press button “ON” on the control box.

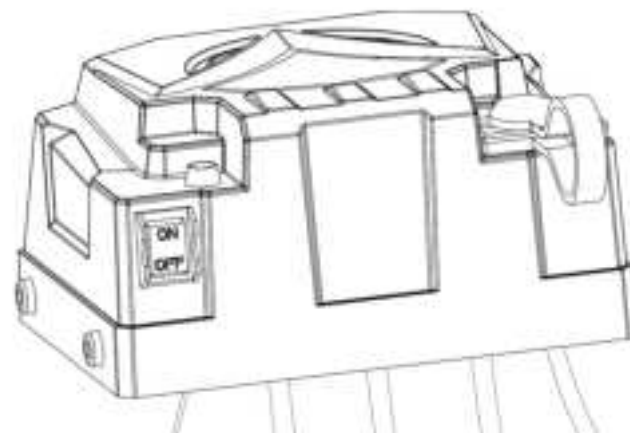

### Step 3

Release “ON/OFF” button on the transmitter, until you hear “da” from the receiver. The reset match function is now finished.