



| Original                                                                                         | Recharge                                                                                  |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
|  Power          |  Power   |
|  Input          |  AV      |
|  Digital/Analog |  Options |
|  Tv/Radio       |  TV/R    |
|  Exit           |  Exit    |
|  Ext.Box Menu   |  D. Menu |
|  1              |  1       |
|  2              |  2       |
|  3              |  3       |
|  4              |  4       |
|  5            |  5     |
|  6            |  6     |
|  7            |  7     |
|  8            |  8     |
|  9            |  9     |
|  0            |  0     |
|  [i+]/[?]     |  Info  |

| Original                                                                                        | Recharge                                                                                            |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|  [≡]         |  Text            |
|  Google Play |  Media           |
|  Netflix     |  Shift + Smart   |
|  Red         |  Red             |
|  Green       |  Green           |
|  Yellow      |  Yellow          |
|  Blue        |  Blue            |
|  Guide       |  Guide           |
|  Action Menu |  Menu            |
|  Back        |  Back            |
|  APPS      |  Shift + Media |
|  TV        |  3D            |
|  Home      |  Smart         |
|  Up        |  Up            |
|  Down      |  Down          |
|  Right     |  Right         |
|  Left      |  Left          |



