

4-Door Smart Hub
Quick Start Guide

SYS-4ENT-DVE1



What's Included

4-Door Smart Hub enclosure



Access Control Core



Standoffs



Mounting template



Bracket and push-in fasteners



Power cable



Spade lugs (optional)




4-Port Expansion Board



USB cable




Overview

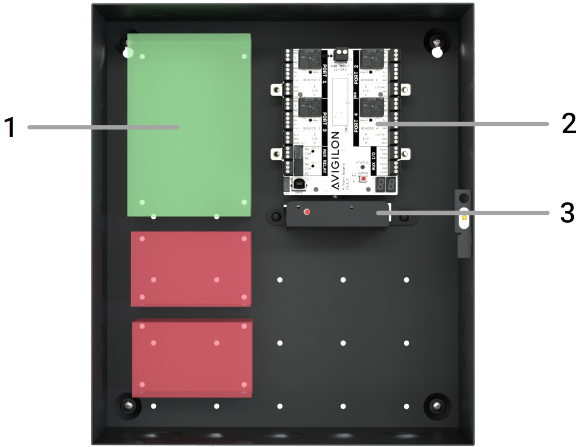


- | | |
|---|---------------------|
| 1 | Power Supply |
| 2 | Expansion Board |
| 3 | Access Control Core |

1 - Mounting

1. Use the included paper template to mark and pre-drill the location for the enclosure. Install 2 fasteners (not included) leaving the heads ¼ inch out from the wall.

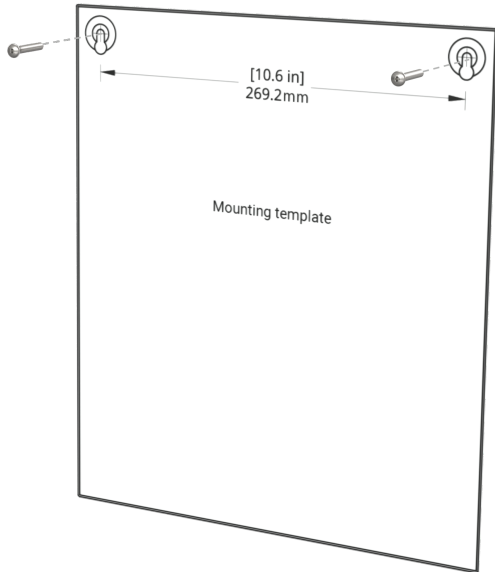


2. Hang the enclosure onto the two fasteners and tighten the fasteners to the wall. Use two additional fasteners (not included) to secure the bottom of the enclosure to the wall.

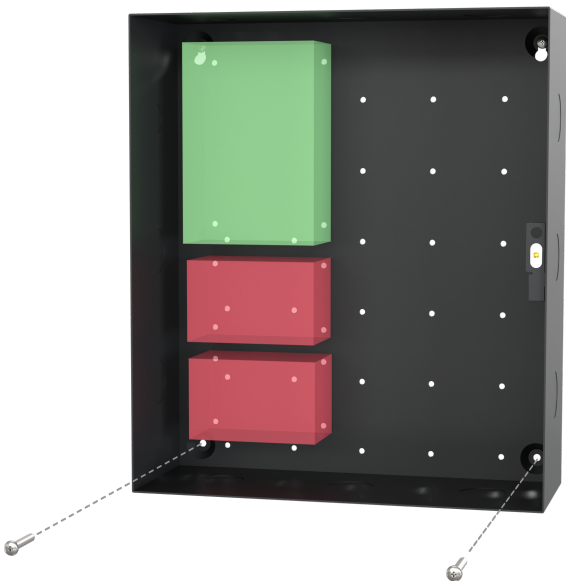


2 - Installing

1. Open the enclosure.

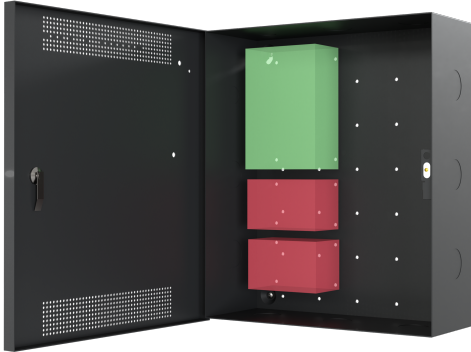

2. Install the expansion board into the enclosure using the included standoffs (quantity: 4).

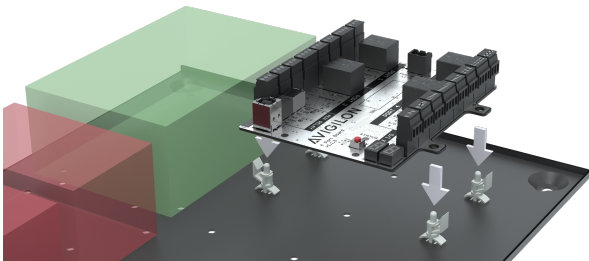


3. Install the Access Control Core below the expansion board using the included bracket.



Unscrew the retaining screw (a), slide the Access Control Core into the bracket, and then tighten (a) to the bracket.


Use the included washers (b) and fasteners (c) to secure the bracket directly to the enclosure.

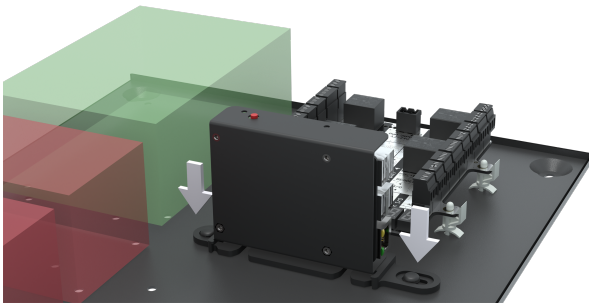


3 - Wiring

Warning: Do not apply power during wiring. Ensure the Smart Hub is unplugged until all wiring is complete.

- 1. Connect the Access Control Core to the Expansion Board with the included USB cable (see 1 below).
- 2. Connect the Access Control Core to an Ethernet cable with Internet access (see 2 below).
- 3. Connect the Access Control Core and the Expansion Board to the power supply using the included power cables (see 3 below).

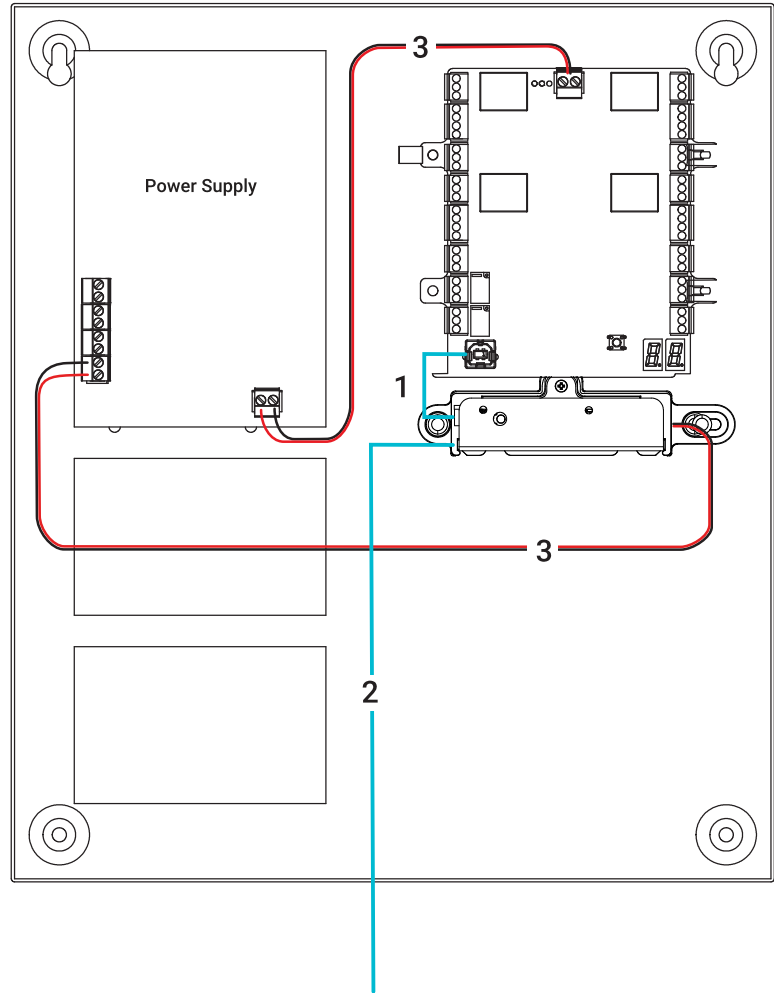


4 - Connecting Avigilon Readers or Wiegand Readers

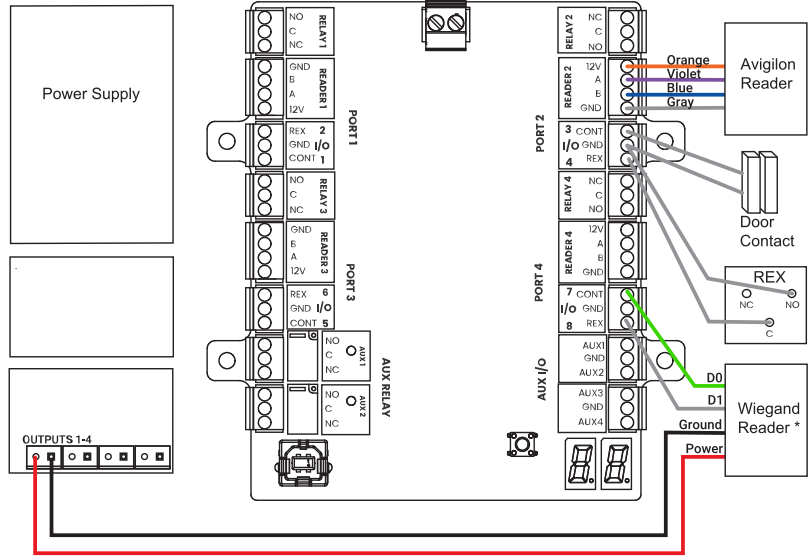

*LED and BZR connections are not supported.

5 - Connecting Locks or Strikes


Wiring a fail-safe lock or strike will unlock when power is out. Fail-secure will remain locked when power is out.

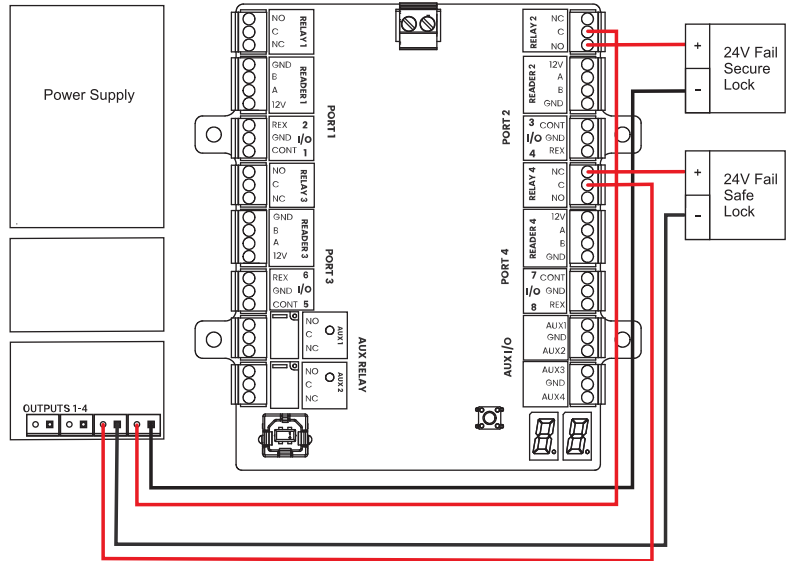

6 - Powering

Warning: Do not attempt to wire connections within the Smart Hub while power is enabled.

- 1. For installations in Europe or that require a 220VAC power source, cut the jumper on the power supply module.

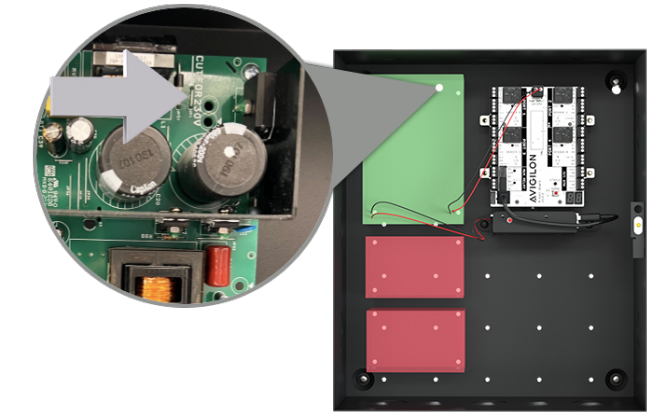

- 2. Plug the power cord into a 110VAC or 220VAC power source.



Example: North American power cord and outlet

7 - Provisioning

- 1. Before you start, you'll need an Avigilon Alta Control Center user account. To create and register for an account, visit:
control.openpath.com/login
control.eu.openpath.com/login
- 2. Follow the steps in Alta Control Center to create an organization and add devices.
- 3. To connect devices to an organization, use the Avigilon Alta Access app.



- 4. In the app, tap Devices at the bottom.
- 5. Tap Scan for Devices or + button, and follow the instructions.

App Store® and the Apple logo® are trademarks of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC.

Certifications

CE, IC, FCC, NOM, UL294

	BE	BG	CZ	DK	DE	EE	IE	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL	PT	RO	SI	SK	FI	SE	

FCC Compliance

Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.

Industry Canada Notice and Marking

This device complies with the ISSED radiation exposure limit set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme avec l'exposition aux radiations ISSED définies pour un environnement non contrôlé. Cete équipement doit être installé et utilisé à une distance minimum de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec une autre antenne ou transmetteur

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The frequency and the maximum transmitted power in EU is listed below.
Bluetooth LE (2402-2480MHz): 2 dBm

For More Information

Scan the following QR codes:

SYS-4ENT-DVE1



Video Library



QuickStartGuidesSys4EntDve1-Rev3

© 2024, Avigilon Corporation. All rights reserved. AVIGILON, the AVIGILON logos and AVIGILON ALTA are trademarks or registered trademarks of Avigilon Corporation. All other trademarks are the property of their respective owners. Unless stated explicitly and in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.