

正面


105 mm

145 mm

oneisall

Pet Grooming Clippers

Model:DTJ-001

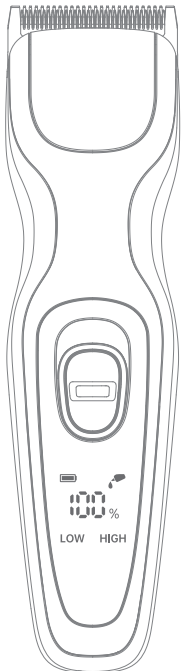


User Manual

Any problems you have, please contact us:  
support@oneisall.com

ON-D90

Part name

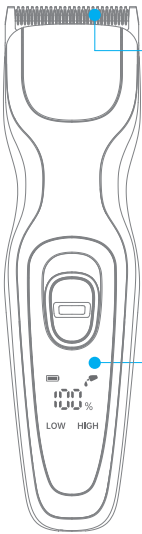

Cutter head

LED digital display


Drip oil

Power display

HIGH High :2 Speed 7000RPM

LOW Low:1 Speed 5500RPM

Accessory name

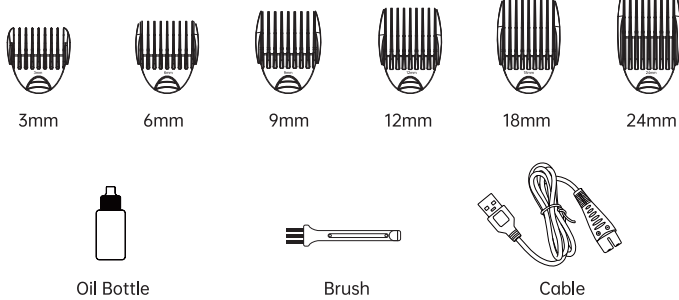

3mm

6mm

9mm

12mm

18mm

24mm

Oil Bottle


Brush

Cable

Charging/Plugging

1.Confirm that the machine is turned off, and plug the USB cable into the 5V1A adapter (desktop/mobile power supply and other power supplies with USB interface) to charge the charging indicator flashes.

2. The display screen will show the charging status. After full charge, pull out the charging cable.

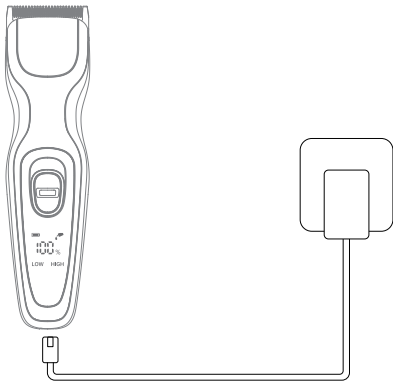

Charging instructions

1. Please charge the pet clipper for 3 hours the first time use. After 3 to 4 times of full charge and discharge, the battery capacity will reach the best state.

2. The best ambient temperature for charging is between 5°C and 40°C


NOTE

Pet hair clipper wireless use.

In the case of no power, the pet hair clipper can be connected directly to the charger for cable operation.

LED Screen Display

LOW HIGH



LOW HIGH

Battery percentage display(1%-100%)


1 Speed 5500rpm white light is on

2 Speed 7000rpm orange light is on

When orange light is on means you need dripping oil,the light will flash 15 seconds

How to use


Switch on/off

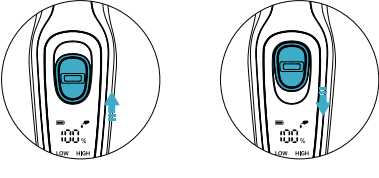

Switch on

off

Select appropriate speed

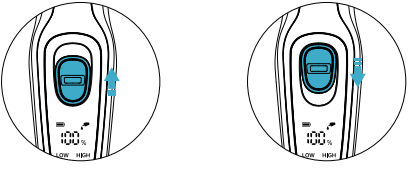


High :2 Speed 7000RPM

Low: 1 Speed 5500RPM


反面

3. Install the guide comb as your needs

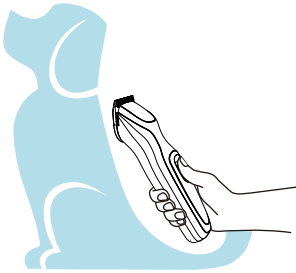

Cutter head disassemble

Trun off the switch, press the cutter head with your thumb, and push it out in the direction as pic.




NOTE

To avoid the cutter head falling , please hold the cutter head during disassembly.

Cutter head installation:

Put the cutter head connection A into the body clamp slot B


After aligning, press the cutter head back firmly until you hear a "click"

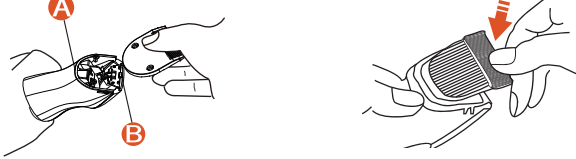

Cutter head clean:


Use a cleaning brush to remove the hair crumbs stuck on the cutter head

Clean the hair chips stuck between the upper and lower blade gaps



Cutter head maintenance:

Apply 1-2 drops of lubricant oil into the 5 positions of the cutter head as shown Fig.

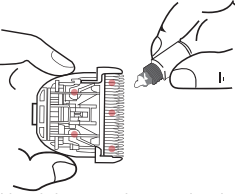

After dripping oil, press and hold the movable tool holder to move back and forth to make the lubricating oil evenly lubricate the tool head.

Product Specification

Product name	Pet clipper
Model	DTJ-001
Charger	Input: 5V 1A
Rechargeable battery	2000mAh
Battery type	Li-ion rechargeable
Charge time	3 hours
Operating time	3.5 hours

After-sales Service

Problem	Problem Causes	Solution
The product heats up during use	Internal parts of the machine have debris	Please remove the blade. Wash and oil.
		If the problem cannot be solved, please contact support@oneisall.com
Does not work	The battery is broken	Please contact the Email: support@oneisall.com
Can't charge	The charging environment temperature is too high or too low	Charging in an environment in 40°C or 50°C
	The charging cable is broken	Please contact the Email: support@oneisall.com

ON-D90

DTJ-001电推剪说明书  
尺寸:105 x 145mm  
材质:128g书写纸  
印刷:四色印刷  
折叠方式:风琴折