



Nature Walk Touch & Learn Wooden Walker™






Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION


Thank you for purchasing the **Nature Walk Touch & Learn Wooden Walker™**! Take some first steps around the house with this eco-friendly wooden walker. Discover shapes, colors, numbers, animals, and seven different musical styles.

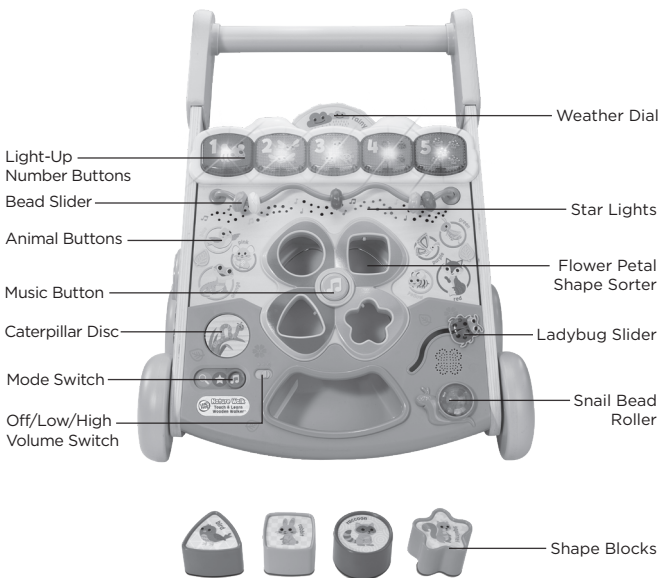

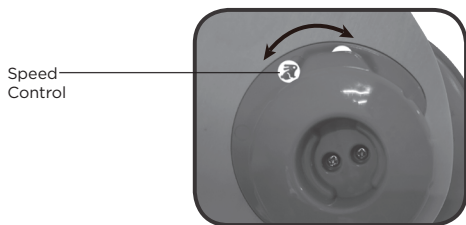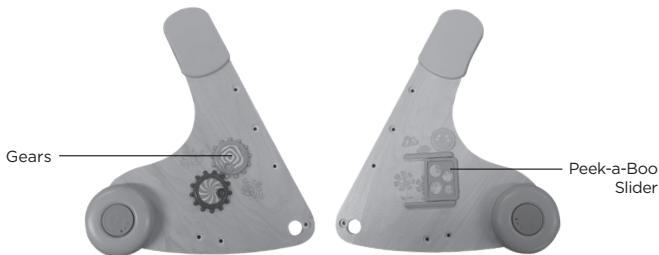

INCLUDED IN THE PACKAGE

- **Nature Walk Touch & Learn Wooden Walker™** (in 7 pieces)

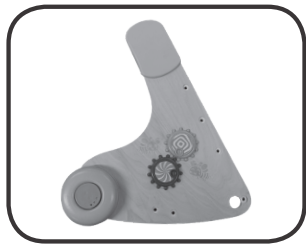


1. Gear Side Panel




2. Front Panel




3. Window Side Panel

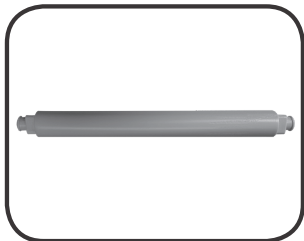

4. Handle

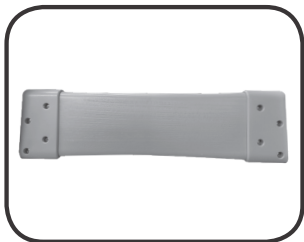


5. Supporting Bar

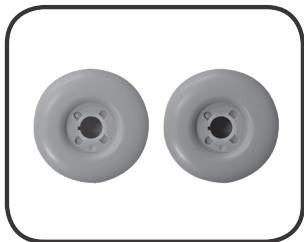


6. Front Wheels x 2

- Assembly materials

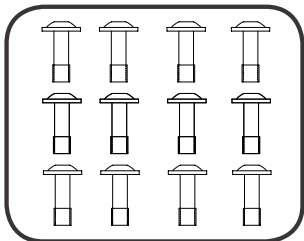

Screws x 12

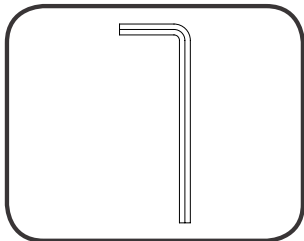

Hex wrench

- Four shape blocks



- Instruction Manual

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

NOTE:

Please ask us about the availability of FSC Products.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :


Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

NOTE:


Merci de nous consulter pour connaître la disponibilité des produits FSC.

ASSEMBLY Instructions:


1. Attach front panel to gear side panel with 4 screws. Use the hex wrench to turn 4-5 turns to tighten the screws.

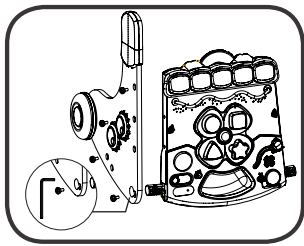


2. Attach handle with a one-time snap.

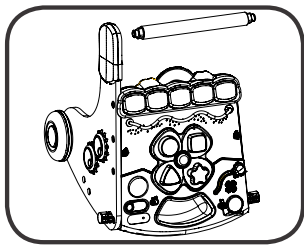


3. Attach supporting bar to side panel at base with 2 screws.

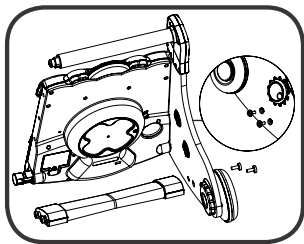


4. Attach side panel with sliding window to front panel and supporting bar with 6 screws.

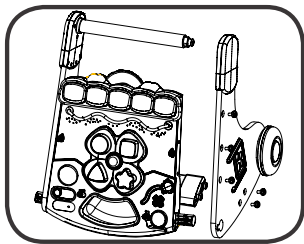

5. Attach front wheels with a one-time snap.

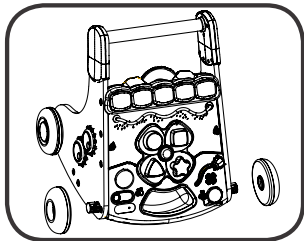


A hex wrench given in this package is not a toy. Please retain this tool for future use. Please store it where the child cannot access it.

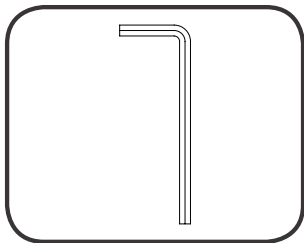

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

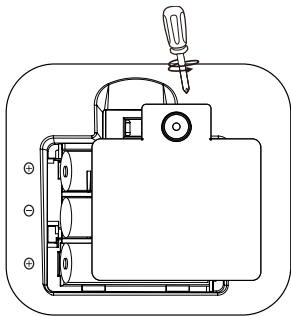

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.



CAUTION:

Adult assembly required. This product contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.



ATTENTION :

Ce jouet doit être assemblé par un adulte ! Cet emballage contient de petits éléments. Pour la sécurité de votre enfant, ne pas lui confier le jouet s'il n'est pas complètement assemblé.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES


1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the Low  or High  position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off**  position.



2. Speed Control

Speed Control allows for 2 Ways to Play. Move the setting to  while seated, playing with Shape Blocks, Animal Buttons, Light-Up Number Buttons and Fine Motor Manipulatives. Change the setting to  to practice walking.

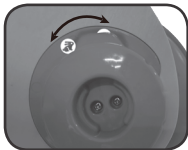

3. Mode Switch

Slide the **Mode Switch** to choose Explore, Learn or Music Mode.



4. Light-Up Number Buttons

Press the five colorful **Light-Up Number Buttons** to learn about numbers and counting objects in nature.



5. Animal Buttons

Press one of the seven colorful **Animal Buttons** to learn animal names, colors and sounds.



6. Flower Petal Shape Blocks

Pop the four **Shape Blocks** into the **Flower Petal Shape Sorter** to practice hand-eye coordination while learning about colors and shapes.





7. Music Button


Press the **Music Button** to hear fun learning songs and melodies.



8. Fine Motor Manipulatives


Flip the caterpillar disc to reveal a butterfly, slide the ladybug, turn the gears, slide the beads, spin the snail bead roller, or play with the peek-a-boo slider.

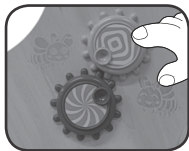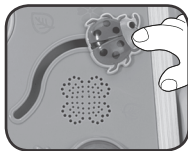

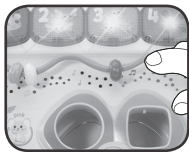


9. Weather Dial

Turn the **Weather Dial** to explore sunny, rainy, and snowy weather and activities.

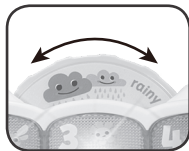

10. Star Lights

Watch the **Star Lights** perform a colorful starry light show in time with the music.

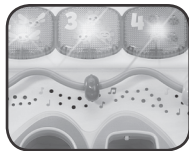

Lyrics

Nature Walk Song

Walking, we're talking,
About colors in nature,
A blue bird, a red fox,
A green grasshopper,
I see a purple butterfly,
1, 2, 3, 4, 5!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6196
Product Name:	Nature Walk Touch & Learn Wooden Walker™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500 Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

A subsidiary of VTech Holdings Limited.
© 2024 LeapFrog Enterprises, Inc.
All rights reserved.
IM-619600-000
Version:1