

OPERATING INSTRUCTIONS

⚠️

WARNING



Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

⚠️

WARNING



Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from dryer.

Do not dry anything that has ever had anything flammable on it (even after washing).

 
Failure to follow these instructions can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

STEP 1. CLEAN LINT SCREEN




STEP 2. LOAD CLOTHES

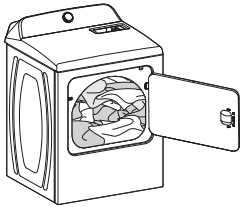

STEP 3. PRESS POWER BUTTON



 STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

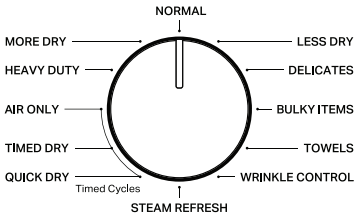

STEP 5. ADJUST CYCLE SETTINGS AND OPTIONS, IF DESIRED

SenseWetCoolDone

■ High■ 90

■ Med■ 60

■ Low■ 30

■ Ex Low■ 15 Min

🔊

■ Static Reduce

■ Wrinkle Shield



STEP 6. PRESS, HOLD, AND RELEASE START BUTTON



 
Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

*Not all cycles, settings or options are available with all models.

QUICK START GUIDE
WHIRLPOOL® DRYER

CONTROL PANEL AND FEATURES

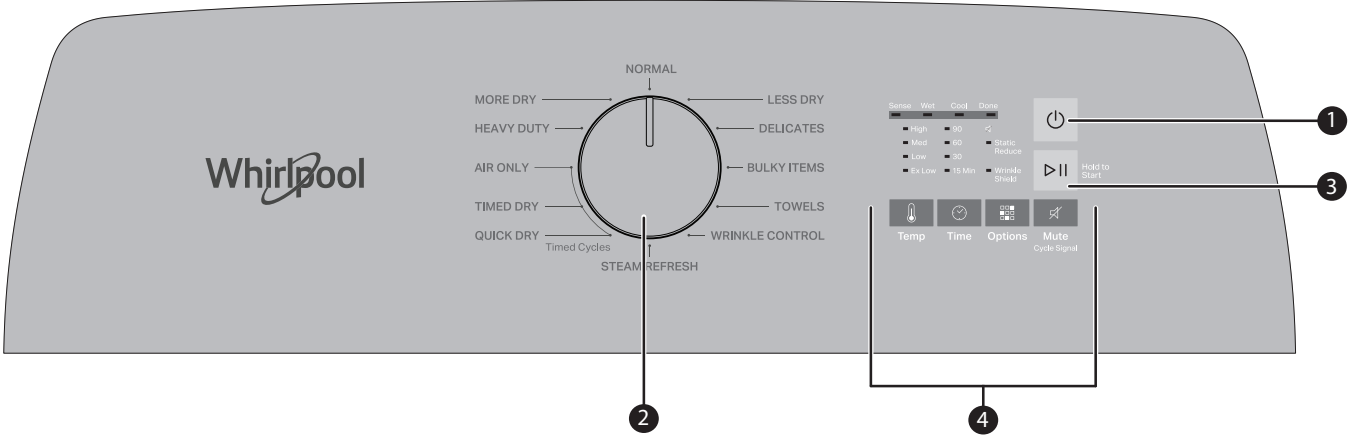

*Not all features, cycles, and options are available on all models. Appearance may vary.

1 POWER

Press to turn on/off or to stop/cancel a cycle.

2 CYCLE KNOB

Turn knob to select desired cycle.

NOTE: Your dryer comes with two types of cycles - Sensor drying cycles and Timed drying cycles.

SENSOR DRYING CYCLES:

Use Sensor Cycles for better fabric care and energy savings. The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. Note that you cannot adjust the time with these cycles.

TIMED DRYING CYCLES:

In these cycles, you can specify the drying time. Time options available are 15, 30, 60 and 90 minutes. For a complete list of all cycles, please refer to the cycle guide document.

3 START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle.

4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMP

Press to modify the cycle's available temperature. (Extra Low, Low, Medium, and High)

TIME (Air Only, Timed Dry, and Quick Dry Only)

Press to modify the time for the timed cycle between 15, 30, 60, and 90 minutes.

OPTIONS

Press to add or remove options for each cycle. Press once to activate Wrinkle Shield, twice to activate Static Reduce and three times for both.

WRINKLE SHIELD

If you will be unable to remove a load immediately, activate this option to add 150 minutes of periodic tumbling to help reduce wrinkles from forming after the cycle completes.

 
STATIC REDUCE

This option can help reduce the build up of static cling formed during the drying process. When activated, this option will tumble with steam towards the end of the cycle to reduce static.

MUTE CYCLE SIGNAL

Use this option to turn the end of drying cycle signal on or off.

CHOOSING THE RIGHT CYCLE

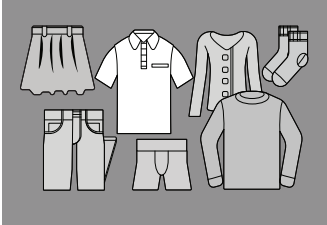

A cycle guide for your dryer can be found online at www.whirlpool.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Medium temperature for cottons, linens and mixed-garment loads.

SPECIALITY CYCLE

WRINKLE CONTROL:

This cycle is designed to help remove or reduce wrinkles, this cycle is great for permanent press clothing. The dryer cycle uses low heat and a cool down period to keep clothes from wrinkling or creasing.

STEAM REFRESH:

This cycle is best for reducing wrinkles and odors from dry items. This cycle is great to refresh a wrinkled garment or when a load was left in the dryer too long.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the "Owner's Manual" included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, detailed product dimensions, or for complete instructions for use and installation, please visit www.whirlpool.com/owners, or in Canada www.whirlpool.ca/owners. This may save you the cost of a service call.

Register Product



Schedule Service



How To's & FAQ



Manuals & Downloads



Add Service Plan

 


Parts



Accessories



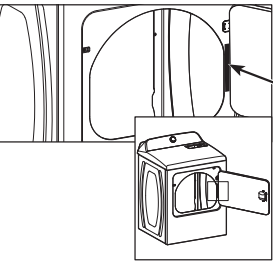

Model & Serial Number Tag Location

To speak with a customer service representative or if you have additional questions, call us toll free at **1-866-698-2538** or in Canada call **1-800-807-6777**. You can write with any questions or concerns at:

Whirlpool Brand Appliances
Customer eXperience Center
533 Benson Road
Benton Harbor, MI 49022-2692

Whirlpool Brand Appliances
Customer eXperience Center
Unit 200-6750 Century Ave
Mississauga, Ontario L5N 0B7

Please include a daytime phone number in your correspondence.

*Not all cycles, settings or options are available with all models.

