



Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Sleep	 Sleep / Timer	 Left	 Left
 Program	 TV / Radio	 EQ	 OK
 Cancel	 Exit / Cancel / Clear	 EQ	 Subtitle / EQ
 1	 1	 Right	 Right
 2	 2	 CH Select	 Smart / List
 3	 3	 Down	 Down
 Disc	 Info / Angle	 AV Effect	 AV / Input / RDS
 4	 4	 Test	 Text / Goto
 5	 5	 Prologic	 Menu / Home
 6	 6	 Super Surround	 Eject / Surround
 7	 7	 Digital / S. Woofer	 Sound / Title
 8	 8	 VCR / AUX / 6CH	 Shift + 4
 9	 9	 VCR / AUX / 6CH	 Shift + 7
 0	 0	 Tape / Deck 1/2	 Shift + 5
 3D AI EQ M EQ	 Audio / Lang 1/11	 CD	 Shift + 3
 3D AI EQ M EQ	 Audio / Lang 1/11	 Tuner / Band	 Shift + 6



