


ACWO®



EARBUDS

DWOTS 737

Manual

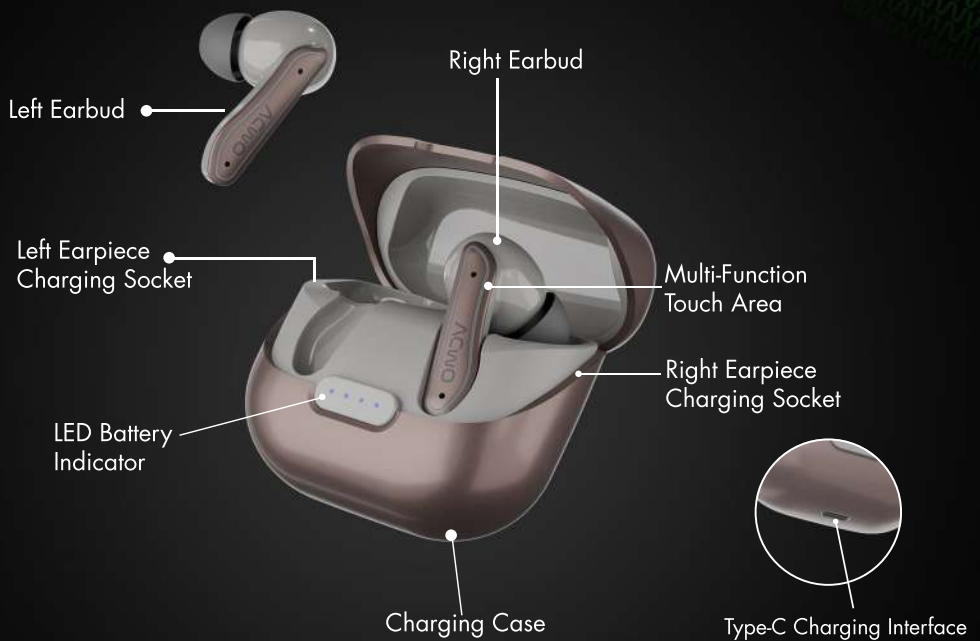

Appearance:

- ① Left Earbud
- ② Right Earbud
- ③ Charging Case
- ④ LED Battery Indicator
- ⑤ Left Earpiece Charging Socket
- ⑥ Right Earpiece Charging Socket
- ⑦ Type-C Charging Interface
- ⑧ Multi-Function Touch Area

What You Will Find In The ACwO Box?

- ❶ Charging Case
- ❷ Pair of TWS Earbuds
- ❸ Type-C Charging Cable
- ❹ ACwO X Sunil Chhetri Catalogu
- ❺ Scan Me Card
- ❻ Comfortable Ear Tips

Product Features:

- ❶ 70Hrs Playtime
- ❷ ANC Up To 32dB
- ❸ 4 Mics With ENC
- ❹ Cinematic Surround Sound
- ❺ 3 EQ Modes (Cinematic | Bass | Normal)
- ❻ 10mm Real BasS BooM X™ Drivers
- ❼ HYPERBOOST™ Charging – 10mins Charge = 120mins Playtime
- ❽ IPX5 Water & Sweat Resistant

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS 737

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS 737 Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS 737 Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS 737 Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS 737 Earbuds from the Charging case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For " ACwO DwOTS 737" from the list of available devices.
5. Pair " ACwO DwOTS 737" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS 737 will connect seamlessly to your device every time you open the charging case

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS 737

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named "ACwO DwOTS 737" from your device and disable bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS 737?

DwOTS 737 Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS 737

Play/Pause:

- Single Tap on the Multi-Function Touch Area of either earbud.

Next Track:

- Triple Tap on the Multi-Function Touch Area of the right earbud.

Previous Track:

- Triple Tap on the Multi-Function Touch Area of the left earbud.

ANC/Transparency Mode:

- Tap & Hold for 2 seconds on the Multi-Function Touch Area of the right earbud.

Switch Between Bass/Cinematic/Normal Mode:

- Tap & Hold for 2 seconds on the Multi-Function Touch Area of the left earbud.

Increase Volume:

- Double Tap on the Multi-Function Touch Area of the right earbud.

Decrease Volume:

- Double Tap on the Multi-Function Touch Area of the left earbud.

Activate Voice Assistant:

- Tap 4 times on the Multi-Function Touch Area of either earbud.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud.

Hang Up Calls:

- Double Tap on the Multi-Function Touch Area of either earbud.

Decline Calls:

- Tap & Hold on the Multi-Function Touch Area of either earbud.

Power On:

- Tap & Hold both earbuds for 5 seconds.

Power Off:

- Tap & Hold either earbud for 5 seconds.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.