



Digital Photo Frame User's Manual



MPN: UM00843EU001

Questions? Need Some Help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



 
or visit
www.polaroid.com/support.

Controls and Basic Instructions

CONGRATULATIONS on your purchase of a Polaroid digital photo frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Also, remember to keep this User's Manual in a convenient location for future reference.

Important: Save the original box and all packing material for future shipping needs.

Controls

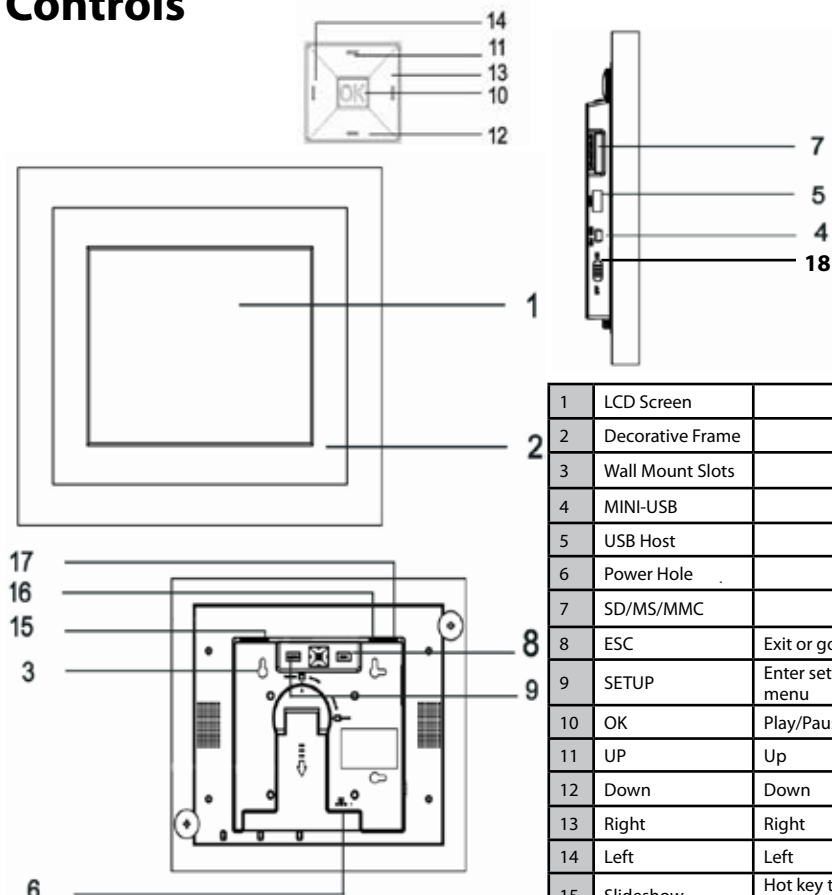

1	LCD Screen	
2	Decorative Frame	
3	Wall Mount Slots	
4	MINI-USB	
5	USB Host	
6	Power Hole	
7	SD/MS/MMC	
8	ESC	Exit or go back
9	SETUP	Enter setup menu
10	OK	Play/Pause
11	UP	Up
12	Down	Down
13	Right	Right
14	Left	Left
15	Slideshow	Hot key to slide show mode
16	Sound-up	Hot key to adjust volume up
17	Sound-down	Hot key to adjust volume down
18	Power	Power on/off

Controls and Basic Instructions

Replacing the Remote Control Battery

1. Remove the battery compartment by pulling the cover in the direction of the arrow.
2. Remove old battery and dispose of correctly.
3. Insert new battery taking note of correct polarity (+/-).
4. Replace cover.



Caution:

1. Only use a 3V CR2025 battery.
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the Flash Player for prolonged periods.

Buttons on the Remote Control



POWER button	Press to turn player on or off.
SETUP button	Press to open menu for changing settings.
CARD SELECTION button	Press to choose a different memory card.
MUSIC button	Press to go to and display music files.
PHOTO button	Press to go to and display photo files.
ROTATE button	Press to rotate photos 90 degrees clockwise on screen
ZOOM button	Press to zoom up to 4x (on photos only)
SLIDESHOW button	Press to start a photo slideshow
+ VOLUME button	Press to increase volume
- VOLUME button	Press to decrease volume
MUTE button	Press to instantly mute volume
↑ button	Press to move up when selecting files on your screen.
← button	Press to move left when selecting files on your screen.
▶ PLAY/PAUSE button	Press to play/pause or confirm selections on your screen.
→ button	Press to move right when selecting files on your screen.
↓ button	Press to move down when selecting files on your screen.
STOP button	Press to exit current screen.

Controls and Basic Instructions

Setup Menu	Sub-Menus	Description
Separate Windows	On	Creates additional frames to view more than one picture at a time with a maximum of four pictures at once
	Off	
Slide Show Effectt	Off	Each picture in a slide show will be shown one after another. Choose a transition to be used between those images
	Fade ~ Random	Fade/Shutter/Cross Comb/Mask/Brick/Dissolve/Bar/Expansion/Silk/Random
Slide Show Speed	3 ~ 300 Seconds	Choose from different slide show speeds
Slide Show Shuffle	On	Lets you display photos in a random order
	Off	
Favorite Or Select		A small check mark will appear on the thumbnail image. To view your favorite image, press the slide show button on the remote.
Music Repeat	One	Allows you to repeat songs
	All	
	Off	
Reset Settings	Yes	Resets all your settings back to the factory default
	No	
Full Screen	On	View images at full screen
	Off	
Language		Select the language of your choice: English, Italian, German, French, Spanish
Copy File		Copy files to the media card
Delete File		Delete files
Brightness/ Contrast	Degree bar	Adjusts these settings
Color/Tint	Degree bar	Adjusts these settings
Set time&Alarm	Set Current Time	Use these settings to set your clock time and your alarm time
	Set Alarm Time	
Clock Style	Photo Mode	Calendar with photo
	Digital Clock	Displays a digital clock
Time format	24 Hour	Change clock format to either 12 or 24 hour time
	12 Hour	
Auto Slide Set	Off	Automatically turns on a slide show when the frame or remote is untouched for this period of time
	30 ~ 900 Seconds	
USB Mode	Host	Is not connected to your computer, select this option
	Device	when you connect to computer,select this option
USB Source	Memory	when you connect to computer,you can operate the memory
	SD/MMC	when you connect to computer,you can operate the SD/MMC
	MS	when you connect to computer,you can operate the MS

Specifications and Set Up

Specifications

Unit	8" Digital Photo Frame	12" Digital Photo Frame
Unit Size	220mm x 180mm x 33mm	310mm x 250mm x 35mm
Weight	0.8 kg.	1.63 kg.
Resolution	800 x 600	800 x 600
Brightness	250cd/m2 max.	260cd/m2 max.
Card Type	SD, MMC, MS	SD, MMC, MS
Internal Memory	512MB	512MB
Input	USB	USB
Auto Start Mode	Auto slide show (JPEG)	Auto slide show (JPEG)
Photo Playback Mode	1. Rotate, zoom in	1. Rotate, zoom in
	2. Auto slide show	2. Auto slide show
	3. Slide show with music (MP3)	3. Slide show with music (MP3)
	4. Interval time setup	4. Interval time setup
	5. Transition setup	5. Transition setup
Music Playback Mode	1. Play/stop/pause	1. Play/stop/pause
	2. Volume adjust	2. Volume adjust
	3. Repeat model setup	3. Repeat model setup
	4. File type, total time, date, display	4. File type, total time, date, display

Setting up the Digital Picture Frame

1. Plug the appropriate end of the AC adapter into a power outlet and the other end into the Digital Picture Frame.
2. After you've stored content on a flash media card (not included), insert the card into the proper slot (see page 2).
3. Turn the power switch to **ON**. As a default the first file of the card will be displayed first. Play sequences are automatically sorted alphabetically by file name, regardless of file type.

NOTE: DO NOT TAKE THE MEMORY CARD OUT OF THE SLOT WHILE THE PICTURES ARE STILL PLAYING OR WHEN THE POWER IS STILL ON. THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD.

Navigating in the Digital Photo Frame

Slide show Screen:

Turning the Digital Picture Frame on will initiate a photo slideshow with music, provided the inserted memory card has music and photo files.



Select Card Screen:

Press the **CARD SELECTION** button on the remote to return "Select card" menu




Select Function Screen:

Select a source disk, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter "Select Function" menu as below:



Photo Browse Screen:

 
Select the Photo icon, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter the Photo Browse Screen as below:

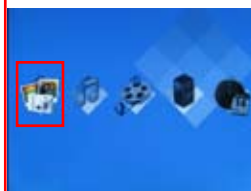

Navigating in the Digital Photo Frame



Music Browse Screen :

 Select the Music icon, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter the Music Browse Screen as below:

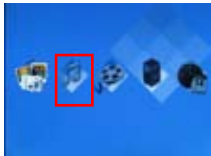


Video Browse Screen :

  Select the Music icon, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter the Video Browse Screen as below:

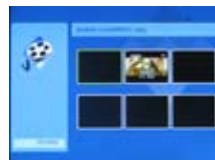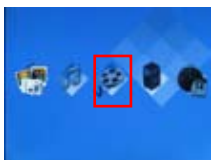


File Operation Screen :

 Select the File icon, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter the File Operation Screen as below:

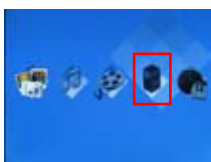

Calendar Screen :

 Select the Calendar icon, then press the **OK** key, or press the **PLAY/PAUSE** button on the remote to enter the Calendar Screen as below:

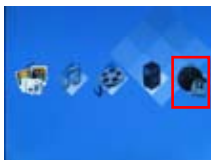

Setting Language:

Press the **SETUP** button to access the setting language menu, select the language you wish to use.

Navigating in the Digital Photo Frame

Setting Current Time:

In the Calendar screen, press the **SETUP** button, the setting menu will pop-up. Select **Set time&Alarm** and **Set Current Time**. Use “→” or “←” button to select types. Use “↑” or “↓” button to set specific numerical value. When the correct time and date is set, press the **PLAY/PAUSE** button.



Setting Alarm Time:

In the Calendar screen, press the **SETUP** button, the setting menu will pop-up. Select **Set time&Alarm** and **Set Alarm Time**. Use “→” or “←” button to select types. Use “↑” or “↓” button to set specific numerical value. When the correct time and date is set, press the **PLAY/PAUSE** button.



Set Favorite Photo and Song:

Using your remote control, select the photo or music view mode, depending on whether you want to set a photo or song as your favorite. Select the photo or song you want to set as a favorite. Press **SETUP** button on the remote and select **Favorite Or Select**. You may select photos or songs by repeating these steps. Then, press the **SLIDESHOW** button on the remote, you will enjoy the pictures and songs which you set as favorite.



 
Navigating in the Digital Photo Frame

How to Delete Files

- a) In Select Card Screen or Select Function Screen, press the **SETUP** button, the setting menu will pop-up. Select **Delete File** will delete all the photo and music in the current card.



- b) In File Operation Screen, press the **SETUP** button. Select **Delete File**, it will delete the photo or music you select.

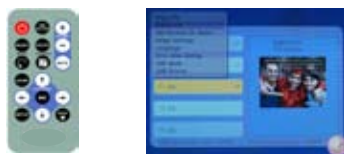


Select file:

- A. In File Operation Screen, press **PLAY** button/ **OK** key once.
B. In the setting menu, select **Favorite Or Select**.

How to Copy Files

 - a) In Select Card Screen or Select Function Screen, press the **SETUP** button, the setting menu will pop-up. Select **Copy File**, it will copy all photo and music on the current card to the card.

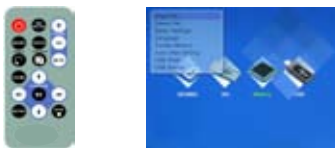

- b) In the File Operation Screen, press the **SETUP** button, the setting menu will pop-up. Select **Copy File**, it will copy the photo and music which you selected to the target card.



 
Select file:

- c) In File Operation Screen, press **PLAY** button/ **OK** key once.
d) In the setting menu, select **Favorite Or Select**.

Navigating in the Digital Photo Frame

How to Format Memory

In Select Card Screen select **Memory**, press the **SETUP** button, the setting menu will pop-up. Select **Format Memory** to format it.

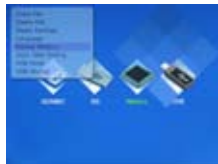

*CAUTION: Formatting deletes all files in memory.

*NOTE: Features vary depending on model number.
Your model may not have an internal memory.

How to connect PC

A:

In Select Card Screen, press the **SETUP** button, the setting menu will pop-up. Select **USB Source** and **MEMORY**.



B:

In Select Card Screen, press the **SETUP** button, the setting menu will pop-up. Select **USB Mode** and **Device**.



Then you can use the PC-line connect to a computer.

*NOTE:

If you do not want to connect to the computer, please Select **USB Mode** and **Host**. Because when you choose option **Device**, the system will stop the normal operation of features.



Playing music with your pictures

NOTE: This digital frame will only play music files that are in MP3 format. Other music file types will not be recognized by the frame and you will not be able to play them.

A. First press **MUSIC** key on the remote control to enter the music database. Use the arrow keys to select the desired music file.

B. Press **SLIDESHOW** key. This will play the selected MP3 while playing the slideshow.

Recycling

Questions? Need some help?

Call our help line found on the insert
with this icon:



Or visit www.polaroid.com.



RoHS

WEEE:

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to **www.polaroid.com** and click on **"Company"** or call the customer service number for your country listed in the instruction manual.

"Polaroid" and "Polaroid and Pixel" are trademarks of PLR IP Holdings, LLC, used under license.

For service, support and warranty information, visit www.polaroid.com.

GET TO THE FUN FASTER™

More fun is just a click away!



Polaroid PoGo™
Instant Mobile Printer



Polaroid PoGo™
Instant Digital Camera



Polaroid PoGo™
2" x 3" ZINK
Photo Paper™



Digital Photo Frames



Digital Cameras



**Digital HD
Camcorders**



LCD TVs



Portable DVD Players



Blu-ray™ and DVD Players

Visit www.polaroid.com to learn more about the latest Polaroid products.

 **Polaroid**

©2009 Polaroid.
"Polaroid" and "Polaroid and PoGo" are trademarks of P&B IP Holdings, LLC, used under license.
Products, features, specifications, appearances, and prices are subject to change without notice. All products subject to availability.