



Wireless Keyboard

IC-BK10

User Manual

Thank you for choosing iClever! Please read this user manual carefully and save it for future reference.

Package Contents


- 1 x Keyboard
- 1 x USB-C Charge Cable
- 1 x Keyboard Silicone Cover
- 1 x User Manual

Specifications

Connection Type	Bluetooth 5.1
Dimensions	14.41x4.92x0.66 inch
Connected Devices	Up to 3
Layout Compatibility	Windows/Mac
Lithium Battery Capacity	280 mAh
Charge Time	< 2 hours (USB-C charge)
Uninterrupted Work Time	> 90 hours
Key Life	3 million clicks
Front Side of Keyboard	ABS
Back Side of Keyboard	Stainless steel
Frequency Band	2402MHz - 2480MHz
Maximum Transmission power	0 dBm

- 1 -

Product Overview

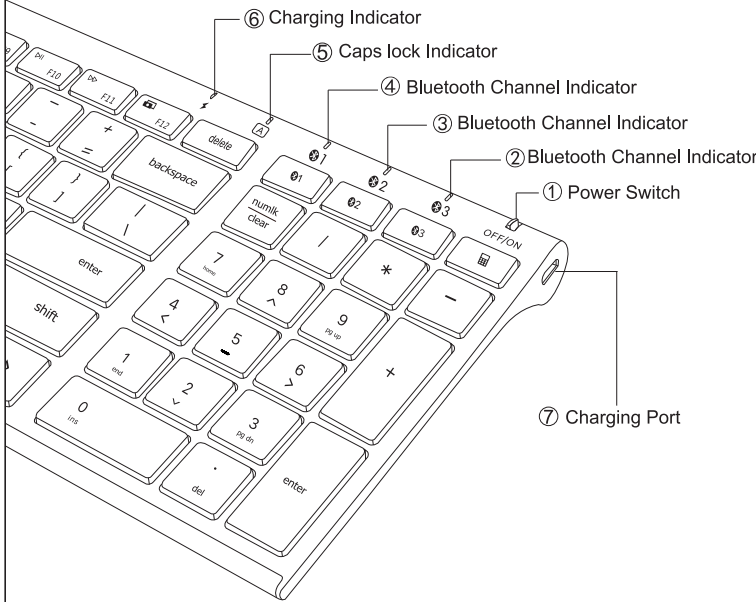

- ① Power Switch: slide the power switch to ON/OFF to turn on/off.
- ②③④ Bluetooth Channel Indicators: when turning on the keyboard, ②③④ indicators will be on for 3s.
- ⑤ Caps Lock Indicator: press the "caps lock" key to switch between uppercase and lowercase, and the indicator will light up when you switch to uppercase.
- ⑥ Charging Indicator:
 - stay in red when charging.
 - turn green after fully charged (about 2 hours fully charged).
- ⑦ Charging Port: for charging.

- 2 -

Guide to Use

A. How to pair with Bluetooth devices?

Pair with 1st device

- Step 1. Charge the keyboard for 2 hours.
- Step 2. Slide the power switch to "ON" to power on the keyboard.
- Step 3. Hold and press the key of ① for 5 seconds to pairing mode in channel 1; the Bluetooth channel indicator will flash blue and start to search for the available Bluetooth device.
- Step 4. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it.

Pair with 2nd device

- Step 1. Hold and press the key of ② for 5 seconds to pairing mode in channel 2; the Bluetooth channel indicator will flash blue and start to search for the available Bluetooth device.
- Step 2. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it.

Pair with 3rd device

- Step 1. Hold and press the key of ③ for 5 seconds to pairing mode in channel 3; the Bluetooth channel indicator will flash blue and start to search for the available Bluetooth device.
- Step 2. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it.

- 3 -

Connect with iClever Bluetooth Keyboard in different system:

- For Windows 10: Click Win > Setting > Devices > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.
- For MacBook/iMac: Click System Preferences > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.
- For iPad/iPhone: Click Setting > Bluetooth > Click "iClever IC-BK10 Keyboard" to connect.

Notes:

- the Bluetooth pairing name may be shown as "Keyboard".
- auto re-connect function: the keyboard will connect with the last-used device automatically.
- do not connect it via a Bluetooth adapter.
- if fail to connect, please read the FAQ.

B. How to switch among the connected devices?

Press key of ① / ② / ③ to switch among the connected devices.

C. How to re-pair?

- Step 1. Press key of ① / ② / ③ to choose the channel 1/2/3 you want to re-pair.
- Step 2. Hold and press key of ① / ② / ③ for 5 seconds to re-pair **AGAIN**.
- Step 3. On your Bluetooth device, find the Bluetooth name "iClever IC-BK10 Keyboard" and click to connect it.

- 4 -

Keys and Functions

The table below describes special key combinations for different operating systems.

Function Keys	iOS&Mac	Android	Windows	Mac OS	Windows
Way to use	Press fn +	Press fn +	Press fn +	Press directly	Press directly
① F1	Brightness -	Brightness -	Brightness - (Windows 10)	F1	F1
② F2	Brightness +	Brightness +	Brightness + (Windows 10)	F2	F2
③ F3	Home	Home or N/A	Web browser	F3	F3
④ F4	Switch apps N/A for iPhone	N/A	Switch apps	F4	F4
⑤ F5	Search	Search in browser or N/A	Search	F5	F5
⑥ F6	Previous track	Previous track	Previous track	F6	F6
⑦ F7	Play/pause	Play/pause	Play/pause	F7	F7
⑧ F8	Next track	Next track	Next track	F8	F8
⑨ F9	Mute	Mute	Mute	F9	F9
⑩ F10	Volume -	Volume -	Volume -	F10	F10
⑪ F11	Volume +	Volume +	Volume +	F11	F11
⑫ F12	Screenshot	Screenshot	Screenshot	F12	F12

- 5 -

Special Key	Description
① F1	Press "fn" + "esc" keys to turn on/off fn lock function. Your keyboard has by default access to the F-keys. If you prefer to have direct access to Media and Hotkeys such as Volume Down, Volume Up, Play/Pause, and so on, simply press "fn" + "esc" keys to swap them.
② F2	The "fn" key is used in combination with other keys to access special features.
③ F3	Switch function: press this key to Bluetooth Channel 1. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 1 indicator will flash blue to pairing mode.
④ F4	Switch function: press this key to Bluetooth Channel 2. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 2 indicator will flash blue to pairing mode.
⑤ F5	Switch function: press this key to Bluetooth Channel 3. Pairing function: hold and press it for 5 seconds, the Bluetooth Channel 3 indicator will flash blue to pairing mode.
⑥ F6	It works as calculator function when your system is Windows. NOTE: works for Windows only.
⑦ F7	It works as "win" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
⑧ F8	It works as "alt" when your system is Windows or Android. It works as "command" when your system is iOS or Mac OS.
⑨ F9	It works as "ctrl" when your system is Windows or Android. It works as "option" when your system is iOS or Mac OS.
⑩ F10	It works as "number lock" when your system is Windows and Android. It works as "clear" when your system is Mac OS. NOTE: not works for iOS.

- 6 -

System Requirements

- iOS 9.0 or later
- macOS 10.12 or later
- Windows 8 or later with Bluetooth HID Profile
- Android 6.0 or later

NOTE:
Not fully compatible with Windows 7 PC/laptop . Bluetooth adapter, Mac mini, Samsung Smart TV, and Nokia phones.

Power Saving Mode

The keyboard will enter power saving mode after 30 minutes of inactivity. Press any key and wait for 3 seconds to activate it.

Note: there a delay in typing when wake up the keyboard.

Charge the Keyboard

Charge the device with the included USB cable.

---- Output: DC 5V/200mA; **USB charger is not included.**

---- In the charging, the indicator will stay in red and turn green after fully charged. Generally, it takes about 2 hours to get fully charged.

Tips

Keep away from oil, chemical, liquid, and snacks.
Keep away from sharp objects.
Keep away from metal and other sources of wireless signal.

Contact

For more questions, please contact us by support@iclever.com

- 7 -

FAQ

Q. Delay when typing, stop working, and frequently get disconnected.

1. Restart your Bluetooth device.
2. Charge the keyboard for 2 hours.
3. Make sure that your iClever device and computer are within close proximity of each other.
4. Try moving away at least 8 inches from:
 - Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
 - Computer power supplies, Metal or metal wiring in the wall
5. Do not use your wireless keyboard on metal surfaces.
6. Check if there are any updates running in the background.
7. Check your computer memory, insufficient memory may cause the delay.
8. Try on a different APP/device to connect or email us.

Q. My keyboard fails to connect.

1. Charge the keyboard for 2 hours.
2. Make sure that your iClever device and computer are within close proximity of each other.
3. Try moving away at least 8 inches (20 cm) from metal and other sources of wireless signal.
4. Delete all the Bluetooth connection records.
(For example, for iPad, click "Settings" > "Bluetooth" > under "MY DEVICE" to delete all the Bluetooth connection records)
5. On your device, turn off the Bluetooth and turn it on again to Refresh.
(For example, for iPad, click "Settings" > "Bluetooth" > if the on-screen switch beside Bluetooth currently shows as ON, tap it twice to refresh it).
6. Connect it again or email us.

Q. How to fix keyboard typing multiple letters on Windows10?

Click win key > Settings > Ease of Access > Keyboard > find "Use Filter Keys", turn it on.

- 8 -

Q. How to fix keyboard typing multiple letters on Mac?

1. On a Mac, choose the Apple menu > "System Preferences", click "Keyboard", and choose the Keyboard tab.
2. Locate the "Key Repeat" slider setting and adjust it to the "Off" position.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- 9 -



Clavier sans fil

IC-BK10

Manuel de l'Utilisateur FR

Instructions de couplage

- Étape 1. Faites glisser l'interrupteur d'alimentation sur « ON » pour allumer le clavier.
- Étape 2. Maintenez et appuyez sur la touche ① / ② / ③ pendant 5 secondes pour accéder au mode d'appairage sur le canal 1/2/3 ; l'indicateur de canal Bluetooth clignotera en bleu et commencera à rechercher le périphérique Bluetooth disponible.
- Étape 3. Sur votre appareil Bluetooth, recherchez le nom Bluetooth «iClever IC-BK10 Keyboard» et cliquez pour le connecter.

- * Bande de fréquence : 2402 MHz-2480 MHz
- * Puissance d'émission maximale : 0 dBm

IC Caution

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.