



| Original                                                                                          | Recharge                                                                                  | Original                                                                                          | Recharge                                                                                         |
|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  Power           |  Power   |  Return / Text |  Shift + Back |
|  Mute            |  Mute    |  Subtitle      |  Subt         |
|  Red / Eject     |  Red     |  Display       |  Shift + Info |
|  Red / Eject     |  Eject   |  Menu / Info   |  Info         |
|  Green / Title   |  Green   |  Menu / Info   |  D. Menu      |
|  Yellow / DVD    |  Yellow  |  Menu          |  Menu         |
|  Yellow / DVD    |  Options |  Up            |  Up           |
|  Blue / A-B      |  Blue    |  Source        |  AV           |
|  <</[≡o]         |  <<      |  Left          |  Left         |
|  >>/[≡?]         |  >>      |  OK            |  Ok           |
|  I<</[≡+]      |  I<<   |  Right       |  Right      |
|  >>I/[≡..]     |  >>I   |  EPG         |  Guide      |
|  Play          |  Play  |  Down        |  Down       |
|  Pause         |  Pause |  Exit        |  Exit       |
|  Stop          |  Stop  |  Vol+        |  Vol +      |
|  Angle / [≡i]  |  Smart |  FAV         |  Pre Ch     |
|  Return / Text |  Text  |  CH+         |  Ch +       |



