



Quick Install Guide

AA1MLPE VPN



WATCHMAN®
Your Virtual Security Guard

by **cellgate**

Items Included in Kit

The following items are included in your W480 delivery.


1. Watchman 480 Unit
2. 12 Volt DC Power Supply
3. Magnetic Read Switch
4. Keys

NOTE Leave one key with the customer.


5. Nuts **X 4**
6. Bolts **X 4**
7. Install Guide
8. Customer Information Packet

Wiring Examples

Watchman W480 Unit

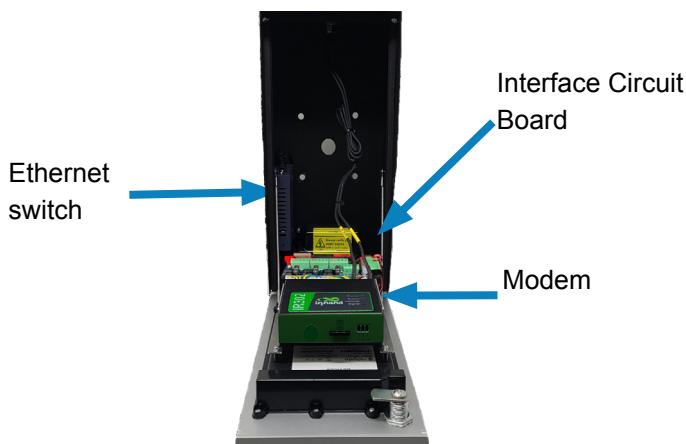


Power Supply Wiring

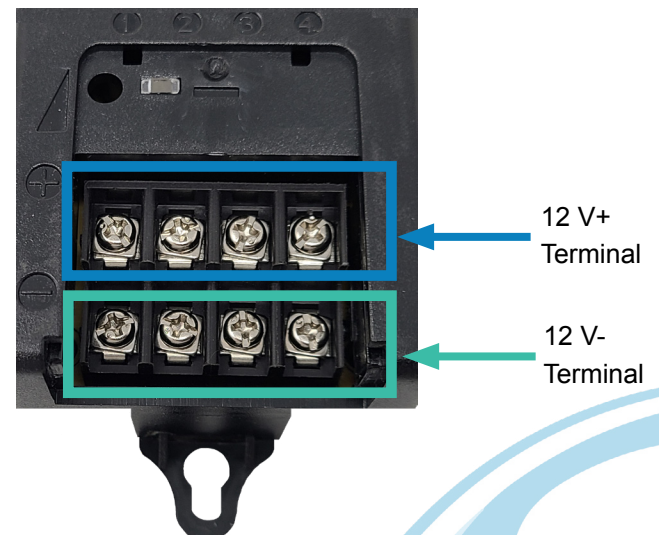

Recommended wiring: 18/6 shielded for main device, and 18/4 shielded for optional Wiegand devices.

Interface Circuit Board

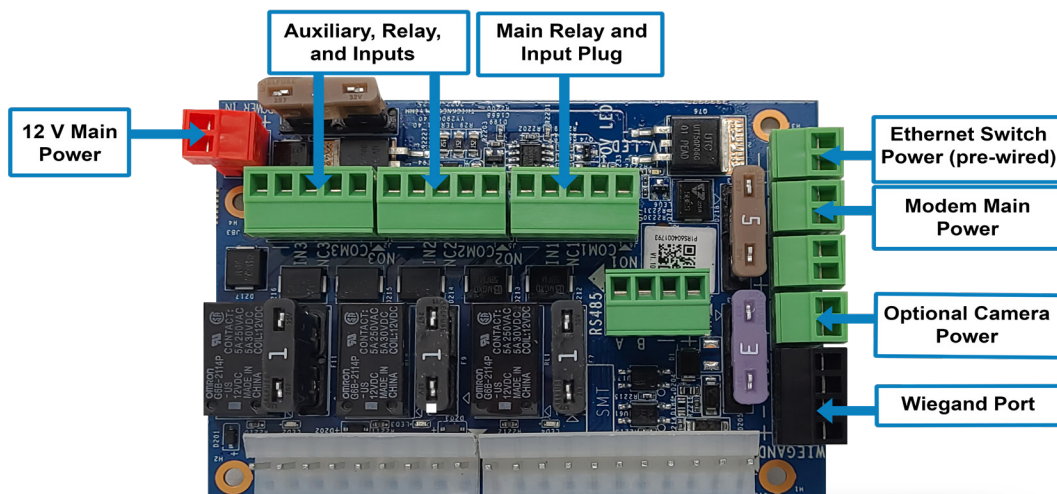

The circuit board is oriented the same as the Watchman install.

If you requested an expansion board, we installed it.

We recommend the following gauges (ga) for each distance:

- 18 ga stranded: up to 25 ft
- 16 ga stranded: up to 50 ft
- 12 ga stranded: up to 60 ft



WATCHMAN®
Your Virtual Security Guard

by  **cellgate**


VPN Connection



Product Numbers: AA1MLPE VPN

The VPN connection ships DHCP enabled and **does not** support external cameras.

In the image to the left, the black chord is the Ethernet connection.

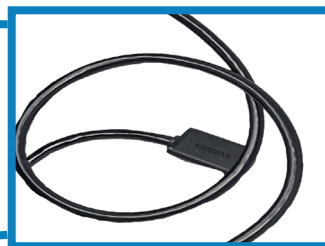

NOTE Ethernet connection is **required**.


NOTE **Do not** remove SIM card from the in-hand modem.




WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Wiring with Transformer

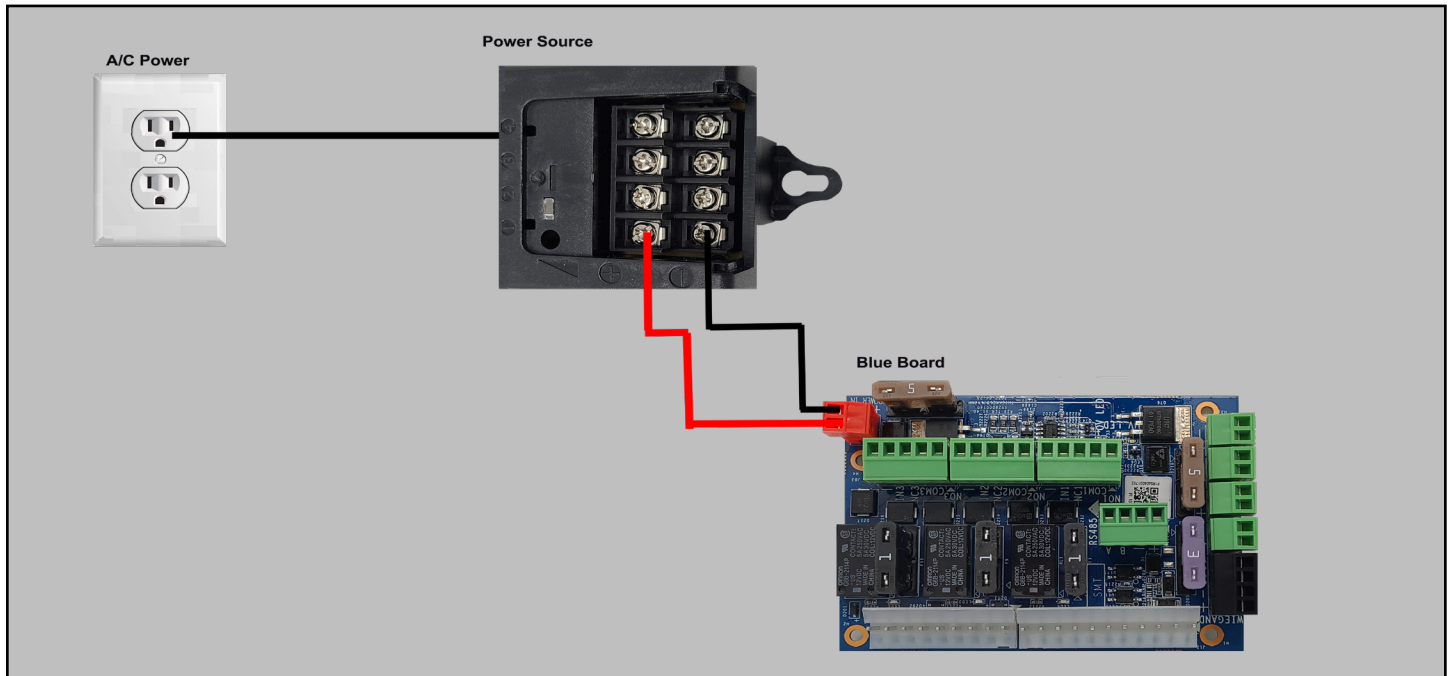

Wiring for Solar Power

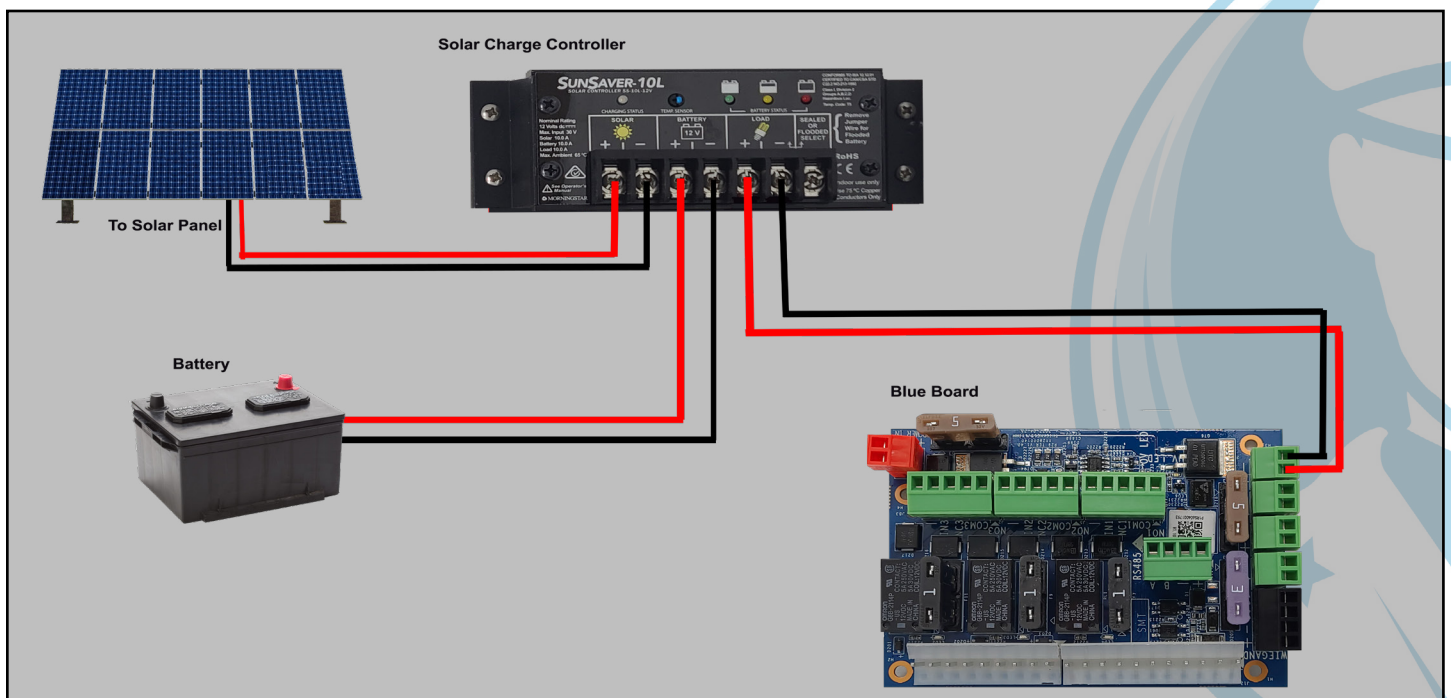



WATCHMAN®
Your Virtual Security Guard


by  **cellgate**

Interface Wiring Diagram

Oriented the same as the Watchman install



The supplied diode must be used for all magnetic lock installations, or the warranty is voided.

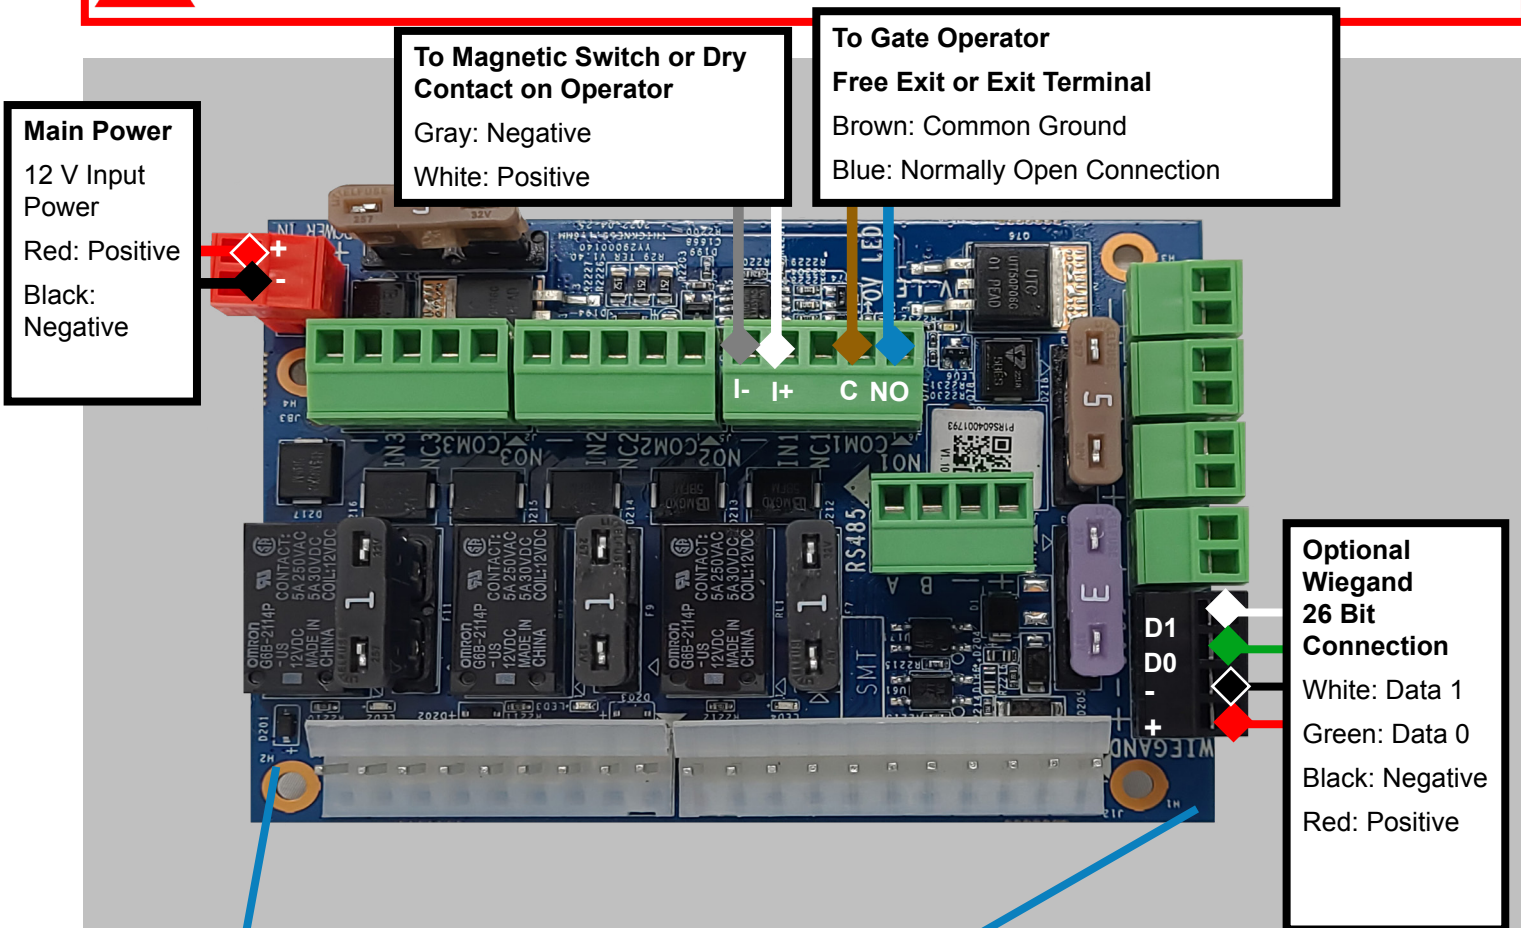

6-Wire Installation Instructions

1. Wire main power from the transformer to the power connector on the circuit board.
2. Connect gate trigger wires from the Normally Open (NO) and Common (C) to the free-exit or exit terminals on the gate operator.
3. Connect the gate status wires on the 6 pin connector on the main relay and input plug to the magnetic switch or a Dry Contact, Normally Closed (NC) relay on the gate operator.
4. If using an optional 26-bit reader (e.g., keypad, card reader, RFID, clicker), wire the device to the Wiegand connection on the interface circuit board.
5. Use *Camera Guide* if adding external camera.
6. Test and activate using the test credentials on the *Activation & Test Process* document.







WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Dry Contact Relay, Normally Open Dry Contact No Voltage to Lock or Gate

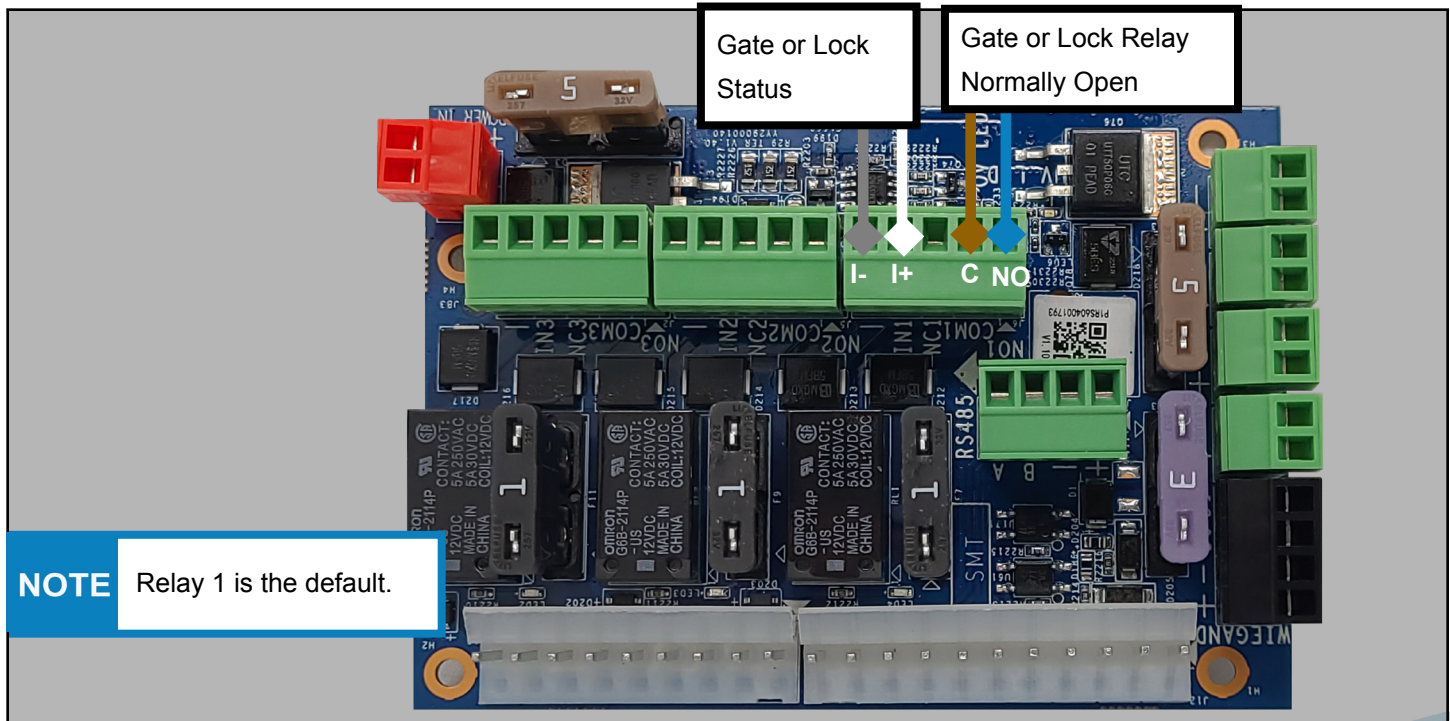

Dry Contact Relay, Normally Closed Dry Contact No Voltage to Lock or Gate

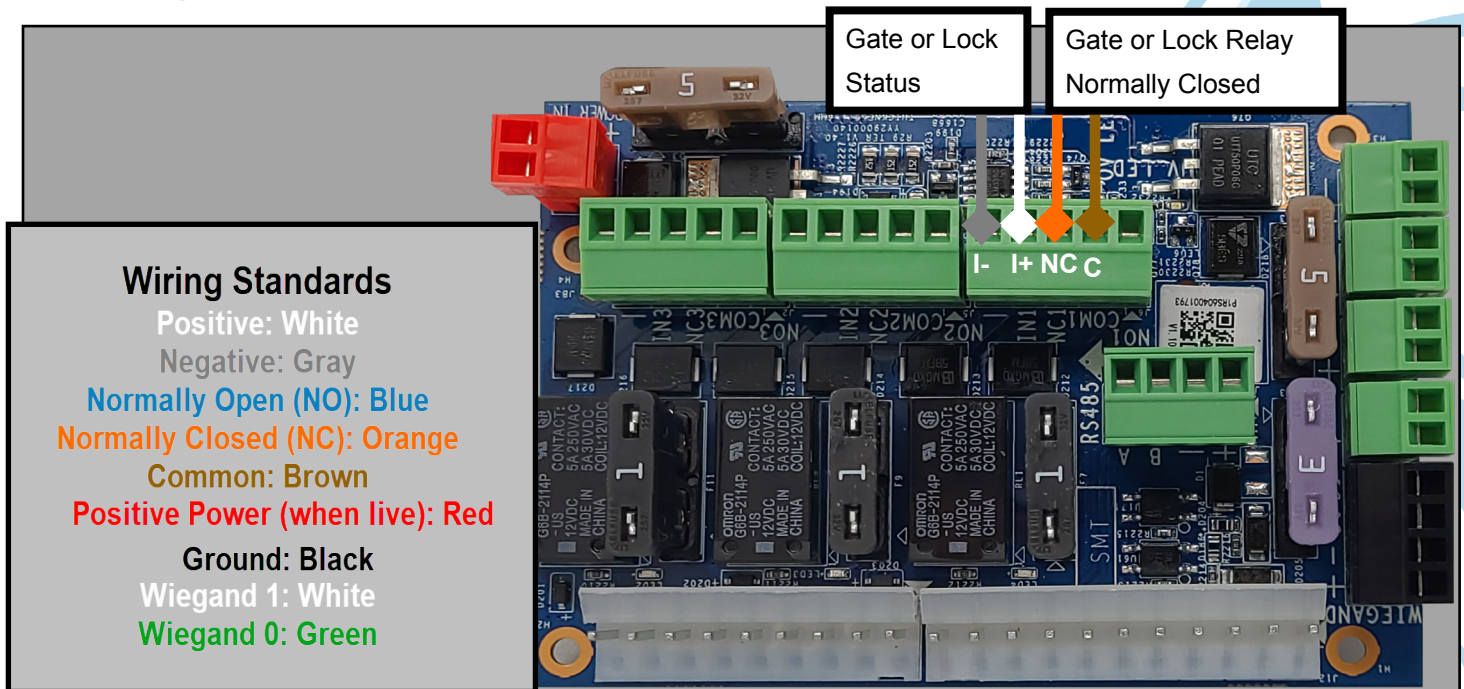




WATCHMAN®
Your Virtual Security Guard

by  **cellgate**


Lock Requiring Constant 12 V: Wet Contact Relay, Normally Open

Door/lock opens (releases) when power is added.

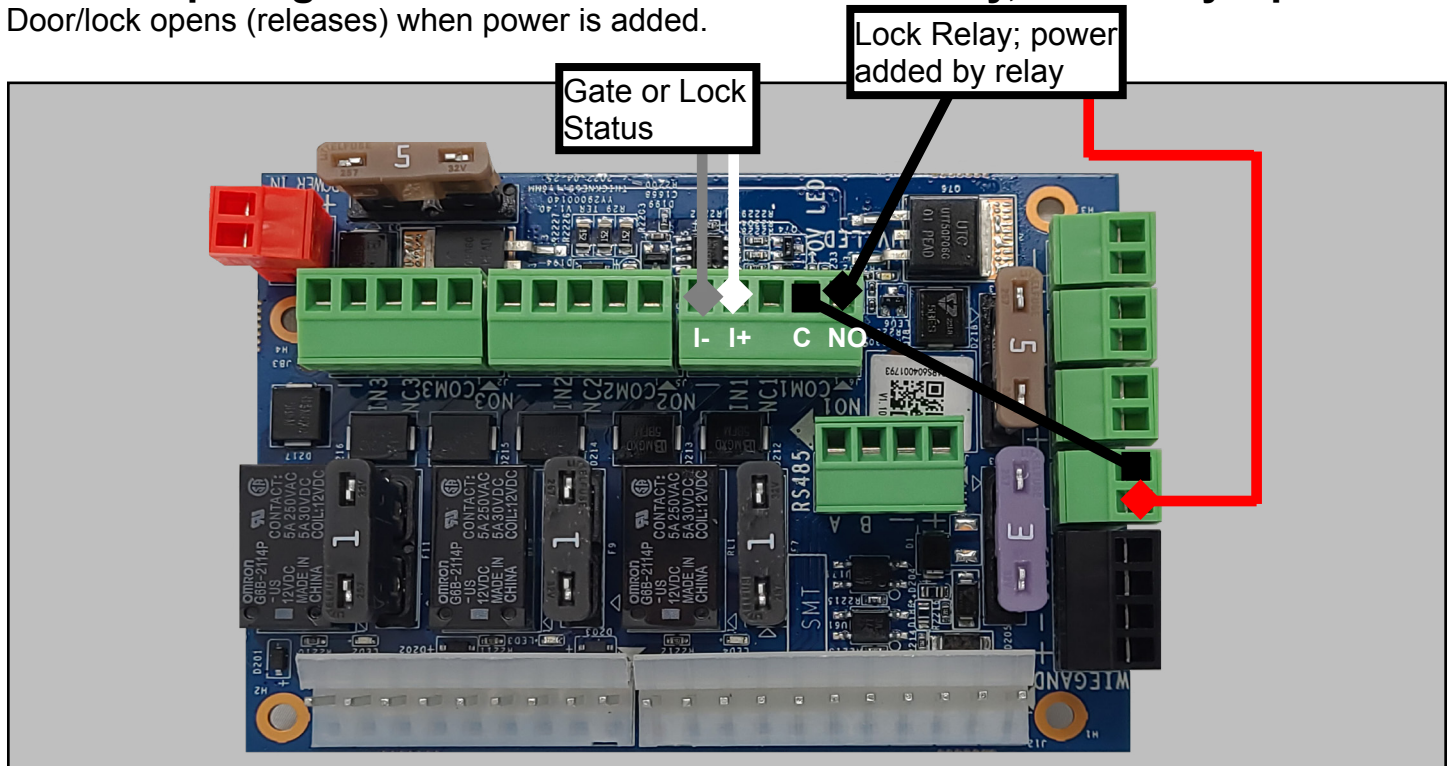

Lock Requiring Constant 12 V: Wet Contact Relay, Normally Closed

Door/lock opens (releases) when power is removed.

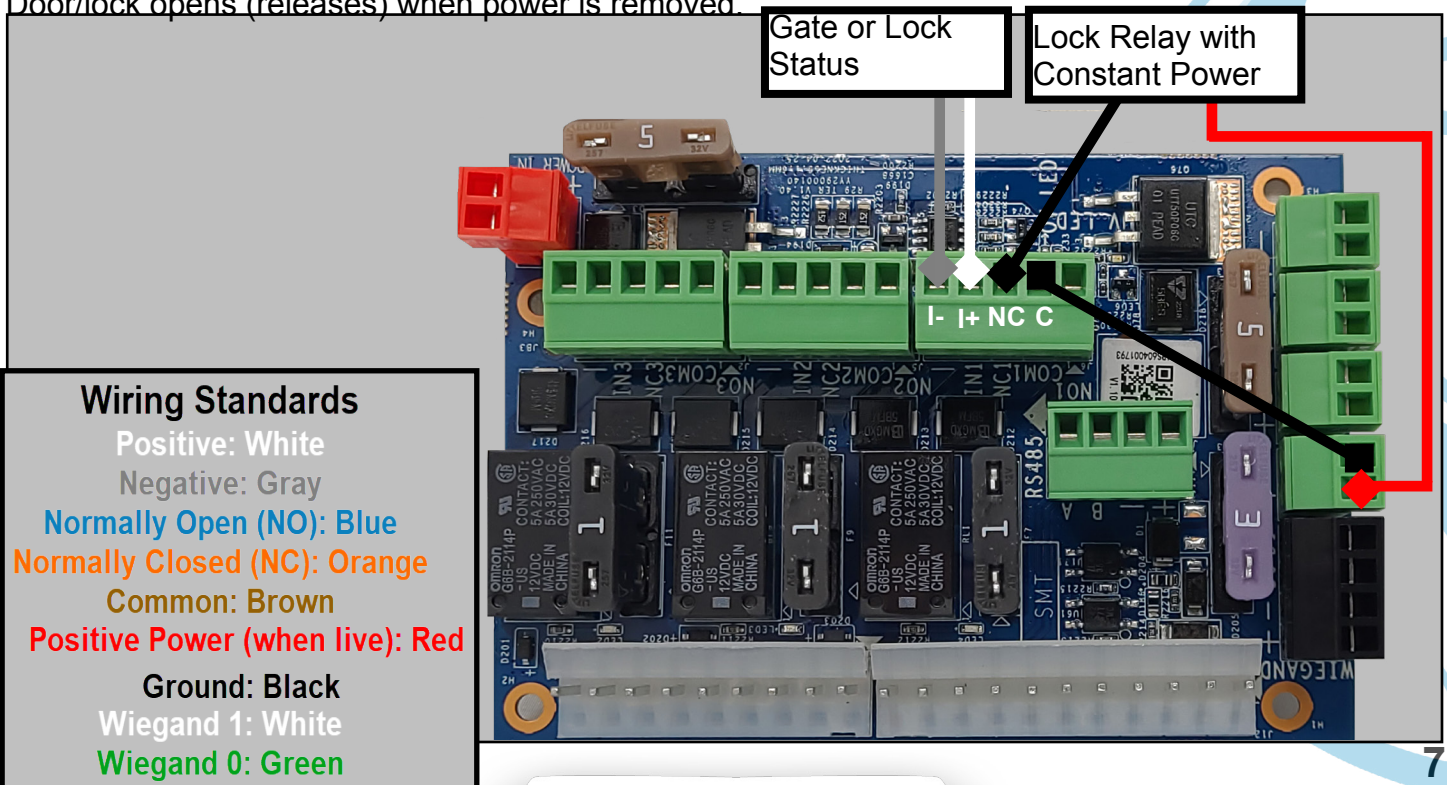




WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Wiegand Wiring to Board and Direct to Faceplate, 26 Bit Reader To Interface Board

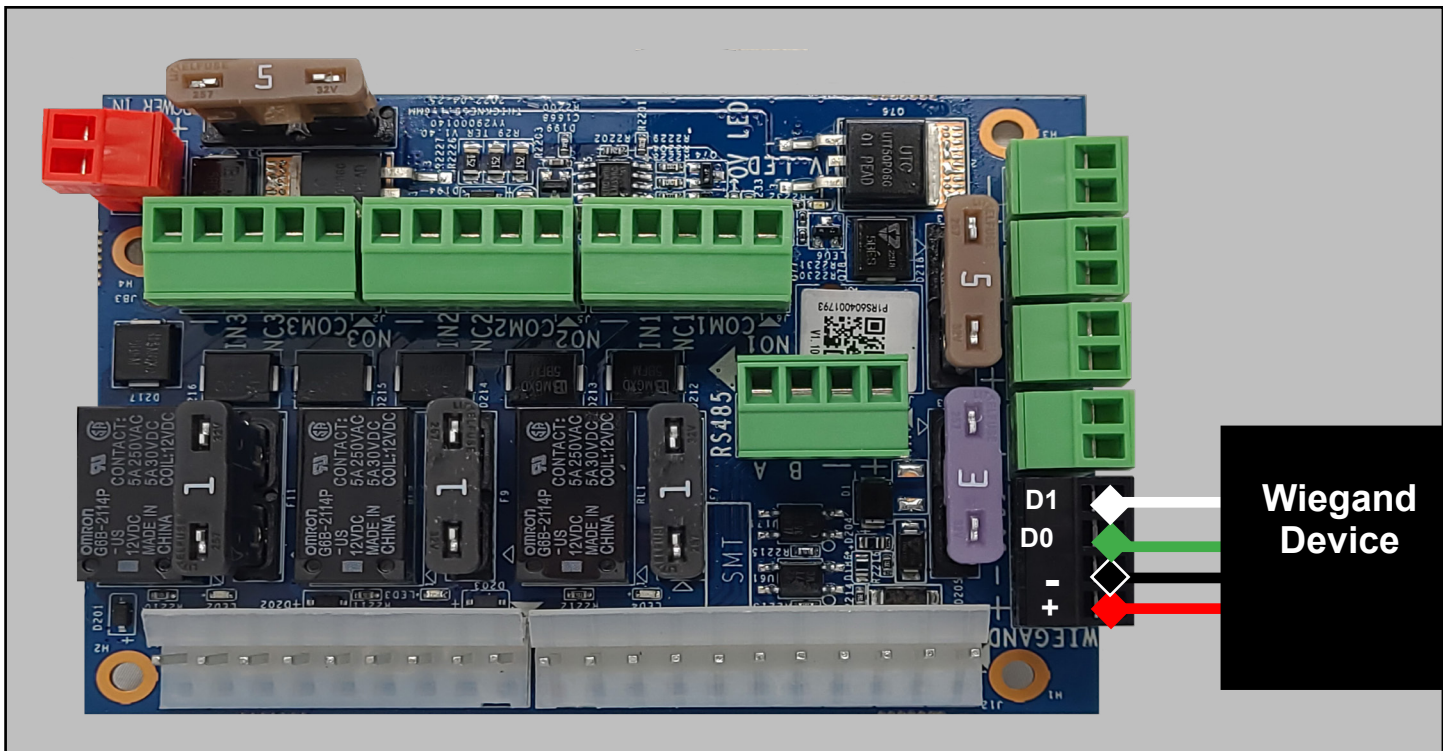

Wiring Standards

Positive: White

Negative: Gray

Normally Open (NO): Blue

Normally Closed (NC): Orange

Common: Brown

Positive Power (when live): Red

Ground: Black

Wiegand 1: White

Wiegand 0: Green




WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Magnetic Switch Setup


The Mag Switch can be placed anywhere that allows A and B to be pulled at least 2 inches away from each other when the gate is open and within 1.5 inches when the gate is closed.

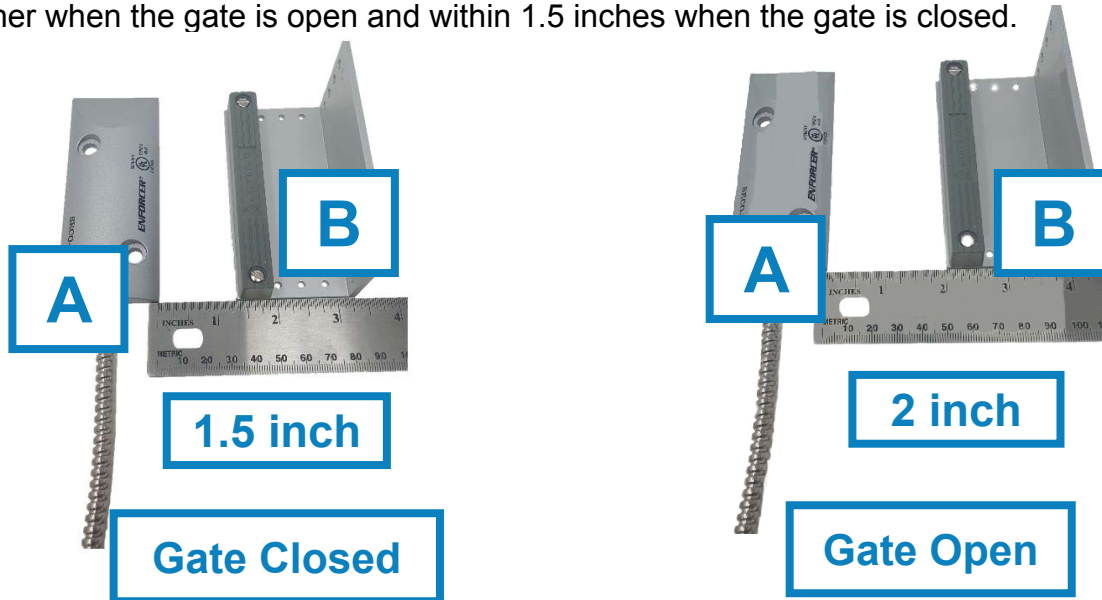


NOTE Gate statuses can be inverted. If needed, call CellGate to invert.

Magnetic Switch Wiring

Gate Wiring

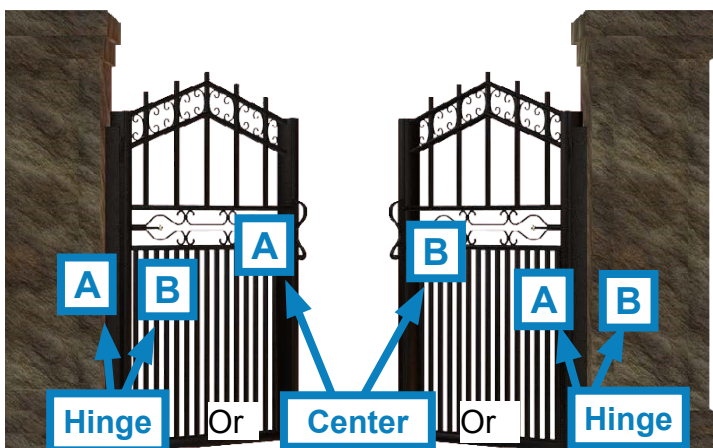

Door Wiring


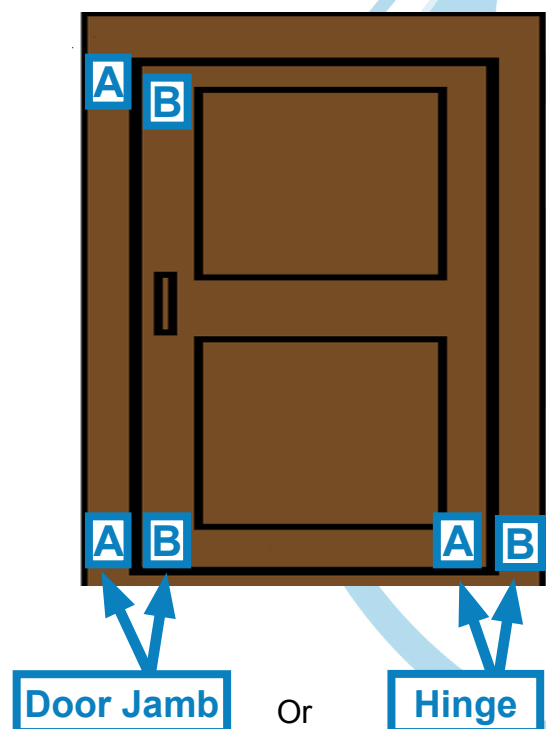




WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Mounting to Standard Pedestal Mount

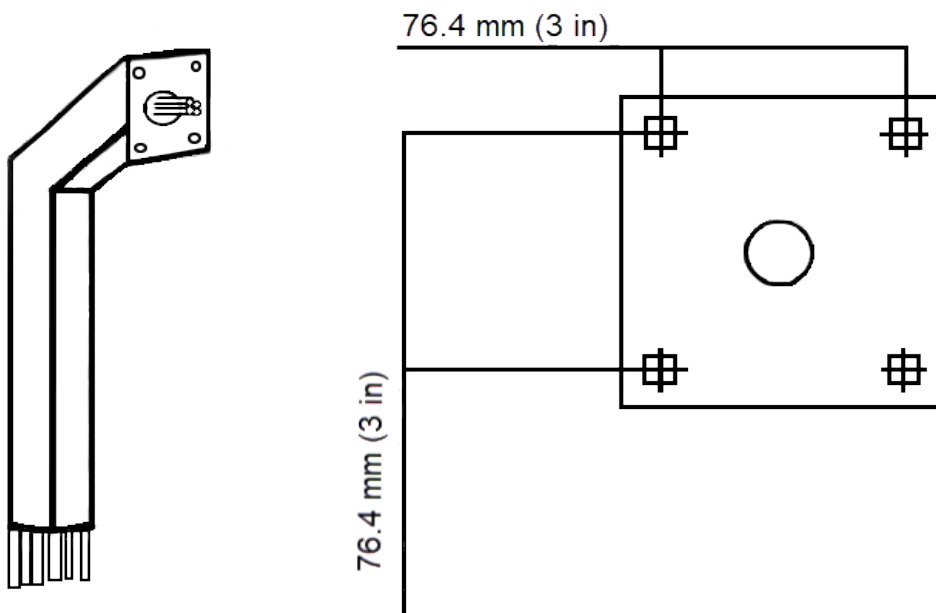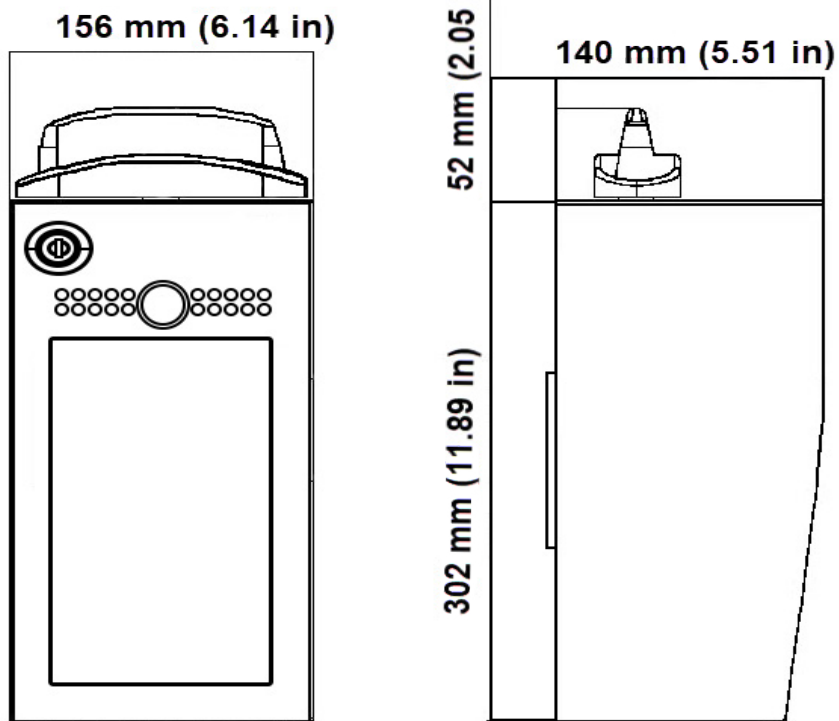



WATCHMAN®
Your Virtual Security Guard

by  **cellgate**

Mounting to Standard Pedestal Mount, Continued

