 


Mooka

LED LIGHT
SOURCE
MINI PROJECTOR
USER MANUAL

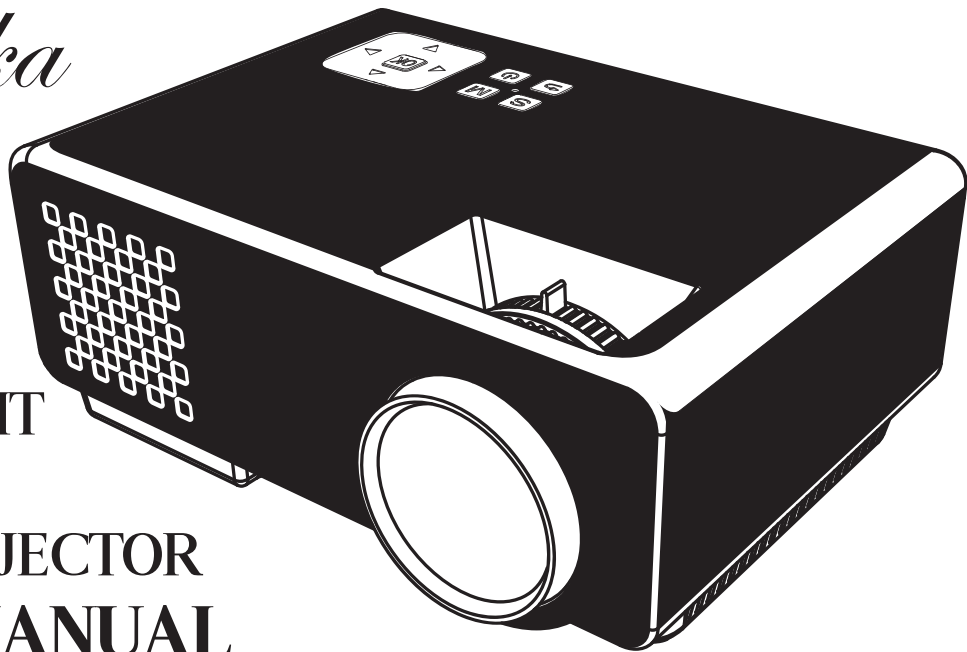

✉ support@mooka.co

📍 www.mooka.co

☎ 1-855-558-8999 (24 hours Mon-Fri)

1. Remarks

- 1.0 Notice: please read the manual carefully before operating projector.
- 1.1 To ensure stable power supply, please use standard power cord which has ground wire.
- 1.2 Please use the power supply and cable indicated on the projector or the manual.
- 1.3 The projector should be kept away from cloth, sofa or anything that may block the ventilation scoop. And keep way from flammable and explosive materials.
- 1.4 Please do not disassemble by yourself, otherwise we will not provide free warranty service.
- 1.5 To protect your eyes, do not watch directly at the lens when projector working.
- 1.6 The projector should be kept way from water or water splash, and the product shall not be placed around the vases, cups and other liquids items.
- 1.7 To prevent electric shock, please don't put the projector under the rain or moisture.
- 1.8 We strongly suggest you power off projector when play it for 6 hours constantly one time.
- 1.9 Please use the original foam and other cushioning materials when transport projector.
- 2.0 If the projector does not work, please contact the retailer for help first.

2. Accessories List

AV signal cable	1pc	Remote control	1pc	User manual	1pc	Power cable	1pc
-----------------	-----	----------------	-----	-------------	-----	-------------	-----

3. Warm Tips

- * NOT Recommended for PPT, Word, Excel or business presentation.
- * To connect FUNAVO mini projector with ipad or smart phone, you need a wireless HDMI adapter. For android phone which supports MHL, you need a MHL to HDMI cable; for iPhone / iPad, you need a lightning to HDMI adapter cable.
- * To connect the mini video projector with PC/ Laptop, please help adjust the PC / Laptop display resolution to 800*600 or 1024*768, which can provide the best clarify.
- * Please note that it only provides clear image in dark room.

4. Specification

Model	Mini projector	Image system	LCD
Native Resolution	800*480	Support Resolution	Max 1920x1080
Lamp	LED	Input voltage	110-240V
Language	English, 23 languages	Lens	F=125
Image size	20-80inch	Projection distance	1.18-2.28m
Color	18000K	Projection mode	Front projection
Power waster	40W	Speaker	2.0W*1
Weight	1KG	Size	210*145*80mm
Operation mode	Manual/Remote control	Working temp	-10~38°C
Output	Headphone	Input	HDMI/USB/VGA/AV


5. Multimedia Support Files

Audio format	MP3/AAC
Image format	JPEG/BMP/PNG
Video format	MPEG1/MPEG2/MPEG4/RMVB MOV/VC1/FLV/H264/MJPEG
File format	TXT




Due to Dolby copyright issue, the projector does not support Dolby audio decoding.

 
6. Function Structure Diagram

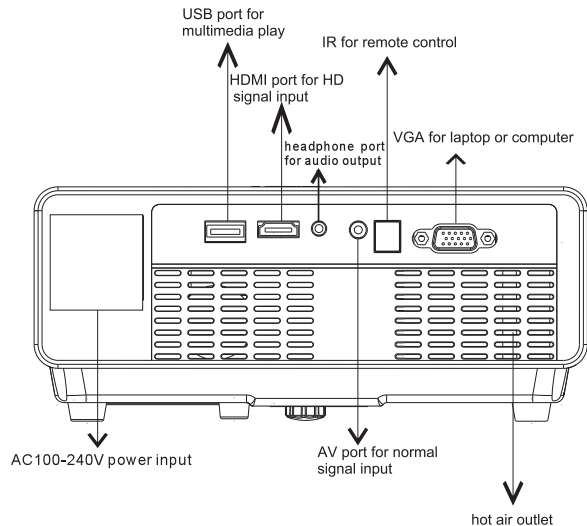

 7.Button Function

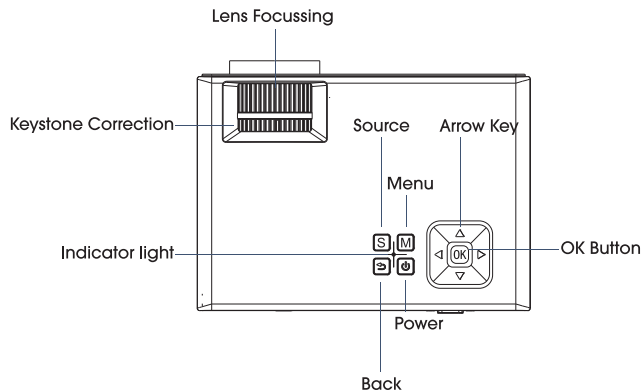

 8.Function Operation

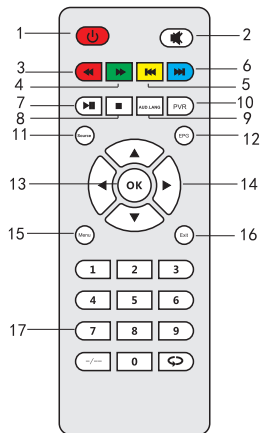

1. Power
2. Mute
3. Backward
4. Forward
5. Previous
6. Next
7. Play
8. Stop
9. Audio Language
(Only apply for European DVB-T)
10. Record digital TV channel and playback
(Only apply for European DVB-T)
11. Source
12. Electronic Menu
(Only apply for European DVB-T)
13. Confirm
14. Up/down/left/right
15. Menu
16. Exit
17. Numbers

9.Function Operation

Power on/off

After the projector gets power through adapter, it goes into stand-by status.

Power on: Press the power button on the projector or remote control once, the projector starts working.

Power off: Press the power button on the projector or remote control once, the projector is off.

Focusing

Put the projector at a certain place within the proper distance where the projector lens perpendicular to the projection screen, then rotate the lens to make adjustment until the image is clear. During this step, you can broadcast a program or the menu image to support focus.



While using the projector, please connect the power adapter with the projector first, then connect the power adapter with the power.

 


For more product function and application, please consult with retailer.


Menu Operation

Signal Source Selection

Press "SOURCE" button on the remote control to get the source menu, repeat pressing "source" button to move the cursor to the input signal source you need, then press "OK" button to confirm.

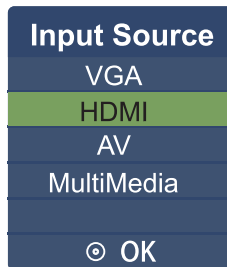

 10.Menu Setting

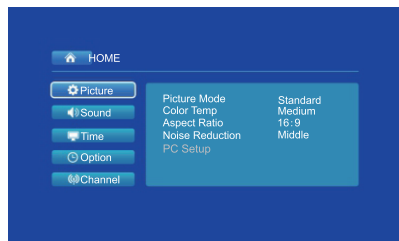

Press "MENU" key to enter the main menu, then press "◀▶", key to each sub-menu.

Press "▲/▼" key to select the sub-menu, then adjust the parameters as per your need, and press the "OK" key to confirm.

Sub-Menu Functions

I. Picture -sub-menu:

Picture Mode, Color Temperature, Aspect Ratio, Noise Reduction, PC Setup.

II. Sound sub-menu:

Sound Mode, Balance.

III. Time sub-menu:

Sleep Timer, Auto Sleep

IV. Option sub-menu:

OSD language, Restore Factory Default, Flip, Focus.

V. Channel and software update menu

 
Operate the TV channel details, it is unavailable for model which is without TV.
Software update is the firmware updating.



Some sub menus are not available in some input source

11.Multimedia Player

Insert the USB and choose Multimedia from source menu, then the main interface shows as the picture below.
Through this interface, you can choose the corresponding "pictures", "music", "video", "text" icon to play the file.
Remarks: You can only insert the USB on at a time, or the projector can not recognize any of them.

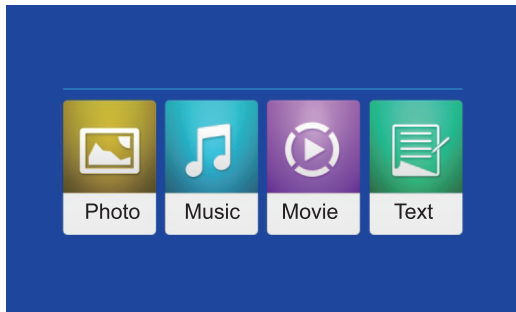

We offer 1 year warranty for the product.

Mooka

 support@mooka.co

 www.mooka.co

 1-855-558-8999 (24 hours Mon-Fri)

Made in China

