



Original	Replacement	Original	Replacement
 Power	 Power	 >>I	 >>I
 Source	 AV	 <<	 <<
 Open/Close	 Eject	 >>	 >>
 Sleep	 Sleep	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Mute	 Mute
 6	 6	 Repeat	 Text
 7	 7	 Tuning+	 Ch +
 8	 8	 Tuning-	 Ch -
 9	 9	 Disc Menu	 D. Menu
 0	 0	 Menu	 Menu
 Dolby PL	 Dual	 Title Menu	 TV/R
 DSP/EQ	 Guide	 Tools	 Options
 I<<	 I<<	 Info	 Info





Original	Replacement	Original	Replacement
 Return	 Back		
 Exit	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Red	 Red		
 Green/Tuner	 Green		
 Yellow/MO/ST	 Yellow		
 Blue/CD Ripping	 Blue		
 Dimmer	 Subt		
 S.Vol	 Format		
 P.Bass/Audio Upscale	 3D		





Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Function Tv	 AV	 Vol+	 Vol +
 Sleep	 Sleep	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Menu	 Menu
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 <<	 <<	 Right	 Right
 >>	 >>	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 Play	 Play	 Red	 Red



