onn.

onn. 5.1.2 Atmos Soundbar



Model: 100002634

User Manual

Ver.02 Rev. 31/03/2020

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

......

read the operating instructions before you attempt to use the equipment.

- ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. consult your dealer if you are ever in doubt about the installation, operation of safety of your equipment.
- be careful with glass panels or doors on the equipment. route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.
- DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as
- newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects
- filled with liquids, such as vases. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.
- DON'T use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
- use equipment such as personal stereos or radios that will distract you from the $\,$ requirements of traffic safety. DON'T listen to headphones at high volume, as such use can permanently damage your
- that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T leave equipment switched on when it is unattended unless it is specifically stated

- DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.
- ABOVE ALL NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock. NEVER guess or take chances with electrical equipment of any kind. It is better to

Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names a those of their respective owners.

2

- Retain the manual. If you pass the unit onto a third party make sure to include this manual. Check that the voltage marked on the rating label matches your mains voltage.

Ver.02 Rev. 31/03/2020



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories. The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. Safety Warnings

Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
Do not use liquids to clean the unit. No naked flame sources, such as lighted candles, should be placed on the apparatus. Aucune source de flamme nue, telle que des bougie allumées, ne doitêtre placé sur l'appareil.

 Please inspect the unit for damage after unpacking. Do not continue to operate the unit if you ar in any doubt about it working normally, or if is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Avoid exposure to direct sunlight and other sources of heat.

If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

CAUTION SEXTER SECURITY OF SUMMER OF

Rear View of Subwoofer

Light up orange when the pairing succeed

1. POWER Indicator

Pair with the soundbar

2. PAIR

3

Important Safety Instructions:

4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry doth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) tha produce heat.

consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufact

2) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination

13) Unplug this apparatus during lightning storms or when unused

for long periods of time.
) Refer all servicing to qualified service personnel. Servicing is required when the

equired when the ppparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or biplects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has

been dropped.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Ver.02 Rev. 31/03/2020

Service

- How to get service Call 1-800-925-6278. contact: Walmart Inc. Walmart.com, Bentonville, AR 72716 Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice
- the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- your unit requires service, the service location will be at the sole discretion of Walmart, Inc. At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired
- at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping. Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is
- evidence that the product is within the warranty period must be presented to obtain warranty service PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- onn.5.1.2 Atmos Soundbar that has been modified or incorporated into other products.
- A unit purchased or serviced outside the USA. A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults. Acts of nature or God, such as but not limited to earthquake or lightning damage.

 Special, incidental or consequential damages. HDMI

DOLBY ATMOS*

| Mortes with Apple AirPlay | | Bluetooth*



Preparation

Installing Remote Control Batteries

battery compartment of the remote control.

(+) and (-) ends of the batteries match the

Connecting to the Power outlet Supply

The unit is now connected and ready to use.

Ensure all audio connections of the unit are connected before connecting to the AC socket.

• This unit is designed to operate with the provided AC cord.

Connecting the unit to any other power source may damage the unit. Unwind the AC cord to its full length. Connect the end of the cable to the AC IN Socket at the bottom of the unit and then connect the power cord cable to the Power outlet Make sure the AC cord is firmly inserted into the Power outlet.

The unit is now consected and ready to use

To switch the unit off completely, unplug the AC cord from the Power outlet.

(+) and (-) ends indicated in the battery

3. Close the battery compartment cover

Connections

1. Press and slide the back cover to open the

2 Insert two AAA size hatteries. Make sure the

3156794

CONFORMS TO UL STD. 60065 US CERTIFIED TO CSA STD, C22.2 NO. 60065

Intertek

Ver.02 Rev. 31/03/2020

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class 8 digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure.
- -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from tha -- Consult the dealer or an experienced radio/TV technician for help.
- or. Iver. It from that to which the receiver is connected. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems. FCC RF Radiation Exposure Statement Sution: To manintain compliance with the FCC'S RF exposure guide product at least 20cm from nearby persons, working ambient 0 $^{\circ}$ $^{\circ}$ -35 $^{\circ}$, voltage input range 100V~240V and $^{\circ}$ -240V and $^{\circ}$
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.
- Varning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could old the user's authority to operate the equipment. CAUTION: Risk of explosion if the battery is replaced by an incorrect type;
 CAUTION: replacement of a battery with an incorrect type that can defeat a safeguard;
 CAUTION: disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in

AUTION: disposal of a valuery into the or in the very many control of an explosion or explosion.
CAUTION: leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

CAUTION: a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;

Where a plug on the power supply cord is used as the disconnect device, the installation instructions shall state that for pluggable equipment, the socket-outlet shall be easily accessible. For pluggable equipment intended for installation by an ordinary person, the installation instructions shall be made available to the ordinary person.


2. When soundbar shut down or enter the standby mode, subwoofer also enter the standby mode automatically, the light is off. 3. If the subwoofer is not connected, display shows CHK SUB flashing in 20s and then back to the current channel, the fourth and fifth meters show"----"in 10S.


Ver.02 Rev. 31/03/2020


4. In case of subwoofer automatic pairing fails with soundbar, you should attempt to in case of subwooder automatic pairing allis with soundbar, you should attempt to manual pairing, Hold Source and Vol+ on the soundbar together 3S,display CNCT SUB fast flashing, then hold PAIR button on the subwoofer 3S, the subwoofer pairing and success after about 2S.

Using the AUX Connection


Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV's audio output port to the soundbar's AUX IN port.

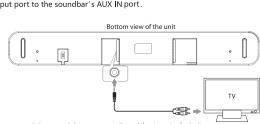

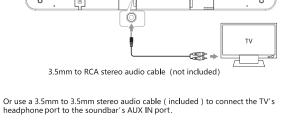

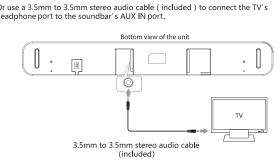



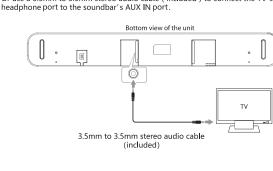

Ver.02 Rev. 31/03/2020

onn.

Thank you for purchasing your new onn. 5.1.2 Atmos Soundbar We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so

 


www.walmart.com

Ver.02 Rev. 31/03/2020


according to local regulations The following items are included:

Wall Bracket x 2



Length 4.92ft

Ver.02 Rev. 31/03/2020

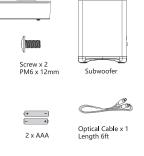

User Manual Quick Start Guid

Lan Cable x

Ver.02 Rev. 31/03/2020

Product Overview

Front View

SAFETY

GUIDELINES

1. Standby indicator 2. Front panel display 3. Remote control sensor Remote control sensor: Receives signal from the remote control. **Top View** 1 2 3 4 5

00000 2. D Source 3. VOL-Switches the unit between ON and OFF modes.
 Press to change source input from ARC→HDMI 1→HDMI 2→HDMI 3→BT →AUX→OPTICAL→USB.

3. Decreases the volume.
4. Increases the volume.
5. Play/Pause function in USB/BT/Wifi(AirPlay 2) Mode.

Bottom View

Ver.02 Rev. 31/03/2020

5. HDMI OUT(eARC) PORT

8. HDMI IN 1 PORT

6. HDMI IN 3 PORT

Remote Control 1. 也 Power

4. **On/Off Switch** Switch the subwoofer On or Off

Switches the unit between ON and OFF modes. Mute the sound or resume the sound 3. | ← / → Previous/Next

4. ▲/▼ Up/Down
In channel control, Increase/Decrease the

volume for Treble/FL&FR/Center/Top L&R/Side L&R 5. ▶II Play/Pause Press to start play/pause in USB/BT/WIFI playback

6. **\$ Bluetooth mode**Press to enter Bluetooth mode, in this mode, long press to enter Bluetooth pairing mode

Press to Increase/Decrease volume, hold to Increase/decrease volume continually 8. - Source to change source input from Optical \rightarrow USB \rightarrow AUX

Press to Increase/Decrease BASS level 10. Sound mode

Press to change sound mode from Standard → Movie → Music 11. HDMI mode Press to change HDMI source, ARC→ HDMI 1→ HDMI 2→ HDMI 3

12. **辛 Channel controls** Press to enter each channel(FL&FR....) Ver.02 Rev. 31/03/2020

Subwoofer connection

Connect the AC cord to the subwoofer. Turn on the unit. The orange light on the rear panel will flash to indicate pairing mode, light will become solid once the subwoofer is

1. When AC cord insert AC socket, open the rocker switch on the rear panel, the orange light which is on the rear panel, flashing to show pairing, it will become solid light when subwoofer connect with soundbar automatically.


Ver.02 Rev. 31/03/2020

Using the OPTICAL Connection

Use an OPTICAL cable (included) to connect the TV's OPTICAL port to the soundbar's OPTICAL port. OPTICAL cable (included

Using the HDMI Connection

Connecting with a TV If you connect this unit to a TV that supports HDMI CEC and eARC (Enhanced Audio Return Channel), you can enjoy the TV audio through the speakers of this unit without connecting the optical cable. The eARC function enables an HDMI capable TV to send the audio stream to HDMI

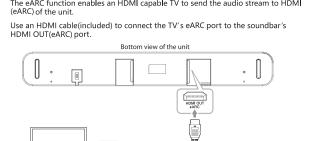

Connecting with a TV and other devices 1. Connect HDMI IN port on the back of the unit to HDMI OUT port on the external device such as PS4 XBOX DVD player etc.
2. Connect HDMI OUT (eARC) port on the back of the unit to HDMI IN (eARC) port 3. Press the Source button repeatly on the soundbar or press the HDMI button on the remote control to select HDMI 1,HDMI 2,HDMI 3 or ARC mode.

-HDMI cable (included)

When input a Non-Dolby format audio file, "PCM" will appear in the front display. 11 Ver.02 Rev. 31/03/2020

Factory Default Resetting


Remote Control Operation Range

• Holding vol-&vol+ at the same time for 3s to reset the soundbar, and display RESET,

Handling the Battery Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property. Only use the battery type indicated in this manual. Do not install new batteries with used ones and do not mix different types of batteries.

Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local Handling the Remote Control

Do not drop the remote control. Do not allow anything to impact the remote control Do not place the remote control on a wet object. Do not place the remote control under direct sunlight or near sources of excessive heat Remove the battery from the remote control when not in use for a long period of time, as corrosi battery leakage may occur and result in physical injury, and / or property damage, and / or fire. When the battery is exhausted, the remote control will not function.

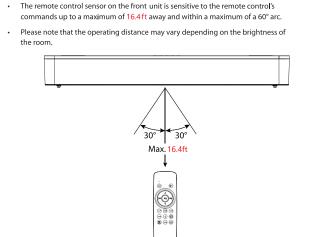


Ver.02 Rev. 31/03/2020

HDMI 3 HDMI 2 (A)Included (B)Not included

Using the LAN connection

- Use an LAN cable $\,$ (included) $\,$ to connect the router's LAN port to the soundbar's LAN $\,$ The following illustration is the example for connection of the system to your home network. • Your macbook,iphone or ipad need to be connected to the same network as that of the system, then you can play music with AirPlay 2.

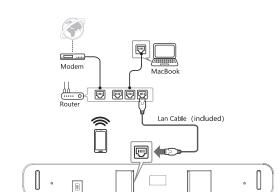

Ver.02 Rev. 31/03/2020 **Placement** Place your Soundbar and Subwoofer as shown below.

Note: Soundbar should not block the TV's remote control sensor.

Wall Mounting

Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar. Additional tools (not included) are required for the installation

Drill 4 parallel holes(@8mm each according to wall type) in the wall. The distance between the left and right holes should be 814mm. And the distance between the upper and lower holes should be 20mm.

Ver.02 Rev. 31/03/2020

 
USB Playback

1. AUX IN PORT

7. HDMI IN 2 PORT

4. USB PORT

Play music
 Use a USB flash disk connect to USB IN port of soundbar.



Bluetooth Connection 1. When unit power on press 1 on soundbar change to Bluetooth mode, display "BT READY "lighting los.In this mode, long press ⊕ 3s to enter Bluetooth pairing mode. If hold ⊕ on the soundbar 5s,will clear previous paired devices and goes to pairing

2. When unit power on,press \$ on remote control change to Bluetooth mode, display "BT READY" lighting 10s. In this mode, long press to enter Bluetooth pairing mode, the display will show "PAIRING". 3. Select the Bluetooth search function on your device, your device should discover the soundbar which is called onn.5.1.2 Soundbar.

4. Select onn 5.1.2 Soundbar, your device is paired with the soundbar when display 5. After the speaker and your device are paired, you can stream music from your device to the Soundbar.

AirPlav 2 To control this AirPlay 2 enabled speaker, iOS 11.4 or later is required on your Set up your device in the Apple Home app located on your iPhone or iPad

 Connect your iOS device to the WiFi
 Follow the Apple Home app configure process I Open Apple Home app. □ Click the "+" icon , select "Add Accessory"
 □ Click "Don't Have a Code or Can't Scan"

Waiting for network connection. VII After networking successfully, Accessory Added Go to My Home, you can find there has a new device that you added.

Search the device and when you find the device, click the device name.
When prompted "Add Accessory to Network" click Allow Ver.02 Rev. 31/03/2020



ory has been designed to work specifically with the technology Use of the Works with Apple badge means that an access identified in the badge and has been certified by the dev **Selecting the Sound Mode** You can easily enjoy pre-programmed sound modes that are tailored to different kinds

unit sources. s sound mode button repeatly on the remote control until the sound mo				
	On disp l ay	Description		
Standard	STD	Plays audio as it is received from the source		
Movie	MOVIE	Enhances movie soundtracks and effects for a much more realistic viewing experience		
Music	MUSIC	Enhances instruments and tracks when listening to music or content		

Ver.02 Rev. 31/03/2020

Specification

Sound Mode		Input	Output
Standard	HDMI AUX Optical	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch
		5.1Ch	5.1.2Ch
		7.1Ch	5.1.2Ch
	Bluetooth USB AirPlay	2.0Ch	3.1Ch
		5.0Ch	3.1Ch
		5.1Ch	3.1Ch
		7.1Ch	3.1Ch
Movie	HDMI AUX Optical	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch
		5.1Ch	5.1.2Ch
		7.1Ch	5.1.2Ch
Music	HDM I AUX	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch

Optical 5.1Ch 7.1Ch

Note: Non-Dolby Audio source may not support sound mode adjustment.

General Operation When you first connect the unit to the Power outlet, the unit will be in OFF mode. NO display on the LED screen. 1.Press θ on the unit or the remote control to switch the unit to ON mode .The screen display "WELCOME", the LED display will shut down without any operation in 10S, enter the dormant state, only the fifth meter of the screen retain the word "----".

At same time, the red indicator slow flash to indicate wifi starting up lasting 15 minutes

if network not set up and then off.And if it is set up before that,the indicator should be switched off as well once the device has been joined to the wifi network. 2.Press 🖰 again to shut down. The screen will display "GOODBYE" then off, system will go to standby mode. In standby mode there is a red led indicator will lit on. 3.If no input .no operation and silent state after 10 minutes, soundbar goes into

4.Disconnect the mains plug from the Power outlet if you want to switch the unit off

Optical: the screen display "OPTICAL" HDMI: the screen display "HDMI 1", "HDMI 2" or "HDMI 3" ARC: the screen display "ARC"

LED Screen activity

BluetoothBluetooth mode: the screen display "BT"

AUX IN: the screen display "AUX"

Bluetooth is pairing: the screen display "PAIRING" Bluetooth is paired: the screen display "PAIRED" Bluetooth disconnected:the screen display "UNPAIRED"

Adjusting the Volume MASTER VOLUME Press VOL +/- on the unit or the remote control to adjust the volume (Volume range Min. ,1 to 39,Max)

If you wish to turn the sound off, press \(\Pi\) on the remote control. Press \(\Pi\) again to $\begin{array}{ll} \textbf{SUB VOLUME} \\ \textbf{Short press} & \text{'SUB+'} \ / \ '\text{SUB-'} & \text{on the remote control to adjusting SUB volume} \\ \textbf{(Volume range Min.,-9 to 9,Max)} & . \end{array}$

fou can adjust the sound level of treble and other Channel volume. 1. Press 幸 button repeatedly on remote to select the channel you want to adjus 2. Press ▲/▼ button to adjust the sound level.				
Channel	Display	Range		
Treble	TREB	Min.,-9 ~ 9,Max.		
Front left and right channels	FLnR	Min.,-5 ~ 5,Max.		
Top left and right channels	TLnR	Min.,-5 ~ 5,Max.		
Side left and right channels	SLnR	Min.,-5 ~ 5,Max.		

Ver.02 Rev. 31/03/2020

Center channel

Source change

• WiFi streaming: Once detect signal from AirPlay 2 , auto switch to WiFi mode to play music. In standby mode, still can detect signal and wake up to stream

___

• Bluetooth: In Bluetooth mode, once unit be paired with device, can play music, if WiFi is playing music, stop or pause WiFi playing first.

CEN

The above mark is in compliance with the Waste Electrical and Electronic Equipment The above mark is in Compinate with the waste electrical and electronic equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg. Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

Min.,-5 ~ 5.Max

Ver.02 Rev. 31/03/2020

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.
We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your

All trademarks are the property of their respective owners and all rights are acknowledged. Warranty

Walmart, Inc. Limited Warranty

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT, NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., IT'S AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF

REPAIR ON REPLACEMENT AS PROVIDED UNDER HITS WARKANT IS THE ACKLUSIVE REMELETY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE

 Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may no apply to you.

This warranty gives you specific legal rights, and you also may have other rights that vary from state If you purchased your unit outside the United States or seek warranty coverage outside the

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Wall (Front view) 2. Firmly fix 1 dowel D10.2*L30mm (not included) into each hole in the wall if necessary.

3. Insert 1 screw TA 4*35mm (not included) into each dowel. Ensure that the wall brackets (included) is securely mounted .And insert 1 screw PM 6*12mm (included) into each threaded hole at the bottom of the soundbar.

Maintenance **Cleaning the Unit**

Software Uptate

Ensure the unit is fully unplugged from the mains socket before cleaning. To clean the unit, wipe the case with a slightly moist, lint-free cloth. Do not use any cleaning fluids containing alcohol, ammonia or abrasives. Do not spray aerosol at or near the unit.

Once the product is connected to internet, the system will automatically run a

software check. Should an update be needed, the product will update automatically. The bar will display "UPDATING" on the front display while this is occurring.

Ver.02 Rev. 31/03/2020

Caution:Ensure that the front panel should not face the wall during installation.

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table

No power.	Ensure the AC cord is connected securely at both ends. Make sure that the ON mode is selected.
The remote control is not functioning.	-Use the remote control near the unit. -Point the remote control at the remote sensor on the unitReplace the battery in the remote control with a new oneRemove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.
Cannot connect to Wi-Fi	-Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devicesMake sure that the speaker and your device shar the same networkMake sure that your router/modem is on and that you are within range of it.
Cannot find "onn. 5.1.2 Soundbar" on my Bluetooth - device.	Ensure the Bluetooth function is activated on your Bluetooth device. Ensure you have paired your unit with the Bluetooth device.
Sound is not produced.	Adjust the volume. When you are using connection with a external device (set top box, Bluetooth device etc.), adjust volume level of the device. Press must be button or adjust the volume level to cancel the mute function. Check the input source and select the correct input source.
No woofer sound	Plug the power cord of subwoofer into the wall outlet securely. Connect the unit and the subwoofer.
The USB device is not recognized	Make sure that the USB device is securely connected to the (USB) port. Check to see if the USB device or a cable is damaged.
Cannot connect the unit to the Internet.	Check the wired or wireless LAN connection. Restart the router or wireless LAN router.

Specifications

internal power supply input 100-240V AC 50/60HZ US standard eak Power 420W ower Consumption 106W Soundbar oeaker Output Power 7 x 15W (RMS) et Weight 6.12kg (W)41.8in x(D)5.66in x(H)3.6in w/rubber feet internal power supply input 100-240V AC 50/60HZ US standar ower supply Peak Power 400W ower Consumption 108W peaker Output Pov 7.4kg let Weight

(W)10.2in x (D)10.2in x (H)13in w/rubber feet

(The remote control supplied with)This product contains batteries. If the batterie

Do not dispose of batteries with normal household waste.

 $Features \ and \ specifications \ are \ subject \ to \ change \ without \ prior \ notice.$

is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away If you think batteries might have been swallowed or placed inside any part of the body, seek Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations.

For more information, please contact the local authority or your retailer where you purchased the

WARNING

Do not ingest the battery, Chemical Burn Hazard

Warning:

Ver.02 Rev. 31/03/2020

 $Changes \ or \ modifications \ to \ this \ unit \ not \ expressly \ approved \ by \ the \ party \ responsible \ for \ compliance \ could \ void \ the \ user's \ authority \ to \ operate \ the \ equipment.$

Ver.02 Rev. 31/03/2020

Ver.02 Rev. 31/03/2020

