

Logitech® Wireless Combo MK345




 



Logitech Wireless Combo MK345

English	Suomi
Deutsch	Ελληνικά
Français	По-русски
Italiano	Magyar
Español 19	Česká verze59
Português	Po polsku 63
Nederlands 27	Slovenčina 67
Svenska	Türkçe
Dansk	لعربية
Norsk 70	

Know your product

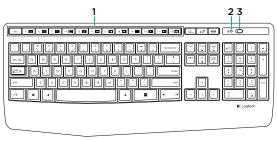



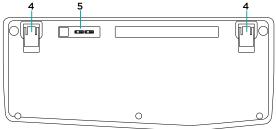






- 1. F-keys
- 2. Caps-lock LED
- 3. On/off power switch
- 4. Tilt-legs
- 5. Battery door

- 6. Scroll wheel
- 7. Battery indicator
- 8. Receiver
- 9. Product documentation




Setting up your keyboard and mouse

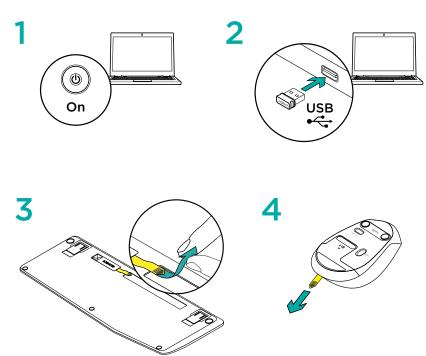

Keyboard F-keys

User friendly enhanced F-keys let you launch applications easily. To use the enhanced functions, first press and hold the key, then press the F-key you want to use.

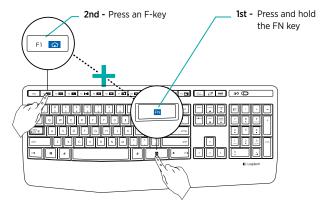

FN + F1 = 🚹	Launch Web browser	FN + F7 = ►II	Play/pause track
FN + F2 = 🖂	Launch Email application	FN + F8 = ₩	Next track
FN + F3 = Q	Search	FN + F9 = 📈	Mute
FN + F4 = 🖽	Launch calculator	FN + F10 = 📢	Volume down
FN + F5 = 🎵	Launch media player	FN + F11 = ◄ »	Volume up
FN + F6 = ₩	Previous track	FN + F12 = 👩	Print screen

Tip: You can use the Logitech SetPoint™ software to reprogram F1, F2, and F4 with your preferred features

Visit Product Support

There's more information and support online for your product. Take a moment to visit Product Support to learn more about your new keyboard and mouse.

Browse online articles for setup help, usage tips, or information about additional features. If your keyboard has optional software, learn about its benefits and how it can help you customize your product.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Support, you'll find a wide selection of content:

- Tutorials
- · Troubleshooting
- Support community
- · Software downloads
- · Online documentation
- · Warranty information
- Spare parts (when available)

Go to www.logitech.com/support/mk345

Troubleshooting

Keyboard and mouse not working

- Check your keyboard and mouse are powered on.
- Check that the receiver is securely plugged into a USB port on your computer.
- If the receiver is plugged into a USB hub, try plugging it directly into your computer.
- Try plugging the receiver into a different USB port closer to your keyboard and mouse.
- Remove any metallic objects between the receiver and your keyboard and mouse.
- Check that you pulled the battery tab out of your keyboard and mouse.
- Check the orientation of the batteries.
 The mouse uses one AA alkaline battery and the keyboard uses two AAA alkaline batteries.

What do you think?

Please take a minute to tell us. Thank you for purchasing our product.

www.logitech.com/ithink