



PN00041870

E5508

Hasbro and all related trademarks and logos are trademarks of Hasbro, Inc. © 2019 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. Conservez cette information pour référence ultérieure. © 2019 Hasbro. Tous droits réservés.
HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2, US/CANADA TEL. 1-800-255-5516.

CAN ICES-3 (B)/NMB-3(B)

CAUTION:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Consult the dealer or an experienced radio/TV technician for help.
- Increase the separation between the equipment and the receiver.
- Reorient or relocate the receiving antenna.

the user is encouraged to try to correct the interference by one or more of the following measures:
equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this
erates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment gen-
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause

FCC STATEMENT


AGES 3+



CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

Note: Play on a smooth, flat, hard surface.

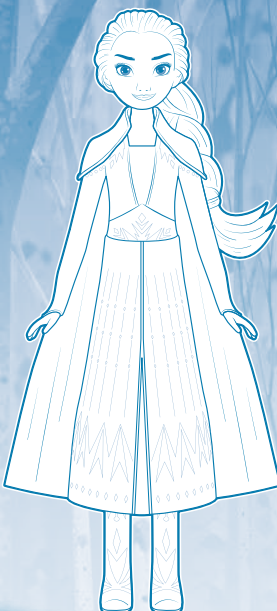


Disney
FROZEN II
Talk & Glow Olaf & Elsa




1

Move switch from 0 to 1.

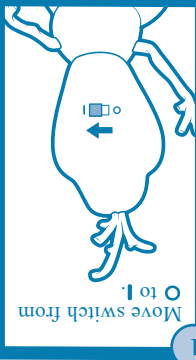


2

Nudge Olaf to wake him up. Elsa must face Olaf and dolls must be within approximately 3 ft. of each other for features to function.

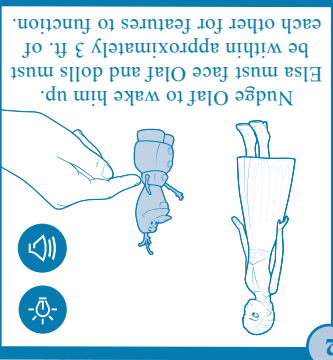


3

Lift Elsa's right arm, and Olaf moves, talks, and glows.




4

Lower her arm and raise it again to activate a different phrase from Olaf. He will also move and glow.



5

After 1 minute of inactivity, the dolls will enter sleep mode.

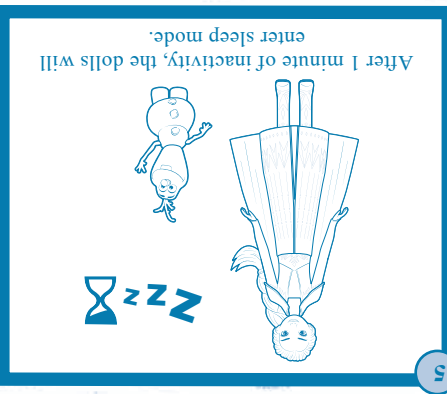

1. As with all small batteries, the batteries used with this product should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision.
3. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

CAUTION: IMPORTANT: BATTERY INFORMATION

TO INSERT BATTERIES
5x 1.5V AAA ALKALINE BATTERIES
REQUIRED
Use a Phillips/cross head screwdriver
(not included).

