 


GARMIN®

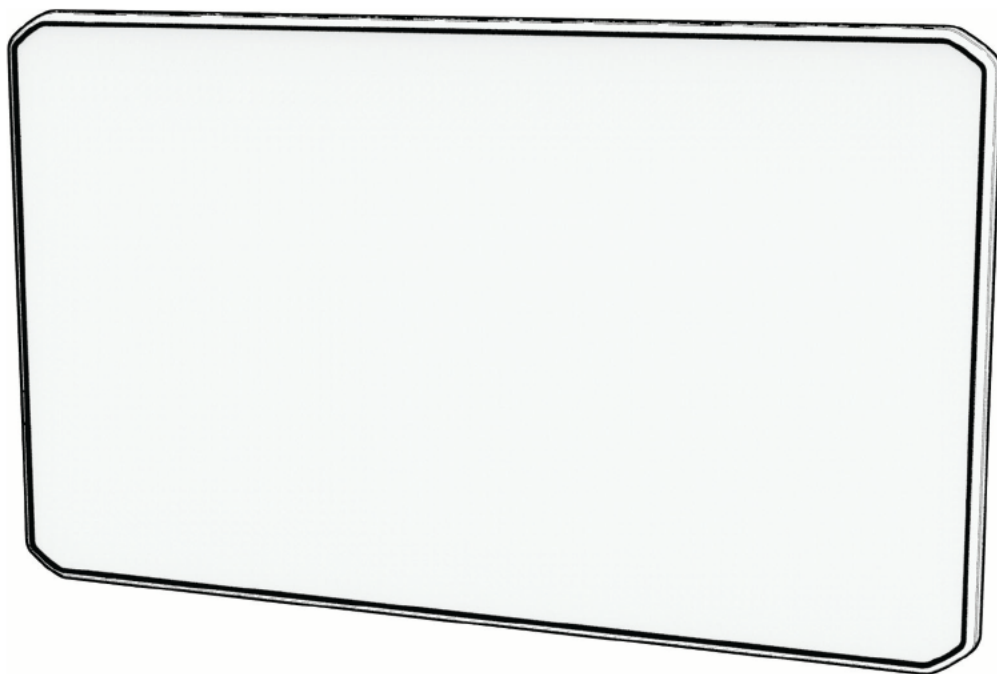

B04450

Owner's Manual

© 2024 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

BC™, dēzl™, dēzlCam™, Garmin eLog™, Garmin Express™, and myTrends™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Android™ is a trademark of Google LLC. Apple® and Mac® are trademarks of Apple Inc, registered in the U.S. and other countries. The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such word mark or logo by Garmin is under license. CAT Scale® is a registered trademark of CAT Scale Company. microSD® and the microSDHC logo are trademarks of SD-3C, LLC. Love's® and Love's Travel Stops® are registered trademarks of Love's Travel Stops & Country Stores, Inc. Pilot Flying J™ and Pilot Flying J Travel Centers™ are trademarks of Pilot Travel Centers LLC and its affiliate companies. PrePass® is a trademark of the PrePass Safety Alliance. Tripadvisor® is a registered trademark of TripAdvisor LLC. TruckDown® is the trademark of TruckDown Info International, Inc. Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Wi-Fi® is a registered trademark of Wi-Fi Alliance Corporation.

Table of Contents

Getting Started..... 1

dēzl™ Device Overview.....	1
Installing the Dash Camera Memory Card.....	2
Mounting Considerations.....	2
Mounting and Powering the dēzl Device in Your Vehicle.....	3
Turning the Device On or Off.....	4
Acquiring GPS Signals.....	5
Home Screen.....	5
Opening an App.....	6
Status Bar Icons.....	7
Using the Touchscreen.....	7
Adjusting the Screen Brightness.....	7
Adjusting the Volume.....	7

Vehicle Profiles..... 8

Adding a Vehicle Profile.....	8
Car Profile.....	8
Switching the Vehicle Profile.....	8
Changing Your Trailer Information.....	8
Editing a Vehicle Profile.....	9

Dash Cam..... 9

Aligning the Camera.....	9
Dash Cam Recording.....	9
Saving a Dash Cam Recording.....	10
Stopping or Starting Dash Camera Recording.....	10
Turning Audio Recording On or Off..	10
Viewing Videos and Photos.....	10
Videos on Your Computer.....	10
Deleting a Video or Photo.....	10
Vault Storage.....	11
Upgrading Your Vault Subscription..	11
Sharing a Video.....	11
Editing and Exporting a Video.....	11
Disabling a Shared Video Link.....	11
Removing a Video from the Vault....	12

Driver Awareness Features and Alerts..... 12

Enabling or Disabling Driver Alerts.....	13
Red Light and Speed Cameras.....	13

Finding and Saving Locations..... 13

Finding a Location Using the Search Bar.....	14
Finding an Address.....	14
Location Search Results.....	15
Changing the Search Area.....	16
Points of Interest.....	16
Finding Trucking Points of Interest..	16
Finding TruckDown® Points of Interest.....	16
Finding CAT Scale® Locations.....	17
Tripadvisor.....	17
Foursquare.....	17
Finding a Location by Category.....	17
Parking.....	18
Finding Truck Parking.....	18
Using Truck Parking Europe.....	18
Finding Parking Near Your Current Location.....	18
Search Tools.....	18
Finding an Intersection.....	18
Finding a Location Using Coordinates.....	18
Viewing Recently Found Locations.....	18
Clearing the List of Recently Found Locations.....	18
Viewing Current Location Information.....	19
Finding Emergency Services and Fuel.....	19
Getting Directions to Your Current Location.....	19
Adding a Shortcut.....	19
Removing a Shortcut.....	19
Saving Locations.....	19
Saving a Location.....	19
Saving Your Current Location.....	20
Editing a Saved Location.....	20
Deleting a Saved Location.....	20

Navigating to Your Destination..... 20

Routes.....	20
Starting a Route.....	21
Starting a Route by Using the Map...	21
Going Home.....	21
Your Route on the Map.....	22
Active Lane Guidance.....	23

Viewing Popular Truck Paths on the Map.....	23
Viewing Turns and Directions.....	23
Viewing the Entire Route on the Map.....	23
Planning Your Arrival.....	24
Arriving at Your Destination.....	24
Completing a Truck Route.....	24
Parking Near Your Destination.....	25
Changing Your Active Route.....	25
Adding a Location to Your Route.....	25
Shaping Your Route.....	25
Taking a Detour.....	26
Changing the Route Calculation Mode.....	26
Stopping the Route.....	26
Using Suggested Routes.....	26
Avoiding Delays, Tolls, and Areas.....	26
Avoiding Traffic Delays on Your Route.....	26
Avoiding Road Features.....	26
Avoiding Environmental Zones.....	27
Custom Avoidances.....	27

Using the Map..... 28

Map Tools.....	28
Viewing a Map Tool.....	29
Up Ahead.....	29
Viewing Upcoming Locations.....	29
Customizing the Up Ahead Categories.....	29
Cities Ahead.....	29
Viewing Upcoming Cities and Exit Services.....	29
Road Restrictions on the Map.....	30
Warning and Alert Symbols.....	30
Restriction Warnings.....	31
Road Condition Warnings.....	31
Alerts.....	32
Trip Information.....	32
Viewing Trip Data from the Map.....	32
Viewing Your Trip History.....	32
Resetting Trip Information.....	32
Viewing Upcoming Traffic.....	32
Viewing Traffic on the Map.....	32
Searching for Traffic Incidents.....	33
Customizing the Map.....	33

Customizing the Map Layers.....	33
Changing the Map Data Field.....	33
Changing the Map Perspective.....	33

Live Services, Traffic, and Smartphone Features..... 33

Pairing with Your Smartphone.....	34
Going to an Address or Location Using the dēzl App.....	34
Smart Notifications.....	34
Receiving Notifications while Viewing the Map.....	34
Hands-Free Calling.....	35
Placing a Call.....	35
Placing a Call Using Voice Dial.....	35
Receiving a Call.....	35
Using In-Call Options.....	35
Enabling or Disabling Bluetooth Features.....	35
Showing or Hiding App Notifications.....	36
Disconnecting a Bluetooth Device.....	36
Deleting a Paired Phone.....	36

Traffic..... 36

Receiving Traffic Data Using Your Smartphone.....	36
Viewing Traffic on the Map.....	36
Searching for Traffic Incidents.....	36

Vehicle and Driver Tools..... 37

Break Planning.....	37
Taking a Suggested Break.....	37
Starting the Break Timer.....	37
Pausing and Resetting the Break Timer.....	37
Adjusting Drive Hours.....	37
Adjusting the Daily Driving Limit.....	37
Garmin eLog.....	38
Setting Up Garmin eLog Features On Your dēzl Device.....	38
Viewing Garmin eLog Information on Your dēzl Device.....	38
Viewing Garmin eLog Diagnostic and Malfunction Events.....	38
IFTA.....	38
Entering Fuel Data.....	39

Editing Fuel Data.....	39
Viewing and Exporting a Jurisdiction Summary.....	39
Editing and Exporting Trip Reports..	39
Viewing Exported Jurisdiction Summaries and Trip Reports.....	40
Logging Service History.....	40
Adding Service Categories.....	40
Deleting Service Categories.....	40
Renaming Service Categories.....	40
Deleting Service Records.....	40
Editing a Service Record.....	41
PrePass®.....	41
Loyalty Programs.....	41

Using the Apps..... 41

Viewing the Owner's Manual on Your Device.....	41
Viewing the Truck Map.....	41
Route Planner.....	41
Planning a Route.....	42
Editing and Reordering Locations in a Route.....	42
Navigating to a Saved Route.....	42
Editing and Saving Your Active Route.....	42
Viewing Previous Routes and Destinations.....	42
Viewing the Weather Forecast.....	43
Viewing the Weather Radar.....	43
Viewing the Wind Forecast.....	43
Viewing Weather Near a Different City.....	43
Music Player.....	44
Adding the Music Player Tool to the Map.....	44
Garmin PowerSwitch™ App.....	45
Activating a Power Switch.....	45
Turning Off All Switches.....	45
Customizing a Button.....	46
Assigning a Switch to a Control Input.....	46
Adding a Custom Layout.....	46
Routines.....	47

Voice Command..... 48

Tips for Speaking to the Device.....	48
--------------------------------------	----

Launching Garmin Voice-Activated Navigation.....	49
Checking Your Arrival Time.....	49
Placing a Phone Call Using Your Voice.....	49
Changing Device Settings Using Your Voice.....	49

Settings..... 49

Phone Settings.....	49
Wi-Fi Settings.....	49
Connecting to a Wireless Network...	50
Map and Vehicle Settings.....	50
Enabling Maps.....	50
Navigation Settings.....	50
Traffic Settings.....	51
Driver Assistance Settings.....	51
Dash Cam Settings.....	51
Wireless Camera Settings.....	51
Display Settings.....	52
System Settings.....	52
Device Settings and Product Information.....	52
Resetting Data and Settings.....	53
Restoring Settings.....	53

Device Information..... 53

Viewing E-label Regulatory and Compliance Information.....	53
Specifications.....	53
Charging the Device.....	53

Device Maintenance..... 54

Garmin Support Center.....	54
Updating Maps and Software Using a Wi-Fi Network.....	54
Updating Maps and Software with Garmin Express.....	55
Installing Garmin Express.....	56
Charging the Device.....	56
Device Care.....	56
Cleaning the Outer Casing.....	56
Cleaning the USB Port.....	57
Cleaning the Touchscreen.....	57
Resetting the Device.....	57
Removing the Device, Mount, and Suction Cup.....	57

Removing the Mount from the Suction Cup.....	57	Connecting the Device to Your Computer.....	66
Removing the Suction Cup from the Windshield.....	57	Transferring Data From Your Computer.....	66
Troubleshooting.....	57	Purchasing Additional Maps.....	67
My video recordings are blurry.....	57	Purchasing Accessories.....	67
My memory card has degraded and needs to be replaced.....	58		
My video recordings are choppy or incomplete.....	58		
The suction cup will not stay on my windshield.....	58		
My device is not acquiring satellite signals.....	58		
The device does not charge in my vehicle.....	58		
My battery does not stay charged for very long.....	59		
My device does not connect to my phone.....	59		
Appendix.....	59		
Viewing GPS Signal Status.....	59		
Garmin PowerSwitch.....	59		
Mounting Considerations.....	59		
Mounting the Device.....	60		
Opening the Front Cover.....	61		
Connecting Accessories.....	62		
Connecting a Control Input.....	62		
Connecting the Device to Vehicle Power.....	63		
Pairing with a Garmin Navigation Device.....	63		
Garmin PowerSwitch Specifications.....	64		
Troubleshooting.....	64		
Wireless Cameras.....	64		
Pairing a BC™ 50 Camera with a Garmin Navigation Device.....	65		
Viewing the Backup Camera.....	65		
Data Management.....	66		
About Memory Cards.....	66		
Formatting the Dash Cam Memory Card.....	66		
Installing a Memory Card for Maps and Data.....	66		

 
Getting Started

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- Update the maps and software on your device ([Updating Maps and Software Using a Wi-Fi Network](#), page 54).
- Mount the device in your vehicle and connect it to power ([Mounting Considerations](#), page 2).
- Acquire GPS signals ([Acquiring GPS Signals](#), page 5).
- Adjust the volume ([Adjusting the Volume](#), page 7) and display brightness ([Adjusting the Screen Brightness](#), page 7).
- Set up a vehicle profile for your truck ([Adding a Vehicle Profile](#), page 8).
- Navigate to your destination ([Starting a Route](#), page 21).

dēzl™ Device Overview

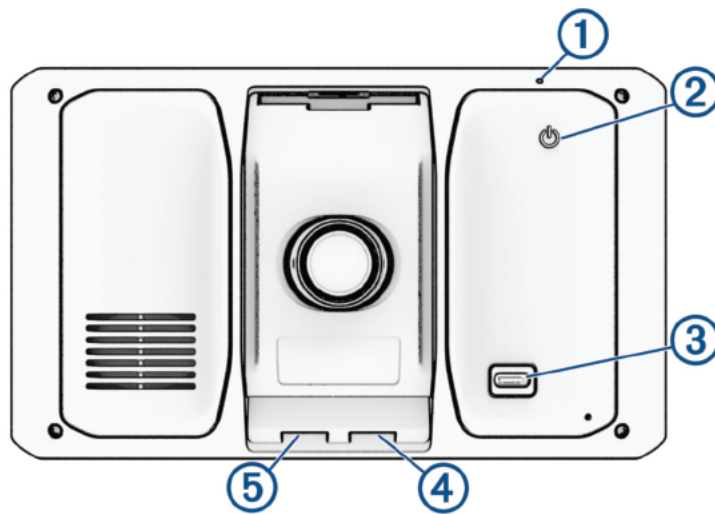

①	Microphone for Voice Command or hands-free calling
②	Power button
③	USB power and data port
④	Camera memory card slot
⑤	Map and data memory card slot

 
Installing the Dash Camera Memory Card

Before the device can record video from the integrated dash camera, you must install a camera memory card. The camera requires a microSD® memory card from 4 to 64 GB with a speed rating of Class 10 or higher. You can use the included memory card, or you can purchase a compatible memory card from an electronics supplier.

NOTE: A memory card is included so your device is ready to use out of the box. All memory cards have a limited life and must be replaced periodically. Your device alerts you when the memory card has exceeded its useful life and needs to be replaced. You can follow the troubleshooting tips to help extend the useful life of the memory card (*My memory card has degraded and needs to be replaced*, page 58).

- 1 Insert a memory card ① into the camera memory card slot ②.

NOTE: If you install the memory card into the incorrect slot, the camera cannot record video.

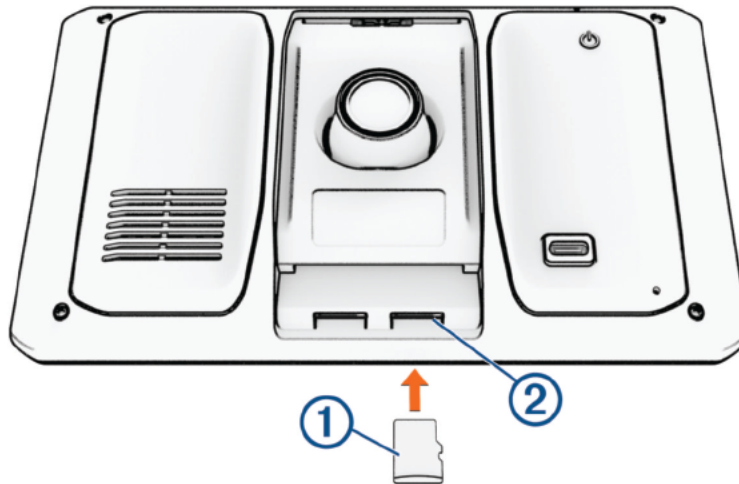

- 2 Press it in until it clicks.

Mounting Considerations

- Do not mount the device in a location that obscures the driver's view of the road.

WARNING

It is your responsibility to ensure the mounting location complies with all applicable laws and ordinances, and does not block your view of the road during the safe operation of your vehicle.

- Choose a location that allows you to route the power cable safely.

WARNING

When installing the device in a vehicle, install the device and power cable securely so they do not interfere with the vehicle operating controls. Interference with the vehicle operating controls can result in a collision, which could result in injury or death.

- Choose a location that is within easy reach.
- Choose a location that provides the dash cam with a clear view of the road.

You should verify the vehicle's windshield wipers clear the windshield area in front of the dash cam, and you should avoid placing the dash cam behind a tinted area of the windshield.

- Thoroughly clean the windshield before installing the mount.

 
Mounting and Powering the dēzl Device in Your Vehicle

WARNING


This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

Before you use your device on battery power, you should charge it.


- 1 Press the suction cup to the windshield, and flip the lever ① back toward the windshield.

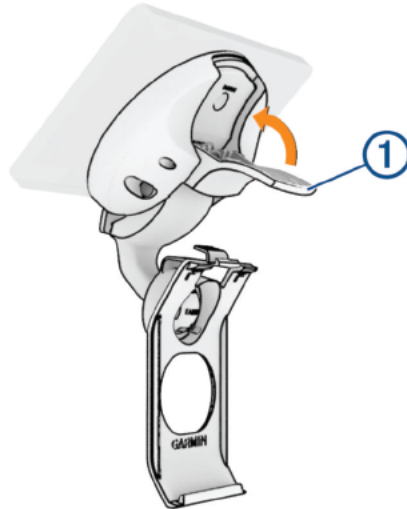

 - 2 Plug the vehicle power cable into the USB port ② on the device.

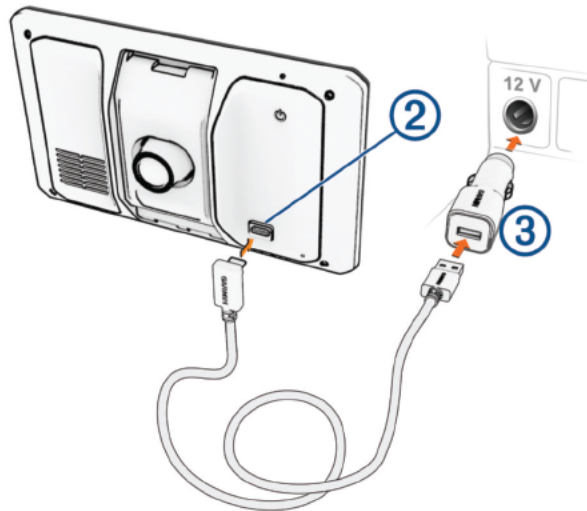


 - 3 Plug the other end of the vehicle power cable ③ into a power outlet in your vehicle.
- 4 Fit the tab on the bottom of the mount into the slot ④ on the back of the device, and press the device into the mount until it clicks.

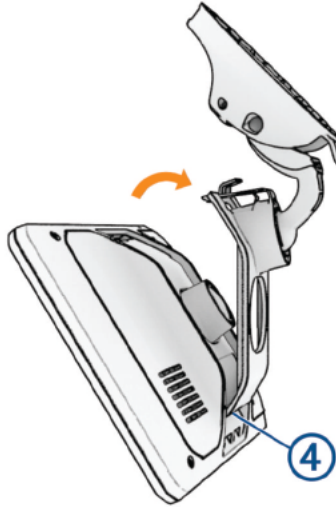

Turning the Device On or Off

 - To turn the device on, press the power button ①, or connect the device to power.

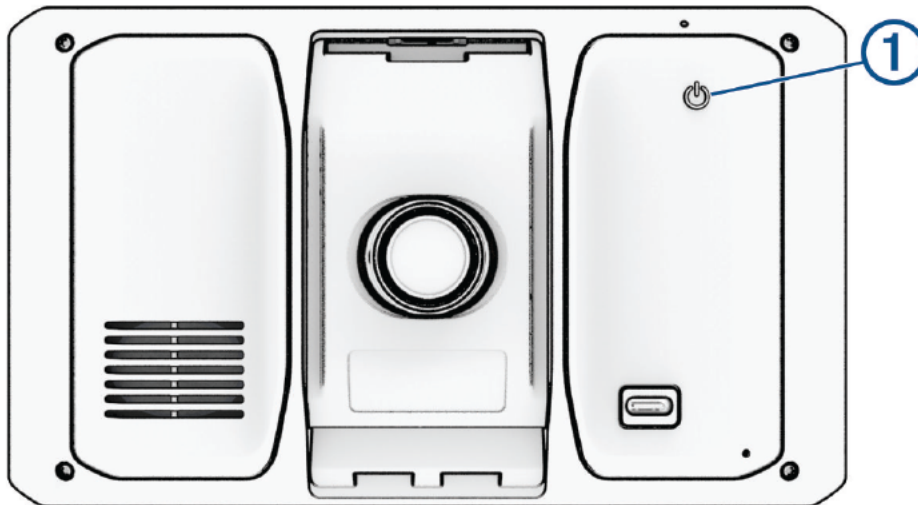

- To put the device in power saving mode, press the power button while the device is on. While in power saving mode, the screen is off and the device uses very little power, but it can wake instantly for use.
TIP: You can charge your device faster by putting it in power saving mode while charging the battery.
- To turn off the device completely, hold the power button until a prompt appears on the screen, and select **Off**. The prompt appears after five seconds. If you release the power button before the prompt appears, the device enters power saving mode.

 
Acquiring GPS Signals

When you turn on your navigation device, the GPS receiver must collect satellite data and establish the current location. The time required to acquire satellite signals varies based on several factors, including how far you are from the location where you last used your navigation device, whether you have a clear view of the sky, and how long it has been since you last used your navigation device. The first time you turn on your navigation device, it may take several minutes to acquire satellite signals.

- 1 Turn on the device.
- 2 Wait while the device locates satellites.
- 3 If necessary, go to an open area, away from tall buildings and trees.

 in the status bar indicates the satellite signal strength. When at least half the bars are filled, the device is ready for navigation.

Home Screen

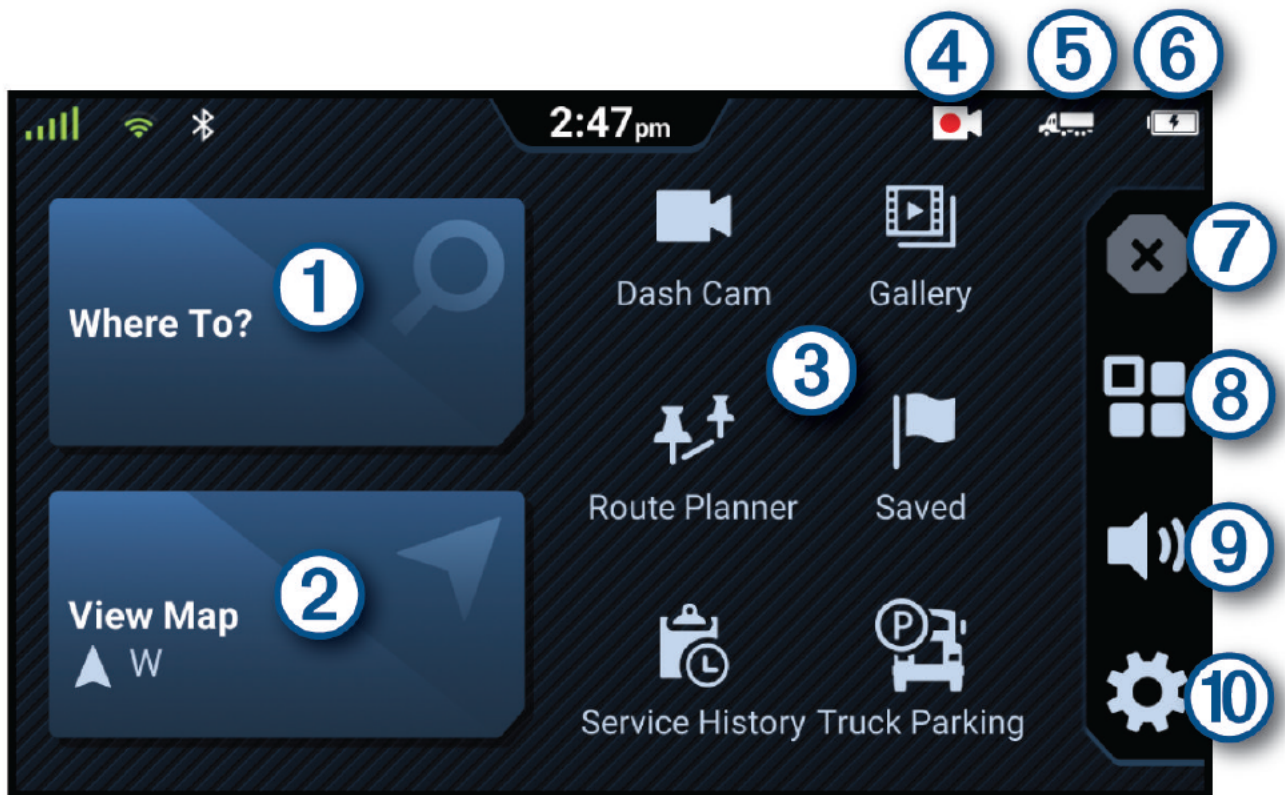

①	Select to start a route.
②	Select to view the map.
③	Select various app shortcuts to use features on your navigation device.
④	The dash cam status.
⑤	The current vehicle profile.
⑥	The battery status.
⑦	Select to stop an active route.
⑧	Select to open the apps menu. The app drawer contains shortcuts to all of the apps available on your device.
⑨	Select to adjust the volume.
⑩	Select to view device settings and update software.

Opening an App

The home screen contains shortcuts for frequently used apps. The app drawer contains all of the apps installed on your device.

Select an option:

- Select an app shortcut from the home screen.
- Select  and select an app.

Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status. Hold to view GPS accuracy and acquired satellite information (Viewing GPS Signal Status, page 59).
	Bluetooth® technology status. Select to view the Bluetooth settings (Phone Settings, page 49).
	Wi-Fi® signal strength. Select to change the Wi-Fi settings (Connecting to a Wireless Network, page 50).
	Connected to hands-free calling. Select to place a phone call (Hands-Free Calling, page 35).
	Active vehicle profile. Select to view the vehicle profile settings (Editing a Vehicle Profile, page 9).
	Garmin eLog™ status. Select to view the current ELD information. When the icon is blue, the device is connected to the Garmin eLog app.
	Current time. Select to set the time.
	Battery charge level.
	dēzl app connection status (Pairing with Your Smartphone, page 34).
	Temperature. Select to view the weather forecast (Viewing the Weather Forecast, page 43).
	Dash cam recording status. Select to open the dash cam controls.

Using the Touchscreen

- Tap the screen to select an item.
- Drag or swipe your finger across the screen to pan or scroll.
- Pinch two fingers together to zoom out.
- Spread two fingers apart to zoom in.

Adjusting the Screen Brightness

- 1 Select  > **Display** > **Brightness**.
- 2 Use the slider bar to adjust the brightness.

Adjusting the Volume

- 1 Select .
- 2 Select an option:
 - Use the slider bar to adjust the volume.
 - Select  to mute the device.
 - Select a check box to enable or disable additional sound options.

Vehicle Profiles

WARNING

Entering your vehicle profile characteristics does not guarantee that your vehicle's characteristics will be accounted for in all route suggestions or that you will receive the warning icons in all cases. Limitations may exist in the map data such that your device cannot account for these restrictions or road conditions in all cases. Always defer to all posted road signs and road conditions when making driving decisions.

Routing and navigation are calculated differently based on your vehicle profile. The activated vehicle profile is indicated by an icon in the status bar. The navigation and map settings on your device can be customized separately for each vehicle type.

When you activate a truck vehicle profile, the device avoids including restricted or impassable areas in routes based on the dimensions, weight, and other characteristics you entered for your vehicle.

Adding a Vehicle Profile

You can add a vehicle profile that includes the weight, dimensions, and other characteristics for your vehicle.

- 1 From the home screen, select  > **Vehicle Profile** > .
- 2 Select an option:
 - To add a straight truck with a permanently attached cargo area, select **Straight Truck**.
 - To add a tractor or a tractor-trailer combination, select **Tractor**.
 - To add a bus, select **Bus**.
- 3 Follow the on-screen instructions to enter the vehicle characteristics.

After you add a vehicle profile, you can edit the profile to enter additional detailed information, such as the vehicle identification number or trailer number ([Editing a Vehicle Profile, page 9](#)).

Car Profile

The car profile is a preloaded vehicle profile intended for use in an automobile without a trailer. While using the car profile, the device calculates standard automobile routes, and routing for large vehicles is not available. Some features and settings specific to large vehicles are not available while using the car profile.

Switching the Vehicle Profile

Each time you turn on your device, it prompts you to select a vehicle profile. You can manually switch to another vehicle profile at any time.

- 1 From the status bar, select the vehicle profile icon, such as  or .
- 2 Select a vehicle profile.

The vehicle profile information appears, including measurements and weight.
- 3 Select **Select**.

Changing Your Trailer Information

Before you can change your trailer information, you must enter a vehicle profile for a tractor ([Adding a Vehicle Profile, page 8](#)).

When you change the trailer on your tractor, you can change the trailer information in your vehicle profile without changing the tractor information. You can switch quickly between frequently used trailers.

- 1 From the home screen, select  > **Vehicle Profile**.
- 2 Select the tractor vehicle profile to use with the trailer.
- 3 Select .
- 4 Select an option:
 - To use a recent trailer configuration, select a trailer configuration from the list.
 - To enter a new trailer configuration, select **New Configuration**, and enter the trailer information.

Editing a Vehicle Profile

You can edit a vehicle profile to change vehicle information or to add detailed information to a new vehicle profile, such as the vehicle identification number, trailer number, or odometer reading. You can also rename or delete a vehicle profile.

- 1 From the home screen, select  > **Vehicle Profile**.
- 2 Select the vehicle profile to edit.
- 3 Select an option:
 - To edit the vehicle profile information, select , and select a field to edit.
 - To rename a vehicle profile, select  >  > **Rename Profile**.
 - To delete the vehicle profile, select  >  > **Delete**.

Dash Cam

Aligning the Camera

WARNING

Do not attempt to align the camera while driving because doing so can cause distraction that could lead to an accident resulting in serious personal injury or death.

Advanced driver assistance features may not perform properly if the camera is not aligned. You should align the dash camera each time you mount or reposition the device.

- 1 Select  > **Dash Cam** > **Camera Placement**.
- 2 Select **Horizontal Position**, and select the horizontal location of your device on the windshield.
- 3 Select **Vehicle Height**, and select your vehicle type.
- 4 Select **Alignment**.
- 5 Tilt the device and turn the camera left or right to align the camera.

The camera should point straight ahead, and the horizon should be centered between the top and bottom of the screen.

Dash Cam Recording

NOTICE

Some jurisdictions may prohibit or regulate recording audio and video, or taking photographs. Jurisdictions may require that all parties have knowledge of the recording and provide consent before you record audio and video or take photographs. It is your responsibility to know and comply with all laws, regulations, and any other restrictions in your jurisdiction.

The dash cam records video to the camera memory card. By default, the device immediately starts recording video when it turns on, and it continues recording until it is turned off. If the memory card is full, the device automatically deletes the oldest unsaved video to create space for new video.

When the option to promptly delete unsaved video is enabled, the device continually deletes unsaved video more than three minutes old and deletes all unsaved video each time it is powered off. You can enable or disable this feature in the camera settings ([Dash Cam Settings](#), page 51).

You can save a video recording to prevent it from being overwritten or deleted.

Saving a Dash Cam Recording

You can save a portion of the recorded video to prevent it from being overwritten by new video. By default, the device uses a sensor to detect possible accidental collisions and saves video footage before, during, and after the detected event. You can also manually save video at any time.

- 1 While the dash cam is recording, select **Dash Cam** > .
The device saves the video footage before, during, and after you select .
- 2 Select  again to extend the saved recording time (optional).
A message indicates the video is saving.

Stopping or Starting Dash Camera Recording

- 1 Select **Dash Cam**.
- 2 Select an option:
 - To stop recording, select .
TIP: By default, recording starts automatically the next time you turn on the device. You can disable this option in the camera settings ([Dash Cam Settings, page 51](#)).
 - To start recording, select .

Turning Audio Recording On or Off

NOTICE

Some jurisdictions may prohibit recording audio in the vehicle or may require that all passengers have knowledge of the recording and provide consent before you record audio in the vehicle. It is your responsibility to know and follow all laws and restrictions for your jurisdiction.

The device can record audio using the integrated microphone while recording video. You can turn audio recording on or off at any time.

Select  > **Dash Cam** > **Record Audio**.

Viewing Videos and Photos

NOTE: The device stops recording video while you view videos or photos.

- 1 Select **Gallery** > **Yes**.
- 2 Select a video or photo.
The device displays the video or photo. Videos start playing automatically. If the video or photo includes location information, a map shows the location.

Videos on Your Computer

Media is stored in the DCIM folder on the camera memory card. Videos are stored in MP4 file format. Photos are stored in JPG format. You can view and transfer media by connecting the memory card or the device to your computer.

The media is sorted into several folders.

100EVENT: Contains videos saved automatically when the device detected an incident.

101SAVED: Contains videos saved manually by the user.

102PHOTO: Contains photos.

104UNSD: Contains unsaved video footage. The device overwrites the oldest unsaved video when the storage space for unsaved video is full.

Deleting a Video or Photo

- 1 Select **Gallery** > **Yes**.
- 2 Select a video or photo.
- 3 Select  > **Yes**.

Vault Storage

NOTE: This feature is not available for all countries.

You can upload, manage, and share dash camera footage on a secure, online storage drive using the Vault. The dash camera uploads saved videos to the Vault automatically while it is connected to a Wi-Fi network.

You can purchase an optional Vault subscription from the dēzl app on your smartphone.

NOTE: Your dash camera must be connected to a Wi-Fi network to use this feature.

Upgrading Your Vault Subscription

You can purchase an optional Vault subscription to extend your storage time.

- 1 From the dēzl app on your smartphone, select  > **Vault Access** > **Need More Time?**.
- 2 Follow the on-screen instructions.

Sharing a Video

You can share a secure link to a dash camera video from the Vault.

 
- 1 From the dēzl app on your smartphone, select **Vault**.
- 2 Select a video, and select **Send a Secure Link**.
- 3 Follow the on-screen instructions.

Editing and Exporting a Video

You can trim the length of your video to remove unnecessary footage before exporting it to the Vault.

NOTE: Videos stored in the Vault cannot be trimmed.

- 1 While viewing a video, drag the trimming handles  on the video progress bar left or right to trim the video length.

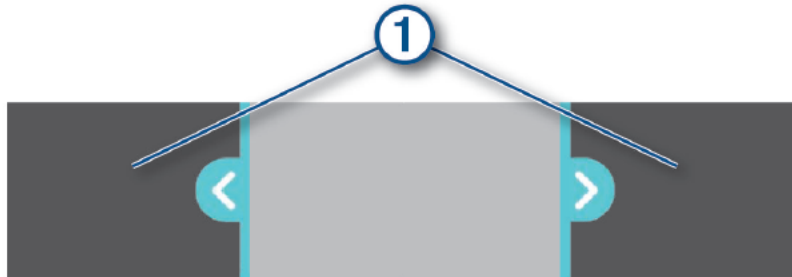

- 2 Select the **Include Audio** check box to include the recorded audio (optional).
- 3 Select  or select **Export**.
NOTE: You must keep the app in the foreground while exporting a video.
The app exports the trimmed video to the Vault and saves the video to your smartphone.
- 4 After the video export is complete, select an option (optional):
 - To remove the video from the camera memory card, select **Remove From Camera**.
 - To return to the gallery, select  or select **Done**.

Disabling a Shared Video Link

You can disable a link to a video that you previously shared from the Vault. When you disable a shared video link, the video is set to private and the shared link and passcode are disabled.

- 1 From the dēzl app on your smartphone, select **Vault**.
- 2 Select a video, and select **Disable Link** > **Continue**.

Removing a Video from the Vault

- 1 From the dēzl app on your smartphone, select **Vault**.
- 2 Select a video, and select **Remove From Vault > Continue**.

Driver Awareness Features and Alerts

CAUTION

The driver alerts and speed limit features are for information only and do not replace your responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin® is not responsible for any traffic fines or citations you receive for failing to follow all applicable traffic laws and signs.

Your device provides features that can help encourage safer driving and increase efficiency, even when you are driving in a familiar area. The device plays an audible tone or message and displays information for each alert. You can enable or disable the audible tone for some types of driver alerts. Not all alerts are available in all areas.

Schools: The device plays a tone and displays the speed limit (if available) for an upcoming school or school zone.

Speed limit exceeded: The device displays a red border on the speed limit icon when you exceed the posted speed limit for the current road.

Speed limit reduced: The device plays a tone and displays the upcoming speed limit so you can be prepared to adjust your speed.

Wrong way on a one-way street: The device plays a message and displays a full-screen warning if you travel the wrong way on a one-way street. The edges of the screen appear red and an alert remains at the top of the screen until you leave the one-way street or correct your direction of travel.

Railroad crossing: The device displays the distance to an upcoming railroad crossing.

Animal crossing: The device plays a tone to indicate an upcoming animal crossing area.

Curves: The device plays a tone to indicate a bend in the road.

Slower traffic: The device plays a tone to indicate slower traffic when you approach slower traffic at a higher speed. Your device must be receiving traffic information to use this feature ([Traffic, page 36](#)).

Construction zone: The device plays a tone and displays a message when you approach a construction zone.

Lane closure: The device plays a tone and displays a message when you approach a lane closure.

Break planning: The device plays a tone and suggests upcoming rest stops after you have been driving for a long time.

No trucks allowed: The device plays a tone when you approach a road where no trucks are allowed.

Risk of grounding: The device plays a tone and displays a message when you approach a road where your vehicle could become grounded.

Lateral wind: The device plays a tone and displays a message when you approach a road where there is risk of lateral wind.

Narrow road: The device plays a tone and displays a message when you approach a road that may be too narrow for your vehicle.

Steep hill: The device plays a tone and displays a message when you approach a steep hill.

State and country borders: The device plays a tone and displays a message when you approach the border of a state or country.

Forward collision warning: The device alerts you when it detects that there is not a safe distance between your vehicle and the vehicle in front of you.

Lane departure warning: The device alerts you when it detects you may be crossing a lane boundary unintentionally.

Enabling or Disabling Driver Alerts

You can enable or disable several types of driver alerts.

- 1 Select  > **Driver Assistance** > **Driver Alerts**.
- 2 Select or clear the check box next to each alert.

Red Light and Speed Cameras

NOTICE

Garmin is not responsible for the accuracy of or the consequences of using a red light or speed camera database.

NOTE: This feature is not available for all regions or product models.

Information about red light and speed camera locations is available in some areas for some product models. The device alerts you when you approach a reported speed or red light camera.

- In some areas, your device can receive red light and speed camera data while connected to a smartphone running the *dēzl* app.
- You can use the Garmin Express™ software (garmin.com/express) to update the camera database stored on your device. You should update your device frequently to receive the most up-to-date camera information.

Finding and Saving Locations

The maps loaded in your device contain locations, such as restaurants, hotels, auto services, and detailed street information. The Where To? menu helps you find your destination by providing several methods to browse, search, and save this information.

From the main menu, select **Where To?**.

- To quickly search all locations on your device, select  **Search** (*Finding a Location Using the Search Bar, page 14*).
- To find an address, select **Address** (*Finding an Address, page 14*).
- To browse or search pre-loaded points of interest by category, select **Categories** (*Finding a Location by Category, page 17*).
- To search near a different city or area, select the current search area, and select a new search area (*Changing the Search Area, page 16*).
- To view and edit your saved locations, select **Saved** (*Saving Locations, page 19*).
- To view locations you have recently selected from the search results, select **Recent** (*Viewing Recently Found Locations, page 18*).
- To search for truck stops, truck parking, and truck services, select **Categories** > **Trucking** (*Finding Trucking Points of Interest, page 16*).
- To browse and search Foursquare® points of interest, select **Foursquare**.
- To browse and search Tripadvisor® traveler ratings, select **Tripadvisor** (*Tripadvisor, page 17*).
- To navigate to specific geographic coordinates, select **Coordinates** (*Finding a Location Using Coordinates, page 18*).

Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select **Search** in the search bar.
- 3 Enter all or part of the search term.
Suggested search terms appear below the search bar.
- 4 Select an option:
 - To search for a type of business, enter a category name (for example, "movie theaters").
 - To search for a business name, enter all or part of the name.
 - To search for an address near you, enter the house number and street name.
 - To search for an address in another city, enter the house number, street name, city, and state.
 - To search for a city, enter the city and state.
 - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
 - To search using a suggested search term, select the term.
 - To search using the text you entered, select .
- 6 If necessary, select a location.

 
Finding an Address

NOTE: The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To?**.
- 2 If necessary, select the current search area to search near a different city or area.
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.
- 5 Select the address.

Location Search Results

The location search results appear in a list, with the nearest location at the top. Each numbered location also appears on the map. You can scroll down to view more results.

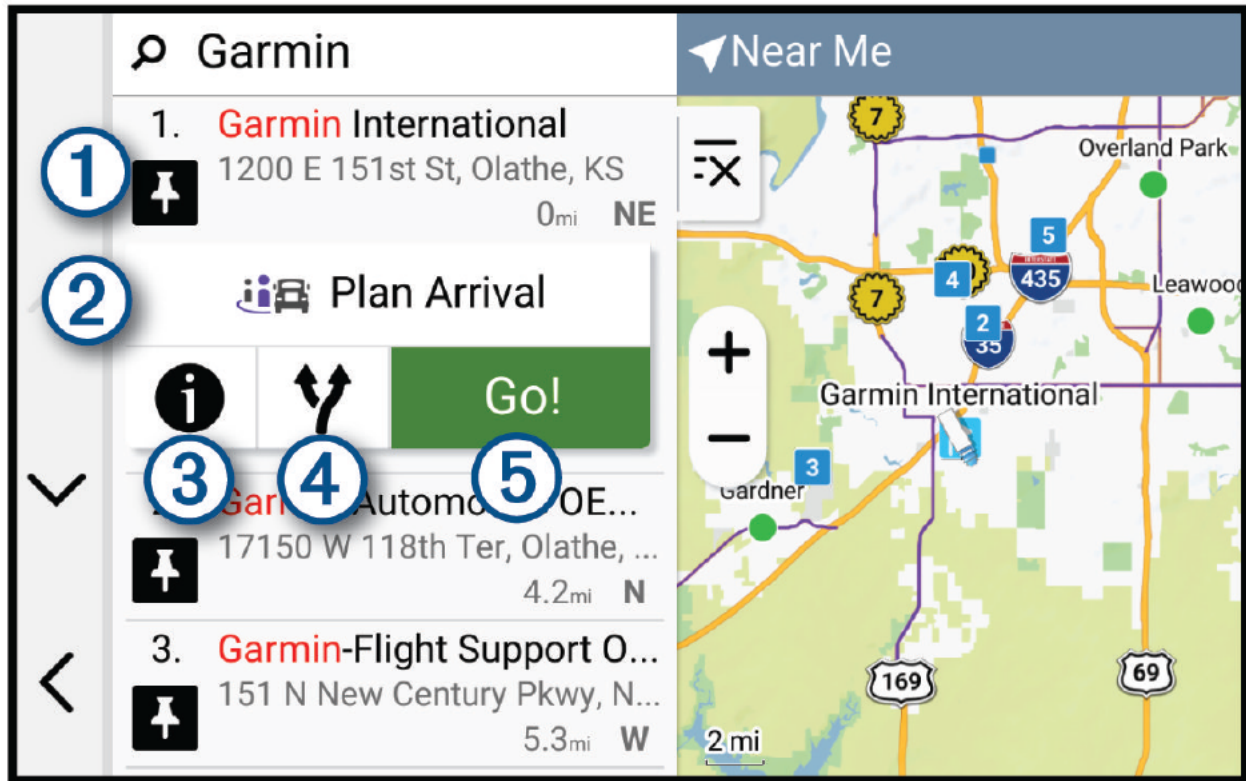


①	Select a location to view the option menu.
② Plan Arrival	Select to view a map of your destination and find a truck destination.
③ i	Select to view detailed information about the location.
④ Y	Select to view alternate routes to the location.
⑤ Go!	Select to start navigating to the location using the recommended route.

Changing the Search Area

By default, the device searches for locations near your current location. You can also search other areas, such as near your destination, near another city, or along your active route.

 - 1 Select **Where To?**.
- 2 Select the current search area ①.

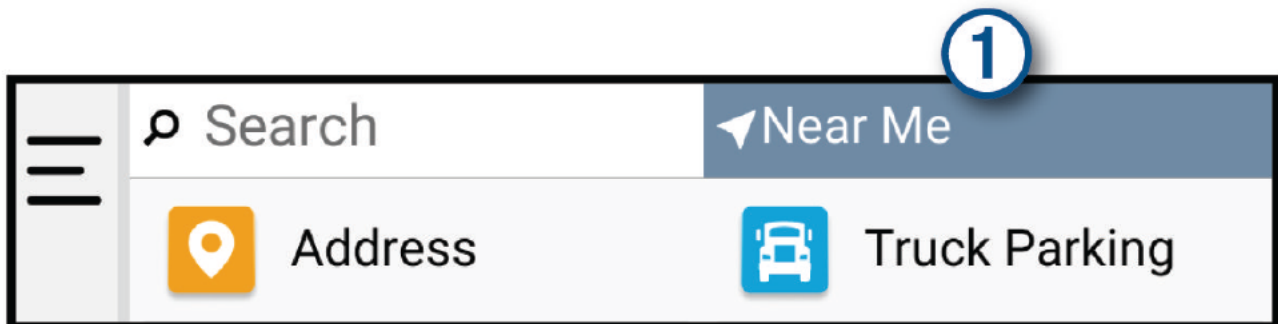

- 3 Select a search area.
- 4 If necessary, follow the on-screen instructions to select a specific location.

The selected search area appears at the top of the screen. When you search for a location using any of the options in the Where To? menu, the device suggests locations near this area first.

Points of Interest

NOTICE

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

A point of interest is a place that you may find useful or interesting. Points of interest are organized by category and can include popular travel destinations such as gas stations, restaurants, hotels, and entertainment venues.

Finding Trucking Points of Interest

NOTICE

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

The detailed maps loaded in your device contain trucking points of interest, such as truck stops, rest areas, and weigh stations.

Select **Where To? > Categories > Trucking**.

Finding TruckDown® Points of Interest

The TruckDown directory lists businesses for the trucking industry such as truck repair and tire sales. The TruckDown directory is available only in North America.

- 1 Select **Where To?**.
- 2 Select an option:
 - Select **Truck Locations** to find points of interest compatible with trucks.
 - Select **Truck Services** to find service locations for your truck.
- 3 Select a category.
- 4 If necessary, select **Filter by Amenities & Brands**, select one or more amenities, and select **Save**.
NOTE: This option is available for truck stops only.
- 5 Select a destination.

Finding CAT Scale[®] Locations

You can use the included database to search for CAT Scale locations in North America.

- 1 Select **Where To? > CAT Scale**.
- 2 Select a destination.

Tripadvisor

NOTICE

Garmin is not responsible for the accuracy or timeliness of the Tripadvisor information.

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

Your device includes Tripadvisor traveler ratings. Tripadvisor ratings appear automatically in the search results list for restaurants, hotels, and attractions. You can also search for nearby Tripadvisor points of interest and sort by distance or popularity.

Finding Tripadvisor Points of Interest

- 1 Select **Where To? > Tripadvisor**.
- 2 Select a category.
- 3 If necessary, select a subcategory.
A list of nearby Tripadvisor points of interest for the category appears.
- 4 Select **Sort Results** to filter the displayed points of interest by distance or popularity (optional).
- 5 Select , and enter a search term (optional).

Foursquare

NOTICE

Garmin is not responsible for the accuracy or timeliness of information provided by Foursquare.

You are responsible for understanding and complying with any applicable rules, laws, or regulations associated with points of interest.

Foursquare is a location-based social network. Your device includes millions of pre-loaded Foursquare points of interest, which are indicated by the Foursquare logo in your location search results.

Searching Foursquare Points of Interest

You can search for Foursquare points of interest loaded on your device.

Select **Where To? > Foursquare**.

Viewing Foursquare Location Details

You can view Foursquare location information and user ratings.

- 1 From the location search results, select a Foursquare point of interest.
- 2 Select .

Finding a Location by Category

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

Parking

Finding Truck Parking

- 1 Select **Where To? > Truck Parking**.
- 2 Select a parking location.
- 3 Select **Go!**.

Using Truck Parking Europe

If you pair your dēzl device with the dēzl app and log in to your Truck Parking Europe account, you can view parking availability and ratings on your navigation device.

NOTE: This feature is available only in Europe.

- 1 Select **Where To? > Truck Parking Europe**.
- 2 If necessary, select **Filter by Amenities & Brands**, select one or more attributes, and select **Search**.
- 3 Select a parking location.
- 4 Select **Go!**.

Finding Parking Near Your Current Location

- 1 Select **Where To? > Categories > Parking**.
- 2 Select a parking location.
- 3 Select **Go!**.

Search Tools

Search tools allow you to search for specific types of locations by responding to on-screen prompts.

Finding an Intersection

You can search for an intersection or junction between two streets, highways, or other roads.

- 1 Select **Where To? > Intersections**.
- 2 Follow the on-screen instructions to enter street information.
- 3 Select the intersection.

Finding a Location Using Coordinates

You can find a location using latitude and longitude coordinates.

- 1 Select **Where To? > Coordinates**.
- 2 If necessary, select , and change the coordinate format or datum.
- 3 Select **Coordinates**.
- 4 Enter the latitude and longitude coordinates, and select **Done**.
- 5 Select an option:
 - To save the coordinates as a location, select **Save**.
 - To start a route to the coordinates, select **Go!**.

Viewing Recently Found Locations

Your device stores a history of the last 50 locations you have found.

Select **Where To? > Recent**.

Clearing the List of Recently Found Locations

Select **Where To? > Recent >  > Clear > Yes**.

Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select the vehicle.

Finding Emergency Services and Fuel

You can use the Where Am I? page to find the nearest hospitals, police stations, and fuel stations.

1 From the map, select the vehicle.

2 Select **Hospitals, Police Stations, Truck Stops, or Fuel.**

NOTE: Some service categories are not available in all areas.

NOTE: When a truck vehicle profile is active, an option for truck stops appears instead of fuel.

A list of locations for the selected service appears, with the nearest locations at the top.

3 Select a location.

4 Select an option:

- To navigate to the location, select **Go!**.
- To view the phone number and other location details, select **i**.

Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.

1 From the map, select the vehicle.

2 Select  > **Directions to Me.**

3 Select a starting location.

4 Select **Select.**

Adding a Shortcut

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool. The Where To? menu can contain up to 36 shortcut icons.

1 Select **Where To? > Add Shortcut.**

2 Select an item.

Removing a Shortcut

1 Select **Where To? >  > Remove Shortcut(s).**

2 Select a shortcut to remove.

3 Select the shortcut again to confirm.

4 Select **Done.**

Saving Locations

Saving a Location

1 Search for a location ([Finding a Location by Category, page 17](#)).

2 From the search results, select a location.

3 Select **i > Save.**

4 If necessary, enter a name, and select **Done.**

5 Select **Save.**

Saved locations synchronize to your Garmin account automatically while you are connected to the dēzl app on your compatible phone.

Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.

Editing a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select **Edit**.
- 5 Select an option:
 - Select **Name**.
 - Select **Map Symbol** to change the symbol used to mark the saved location on a map.
 - Select **Collections** to add or remove the location from your saved collection categories.
 - Select **Coordinates** to edit the GPS coordinates for the location.
- 6 Edit the information.
- 7 Select **Done**.

Deleting a Saved Location

NOTE: Deleted locations cannot be recovered.

- 1 Select **Where To? > Saved**.
- 2 Select a waypoint.
- 3 Select **Edit > Delete > Yes**.

Navigating to Your Destination

Routes

A route is a path from your current location to one or more destinations.

- The device calculates a recommended route to your destination based on the preferences you set, including the route calculation mode ([Changing the Route Calculation Mode, page 26](#)) and avoidances ([Avoiding Delays, Tolls, and Areas, page 26](#)).
- The device can automatically avoid roads that are not appropriate for the active vehicle profile.
- You can start navigating to your destination quickly using the recommended route, or you can select an alternate route ([Starting a Route, page 21](#)).
- If there are specific roads you need to use or avoid, you can customize the route ([Shaping Your Route, page 25](#)).
- You can add multiple destinations to a route ([Adding a Location to Your Route, page 25](#)).

Starting a Route

- 1 Select **Where To?**, and search for a location (*Finding and Saving Locations*, page 13).
- 2 Select a location.
- 3 Select an option:
 - To start navigating using the recommended route, select **Go!**.
 - To choose an alternate route, select **Y**, and select a route.
Alternate routes appear to the right of the map.
 - To edit the course of the route, select **Y** > **Edit Route**, and add shaping points to the route (*Shaping Your Route*, page 25).

The device calculates a route to the location and guides you using voice prompts and information on the map (*Your Route on the Map*, page 22). A preview of the major roads in your route appears at the edge of the map for several seconds.

If you need to stop at additional destinations, you can add the locations to your route (*Adding a Location to Your Route*, page 25).

Starting a Route by Using the Map

You can start a route by selecting a location from the map.

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.
- 3 Select an option:
 - Select a location marker.
 - Select a point, such as a street, intersection, or address location.
- 4 Select **Go!**.

Going Home

The first time you start a route home, the device prompts you to enter your home location.

- 1 Select **Where To?** > **Go Home**.
- 2 If necessary, enter your home location.

Editing Your Home Location

- 1 Select **Where To?** >  > **Set Home Location**.
- 2 Enter your home location.

Your Route on the Map


As you travel, the device guides you to your destination using voice prompts and information on the map. Instructions for your next turn or exit, or other actions appear across the top of the map.



①	Next action in the route. Indicates the next turn, exit, or other action and the lane in which you should travel, if available.
②	Distance to the next action.
③	Name of the street or exit associated with the next action.
④	Route highlighted on the map.
⑤	Map tools. You can select tools to show you more information about your route and surroundings.
⑥	Data field TIP: You can touch this field to change the information it shows (Changing the Map Data Field, page 33).

Active Lane Guidance

 As you approach some turns, exits, or interchanges in your route, a detailed simulation of the road appears beside the map, if available. A colored line ① indicates the proper lane for the turn.

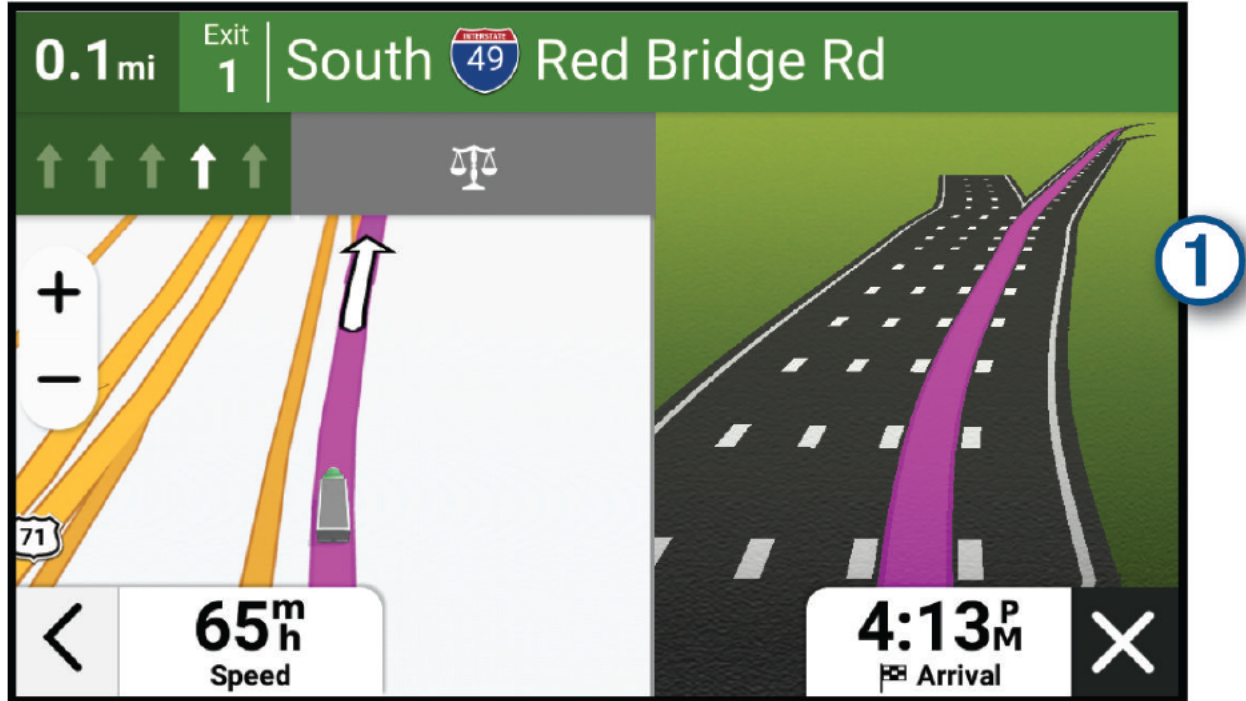

Viewing Popular Truck Paths on the Map

You can enable the device to highlight popular truck paths on the map. This can be useful to help you choose roads that are more accessible for your vehicle.

From the map, select .

Viewing Turns and Directions

While navigating a route, you can view upcoming turns, lane changes, or other directions for your route.

1 From the map, select an option:

- To view upcoming turns and directions as you navigate, select  > **Turns**.

The map tool displays the next several turns or directions beside the map. The list updates automatically as you navigate the route.

- To view the complete list of turns and directions for the entire route, select the text bar at the top of the map.

2 Select a turn or direction (optional).

Detailed information appears. An image of the junction may appear for junctions on major roadways, if available.

Viewing the Entire Route on the Map

1 While navigating a route, select anywhere on the map.

2 Select .