TV Input

Cycles through the equipment connected to your TV.

Format

Displays current screen FORMAT options and HD resolutions. (Works only with HD Access.)

Stop

STOP playback while viewing recorded program.

Replay

REPLAY previous six seconds.

Rewind

REWIND at increasing speeds press up to four times. Press and hold to jump to previous tick mark.

Play

PLAY current program.

Pause

PAUSE current program.

Guide

Press once for On-Screen **GUIDE**.

Press twice for programming grouped into categories.

Red Button

Jump back 12 hours while viewing the On-Screen Guide.

Green Button

Jump ahead 12 hours while viewing the On-Screen Guide.

Dash

Press **DASH** twice to delete recorded shows from your list.

Mode

Changes the remote's **MODE** to control other equipment. (Far-left selection indicates the DIRECTV* Receiver.)

On/Off

Turns both DIRECTV Receiver and TV **ON** or **OFF** at the same time. (Remote must be programmed for TV. DVR still records when off.)

Power

Turns On/Off **POWER** of whichever equipment is selected.

Advance

ADVANCE 30 seconds.

Fast-Forward

FAST-FORWARD at increasing speeds—press up to four times.

Exit

EXIT the menu and return to previous channel viewed.

Blue Button

Display a one-line Channel Guide while viewing your program.

Yellow Button

Display guide options while viewing the On-Screen Guide.

Prev

Return to **PREVIOUS** channel viewed.

Additional functions vary. Look for on-screen prompts.

Program Your Universal Remote:

Your new DIRECTV® Universal Remote can control your entire entertainment system— TVs, DVD players, VCRs and stereo systems.

For HD Receivers:

> Press the MENU button.

DIRECTV

AV1 AV2 TV

POWER

ON

OFF

TV INPUT

0

> Select SETTINGS & HELP,
SETTINGS,
REMOTE CONTROL.

Remote App:

Use the DIRECTV FOR BUSINESS[™] Remote App to control all of your receivers from just one tablet!

See page 18 for details.



ON/OFF

Turns both DIRECTV® Receiver and TV **ON** or **OFF** at the same time. (Remote must be programmed for TV. HD DVR still records when off.)

GUIDE

Press once for On-Screen **GUIDE**.

Press twice for programming grouped into categories.

SCOREGUIDE™

Press the **RED** button to access while watching any sporting event.

MUTE

MUTE the sound.

DASH

Press for Guide Options while viewing On-Screen Guide. Press to display last 6 digits of receiver ID, satellite signal type (SWiM or Multiswitch) and Internet status.



EXIT

EXIT the menu and return to previous channel viewed.

SELECT

SELECT item highlighted on-screen.

INFO

Display **INFORMATION** about the program now playing or highlighted in the On-Screen Guide.

PREV

Return to **PREVIOUS** channel viewed.

FAST-FORWARD

FAST-FORWARD to advance 12 hours while viewing On-Screen Guide.

ENTER

Press for Mini Guide while viewing your program and dismiss with EXIT. ENTER also replaces TV INPUT button: To cycle through the equipment connected to your TV, press and hold for three seconds until LED light at top turns green. Then, scroll through inputs by pressing ENTER again.

Program Remote (RC73)

For use with the H44 on business accounts.

- > On the remote, press MENU.
- > Select **SETTINGS**, then **REMOTE CONTROL**.
- > Select IR/RF SETUP.
- > Press **SELECT** to highlight remote type.
- > Press the **DOWN ARROW** to highlight **RF.**
- > Press **SELECT.**
- > Select CONTINUE.

- Once RF setup is complete, select PROGRAM REMOTE to program the remote to the TV.
- > Complete by following on-screen prompts.