 
 
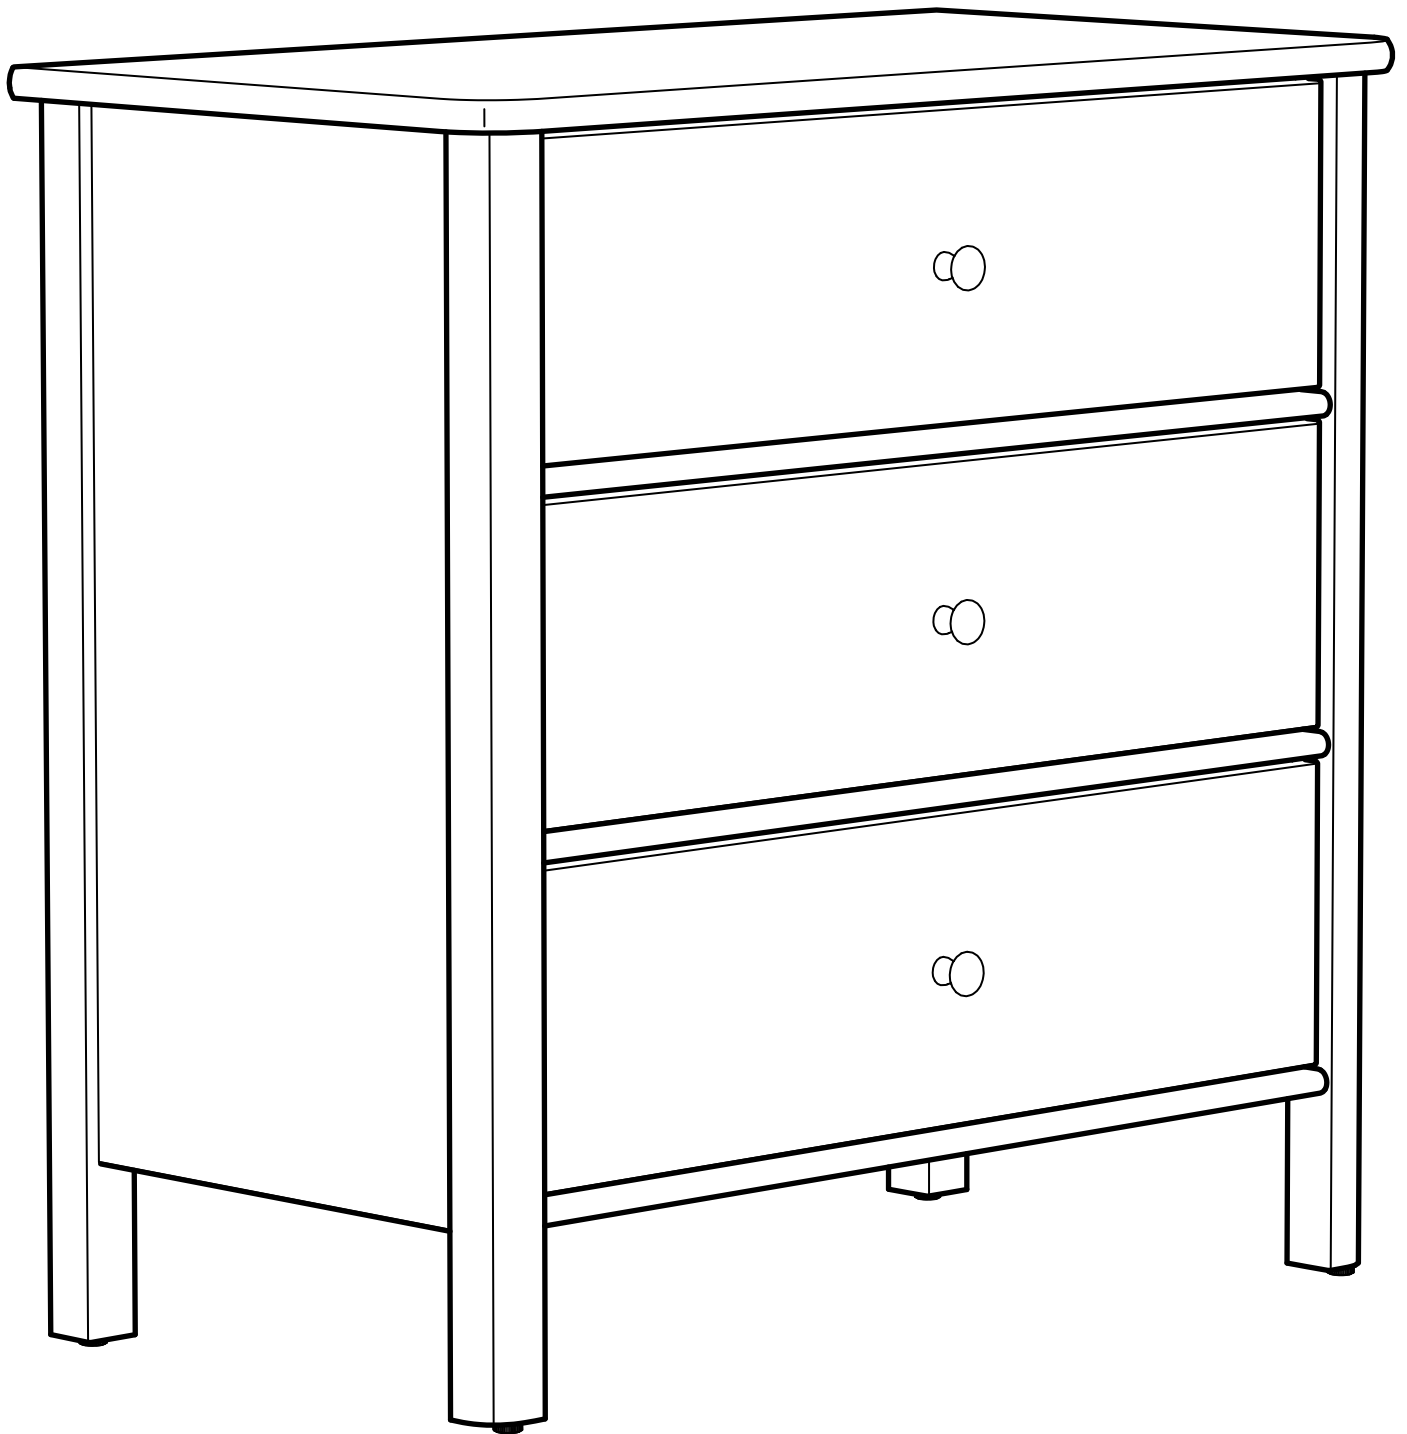 


STOREMOLLA

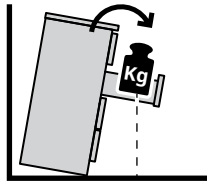

Design and Quality
IKEA of Sweden

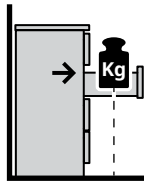

English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

 
 
 
 
DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.


English

Read and follow each step of the instruction carefully.

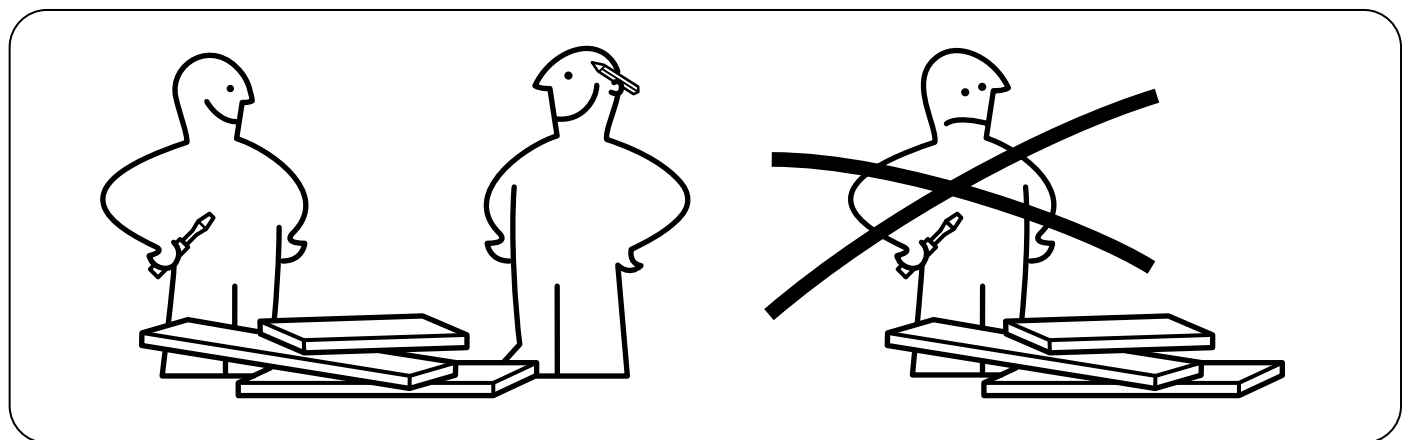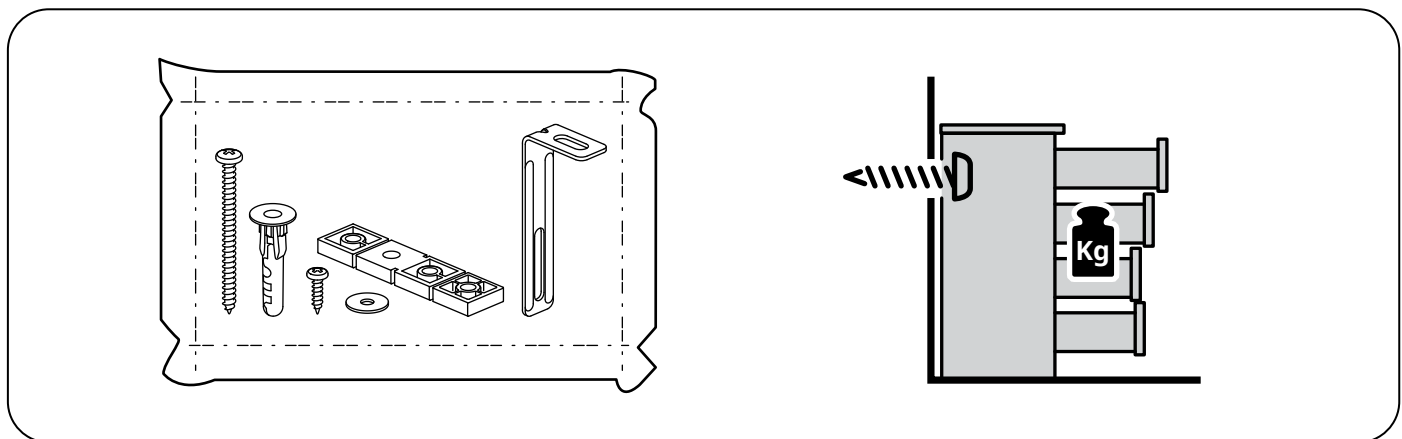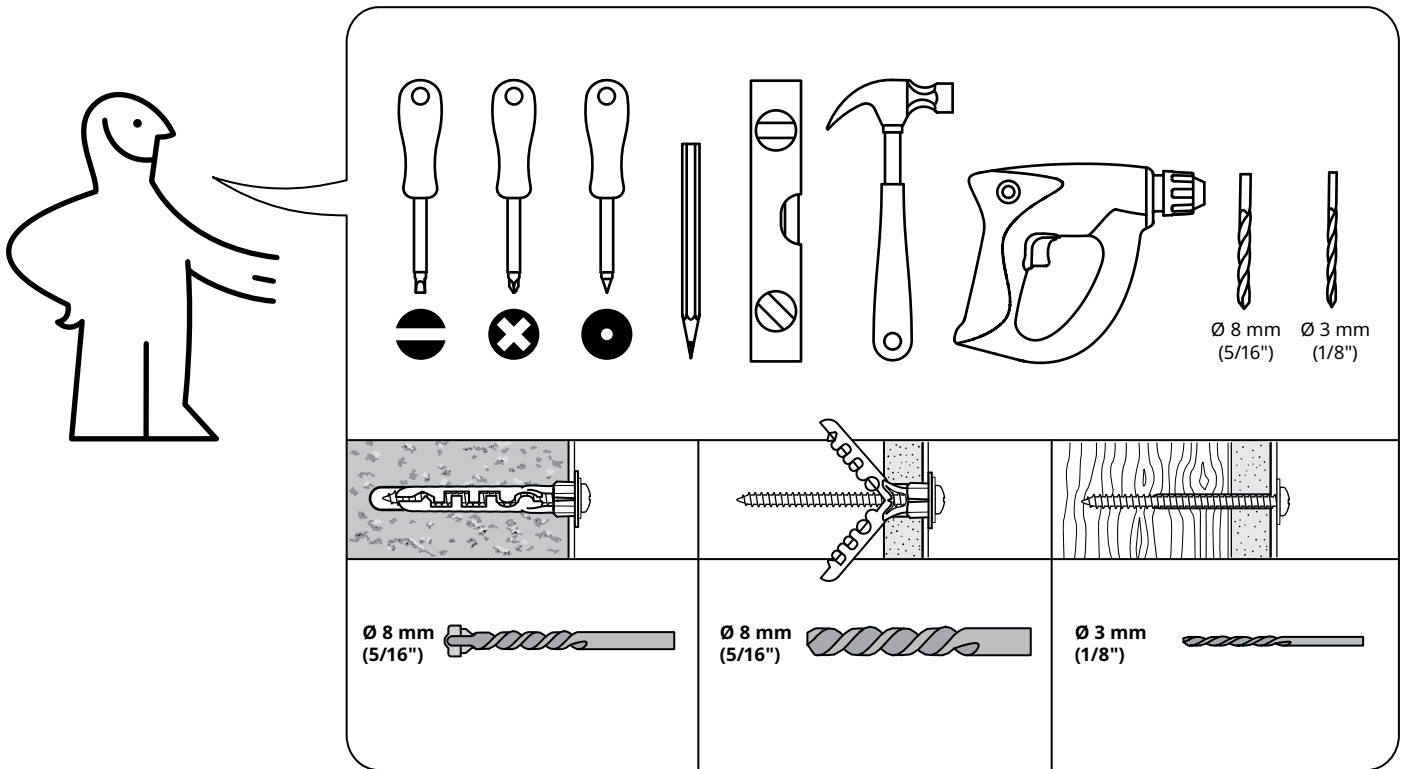

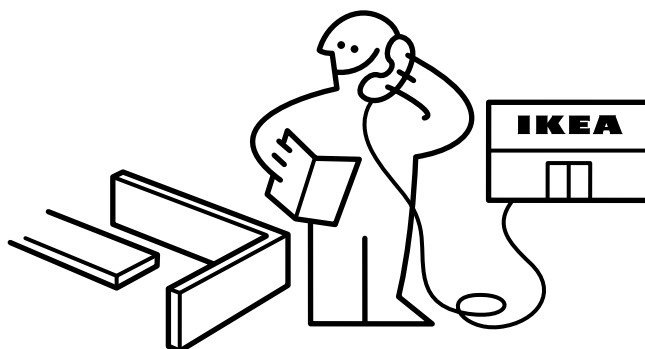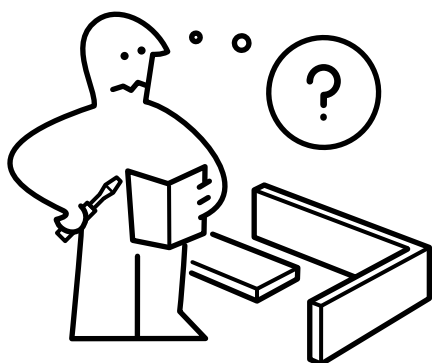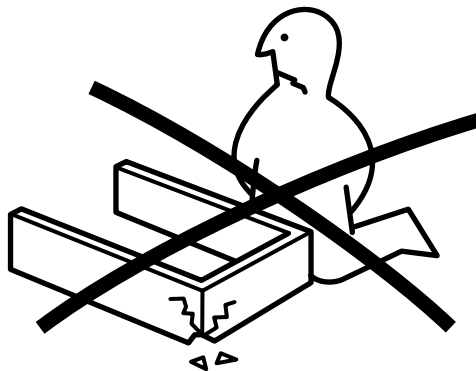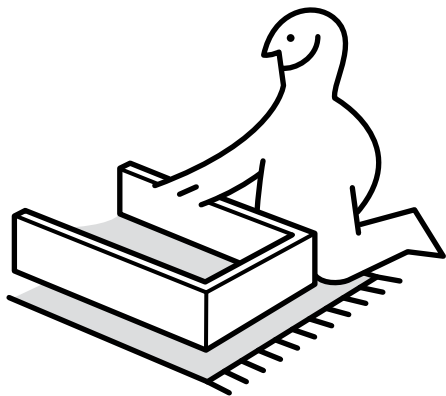


1

 


104257

 2x




10047135

 16x

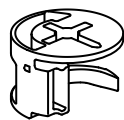

10071733

 16x

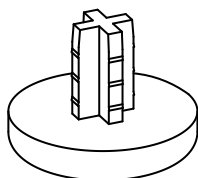


153552

3x




101345

 26x




100349

 12x

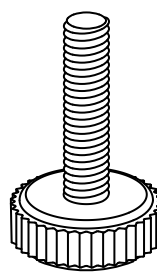

107862

 
4x

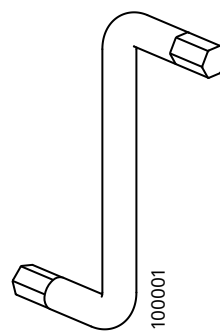


100001

1x

 
2




12x

 


12x

 


12x

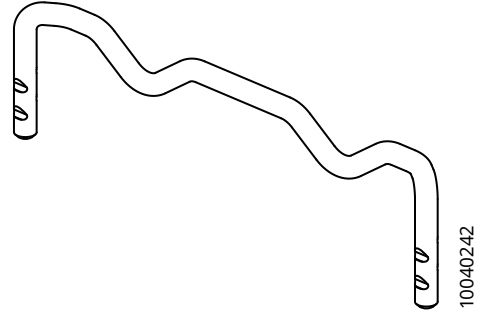 


3x

 


3x

 


12x

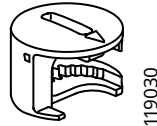 


12x

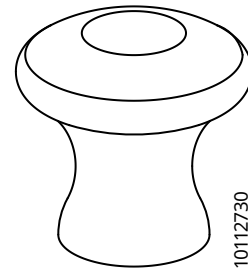 


3x

 


2x

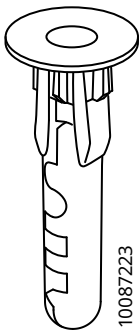 


2x

 


1x

 


2x

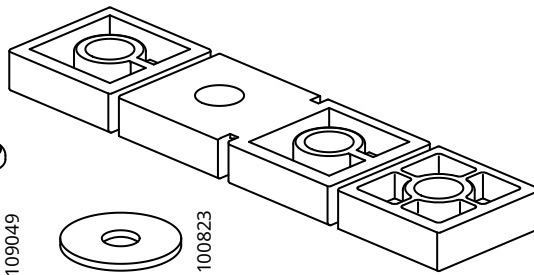 


1x

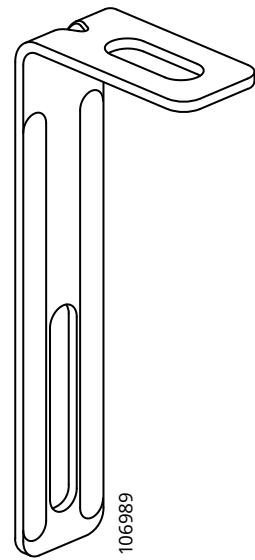 


1x

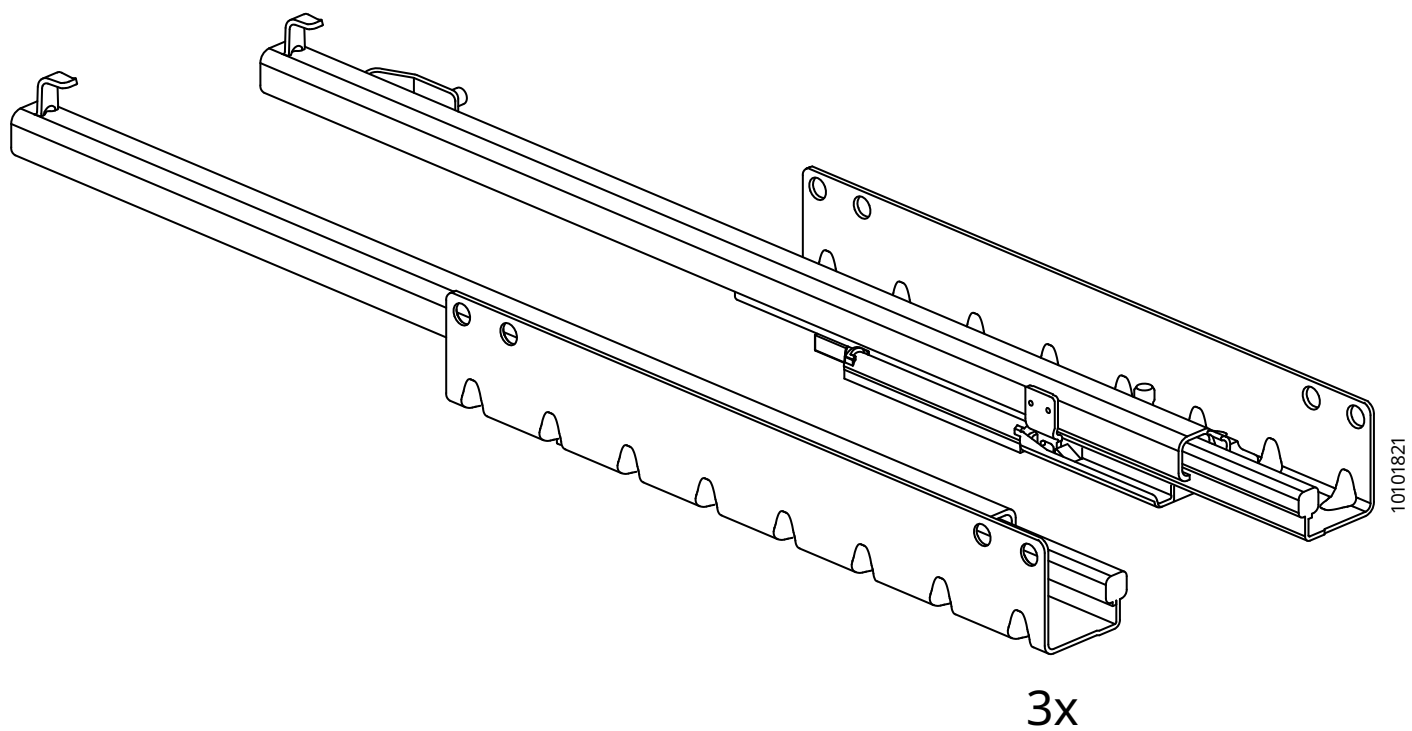 


1

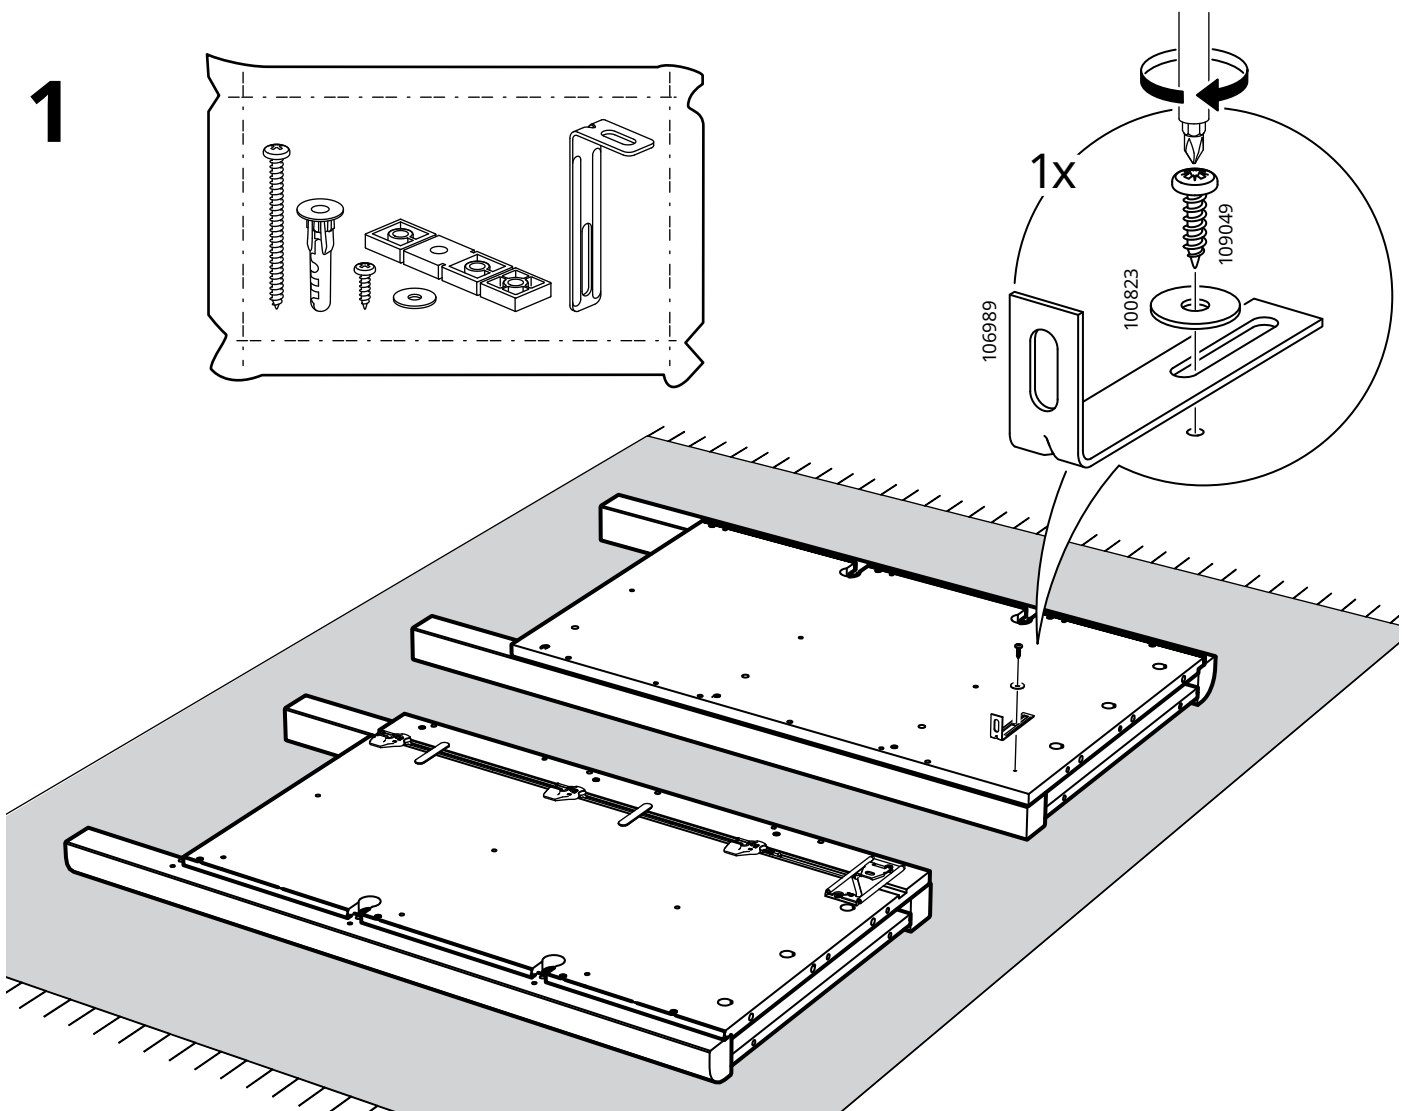 


2

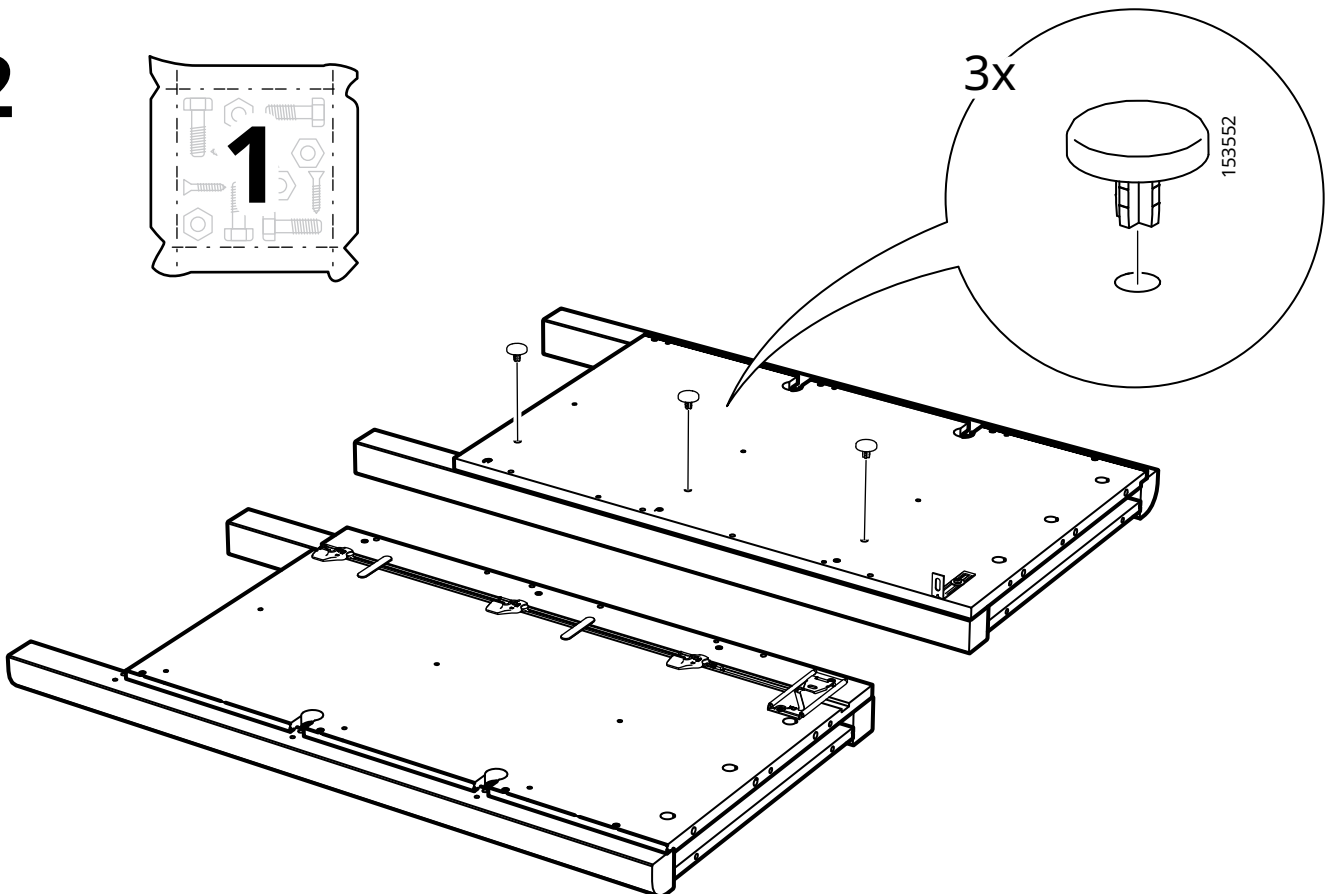 

3

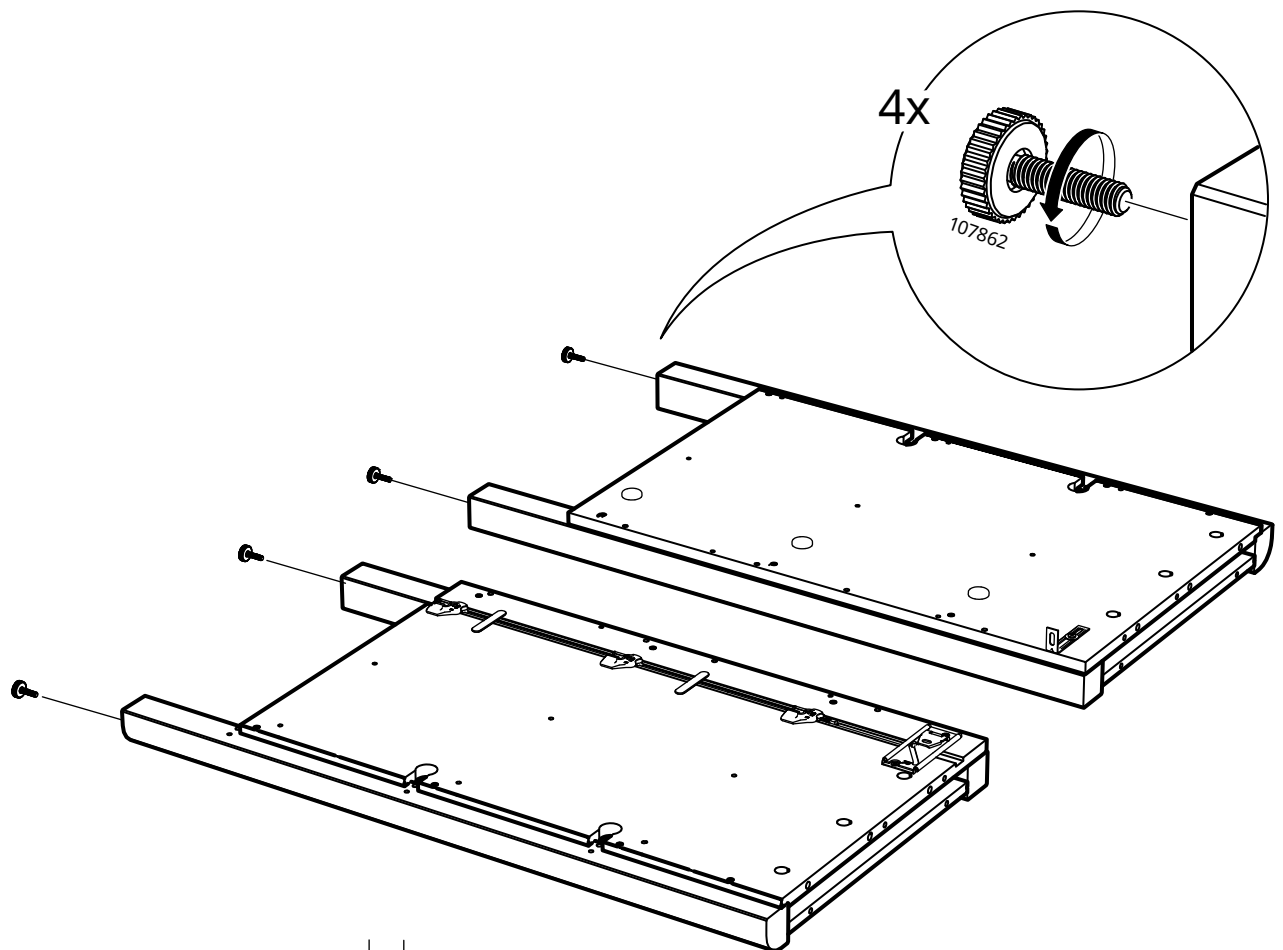 


4

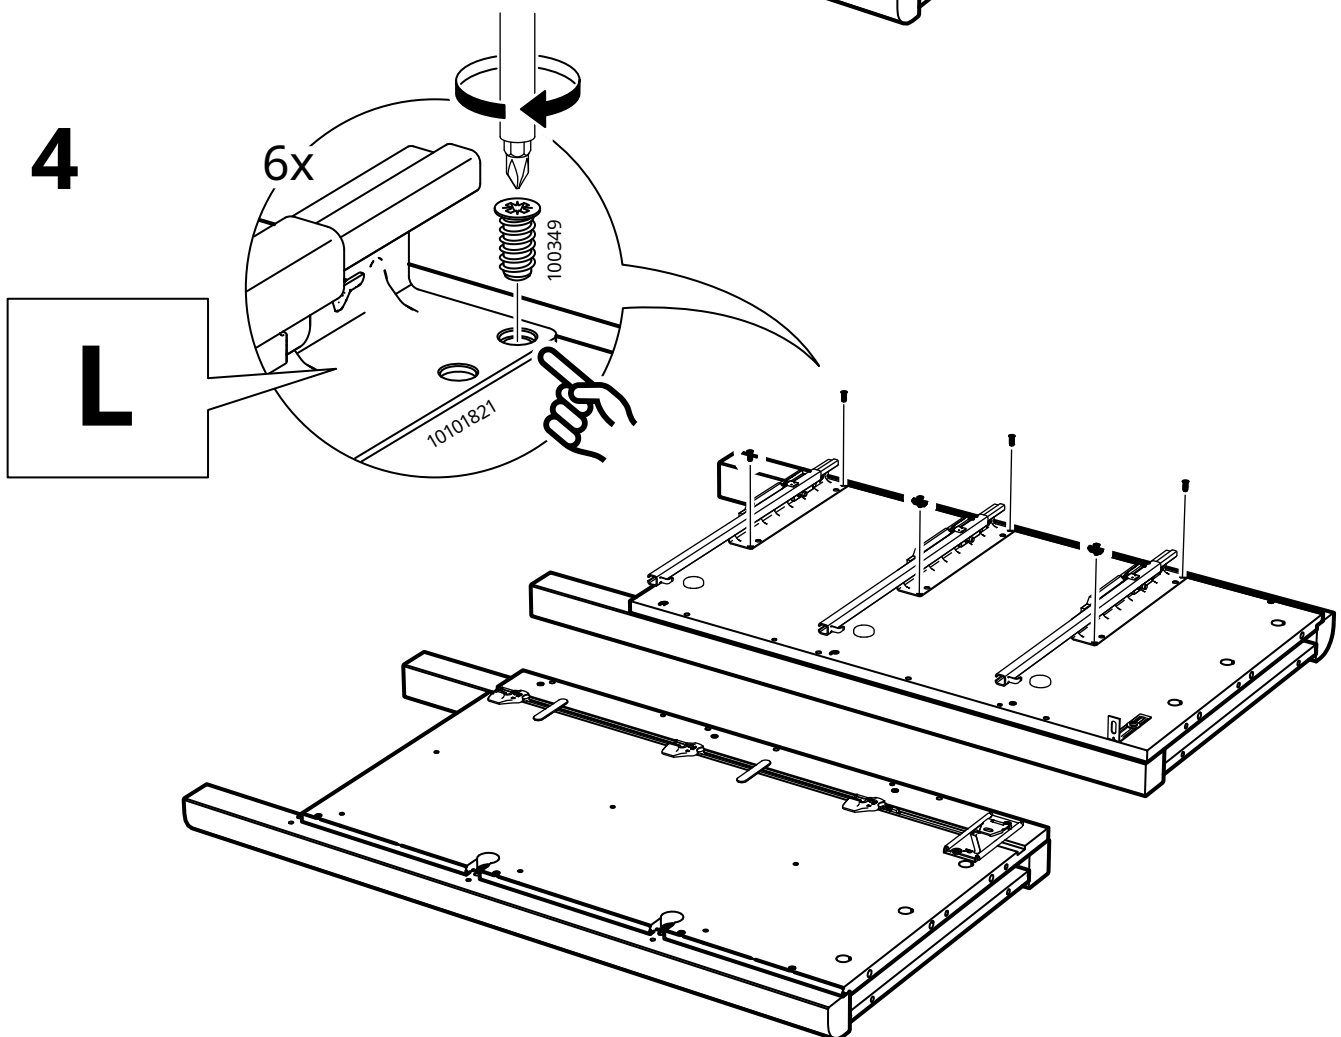 


5

 
R

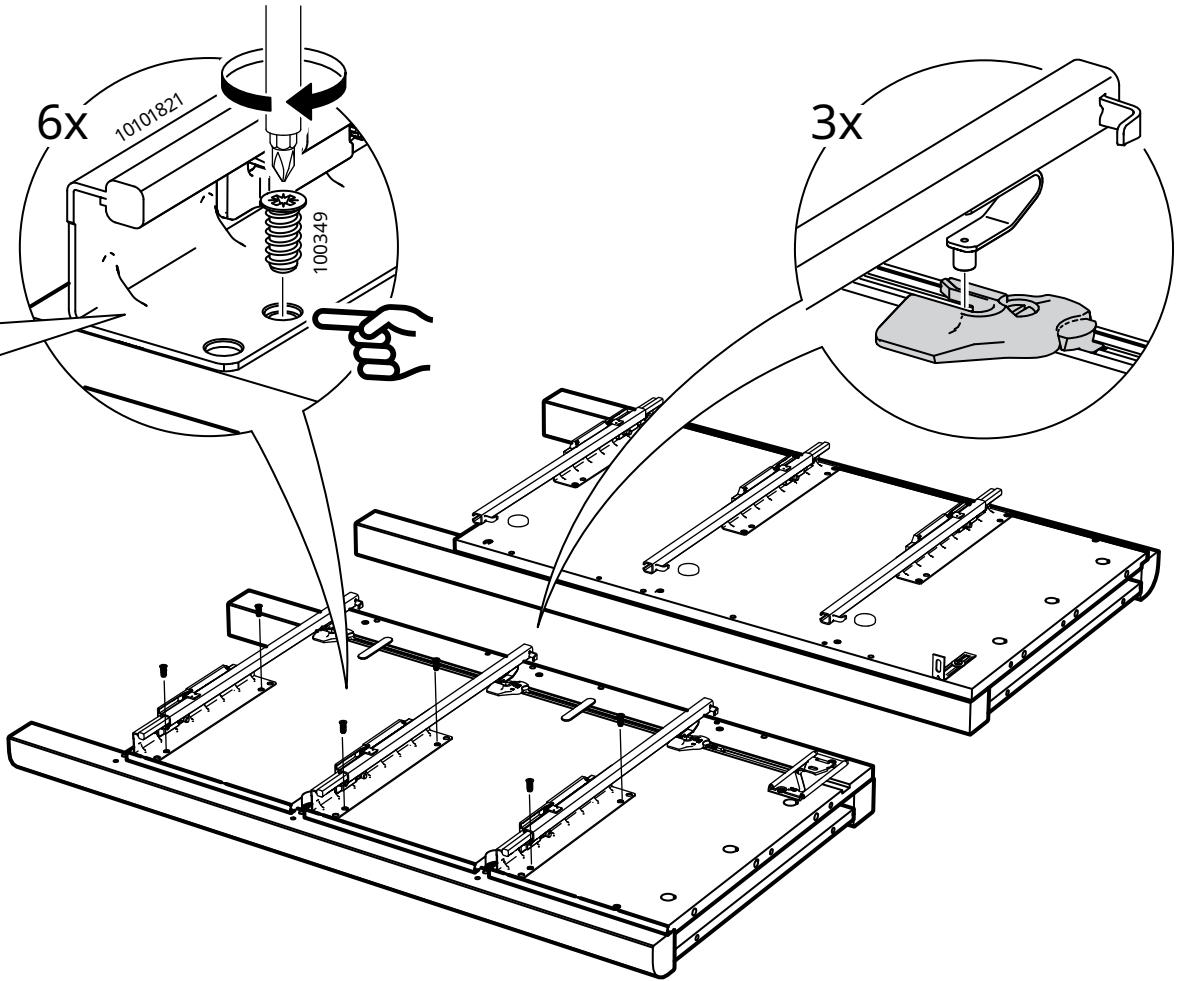


6

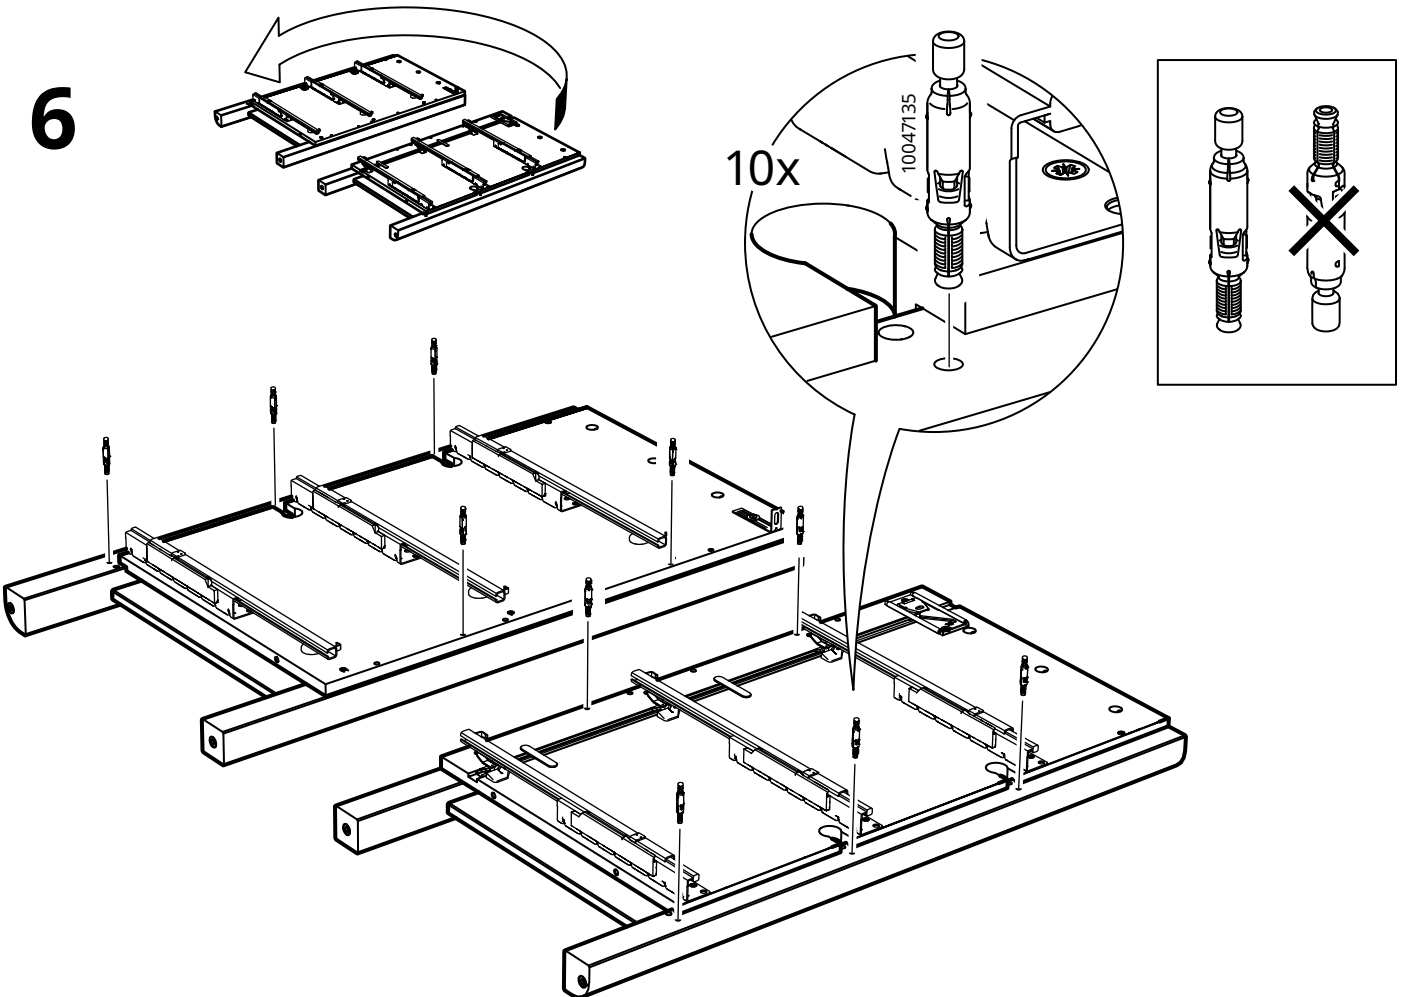 


7

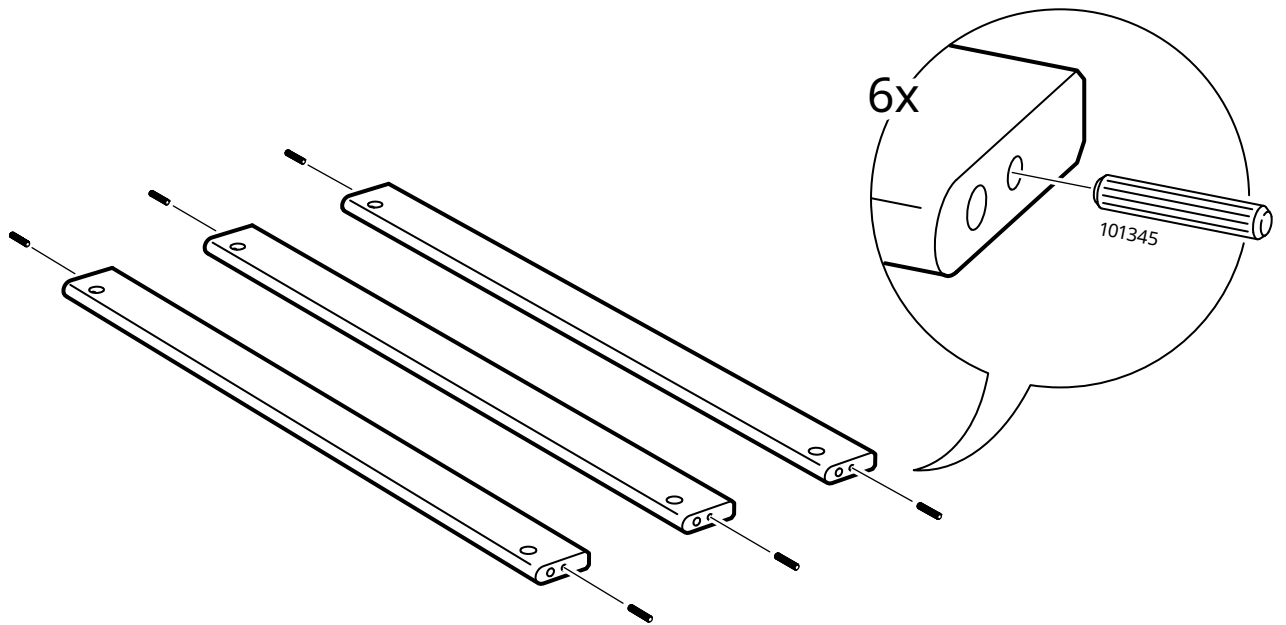 


8

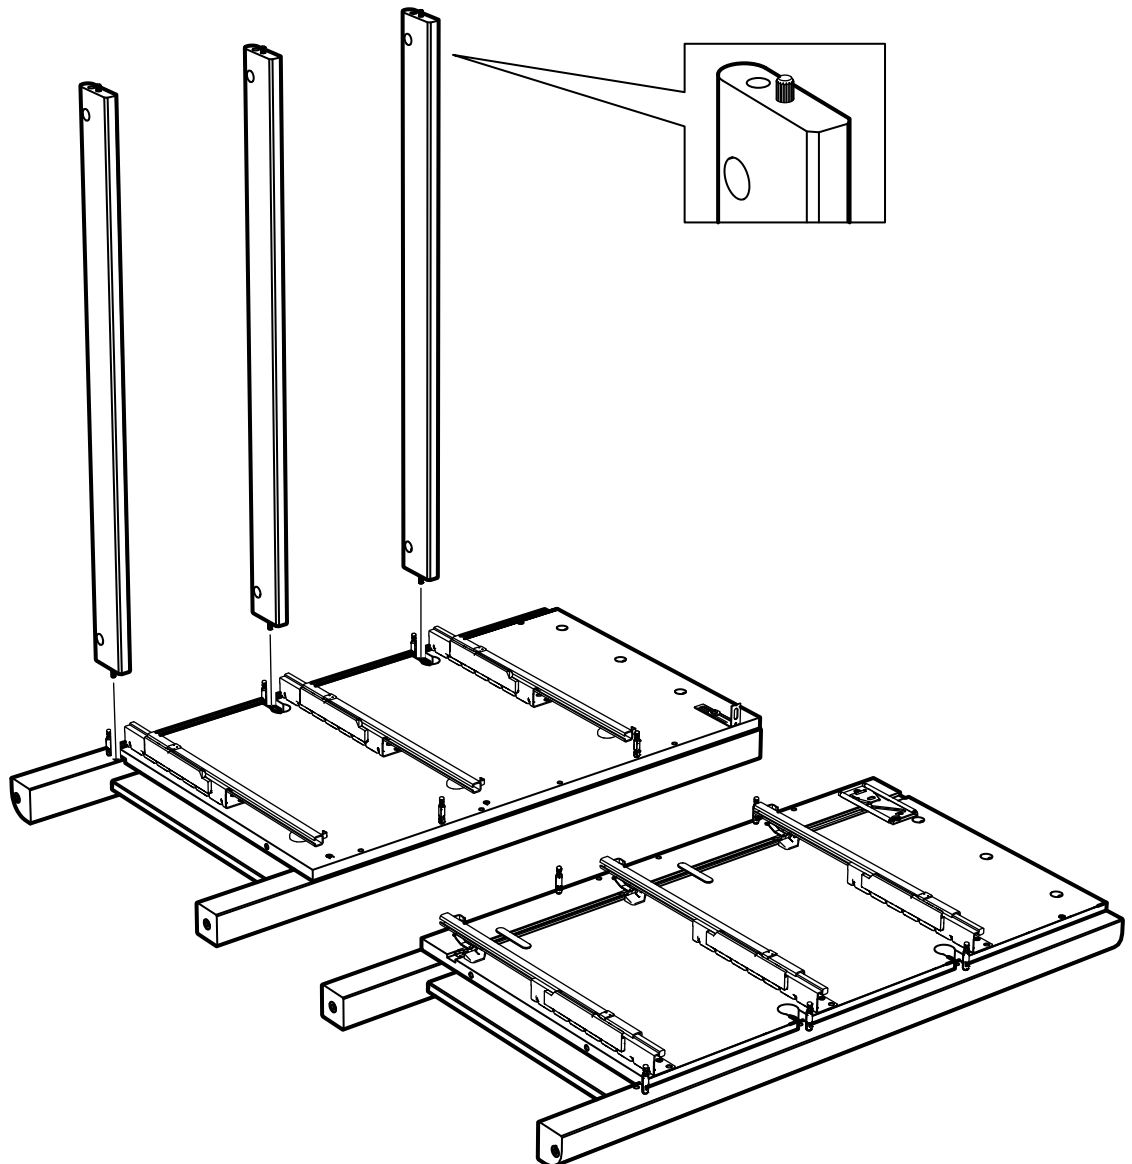 


9

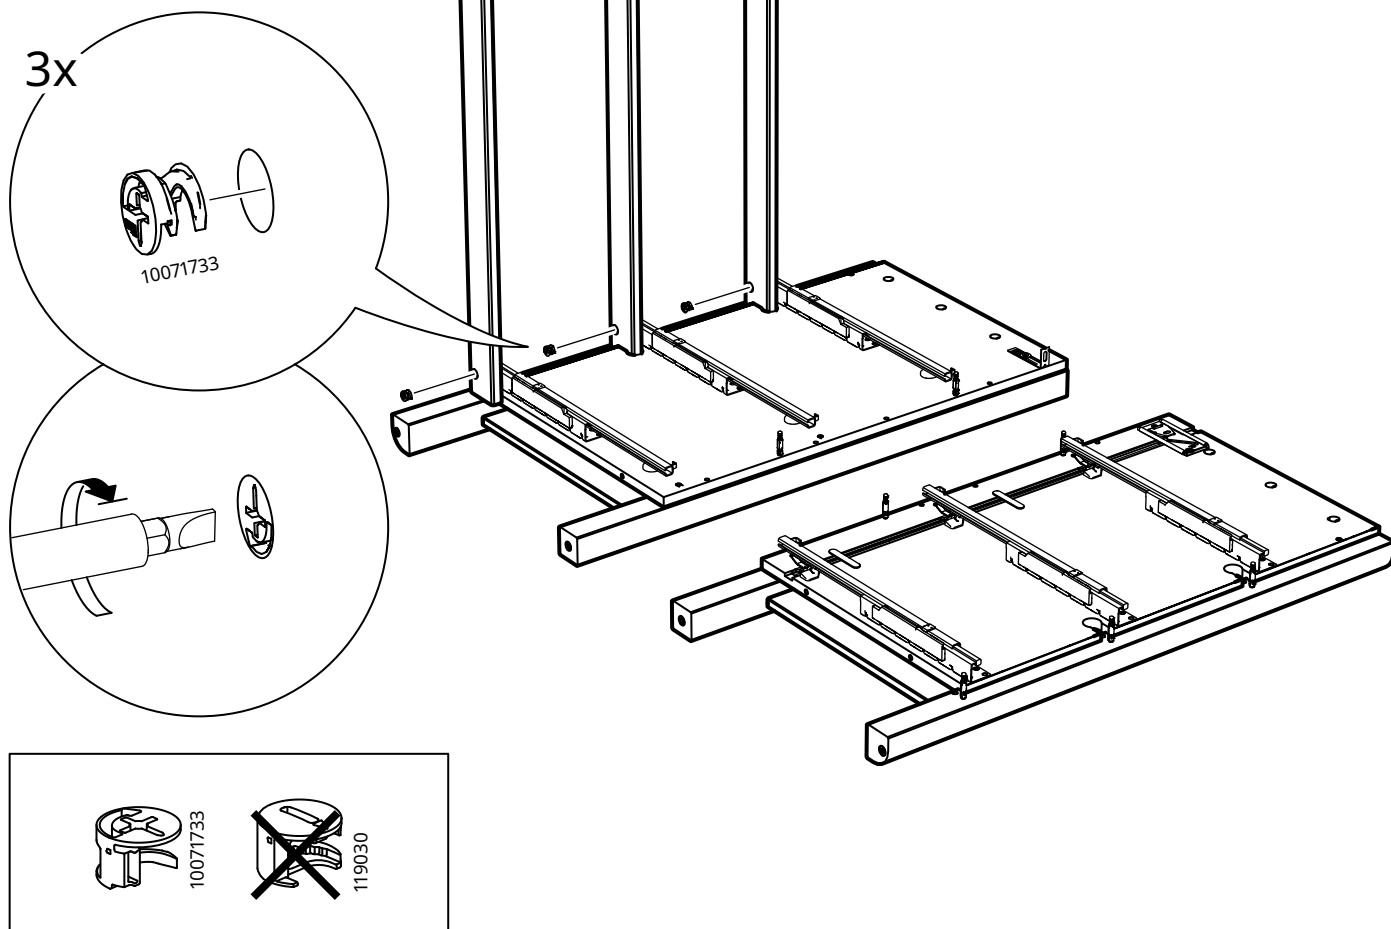 



10

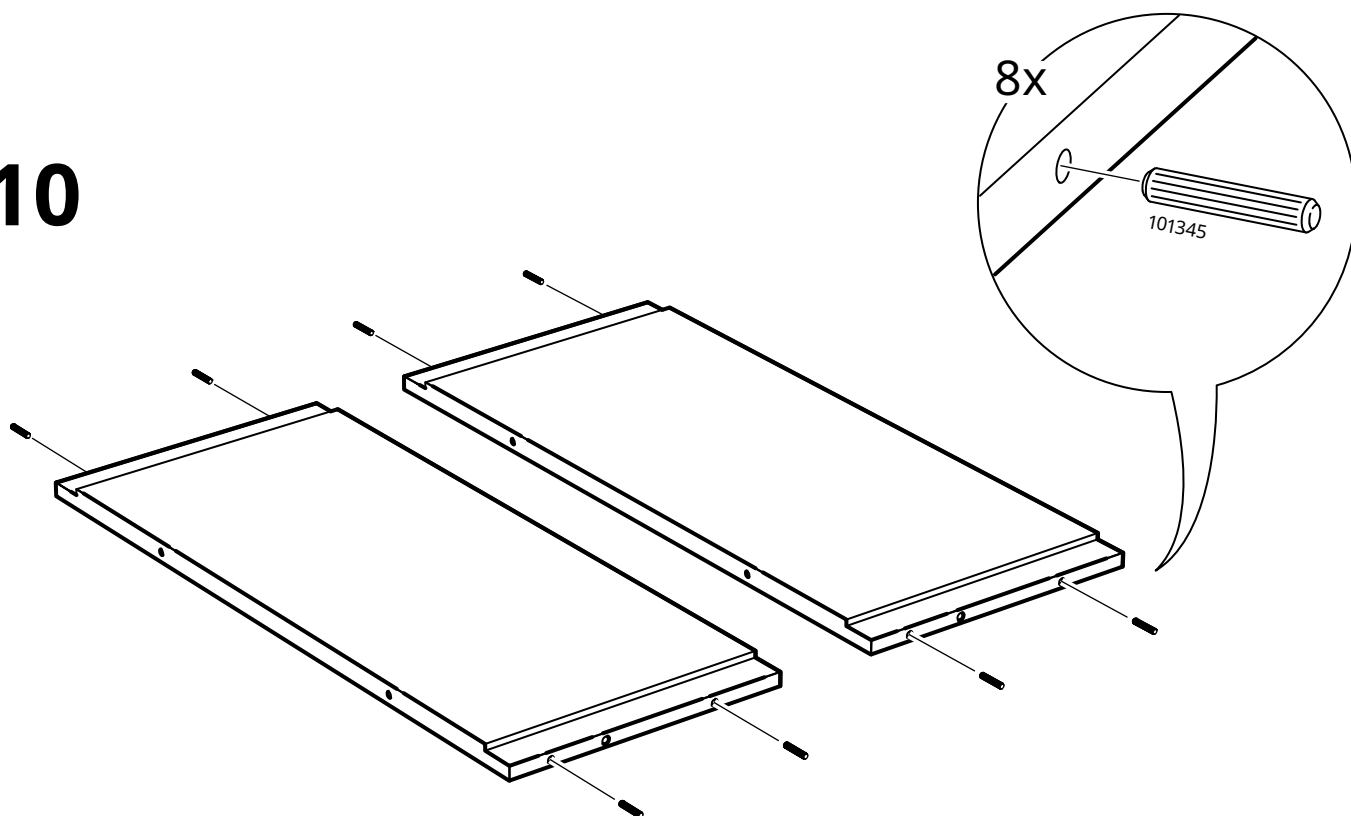 



11

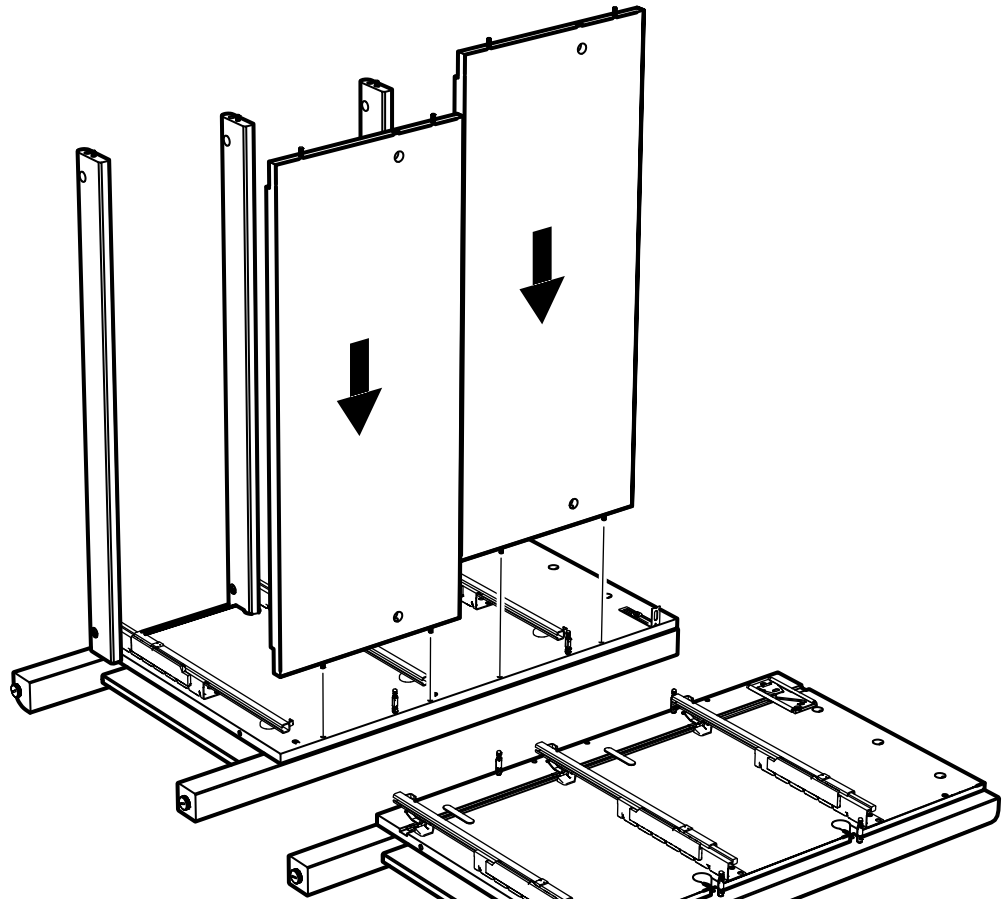 


12

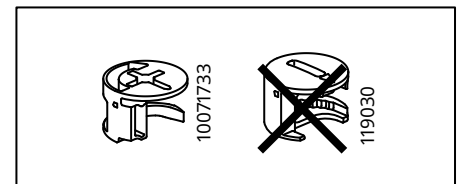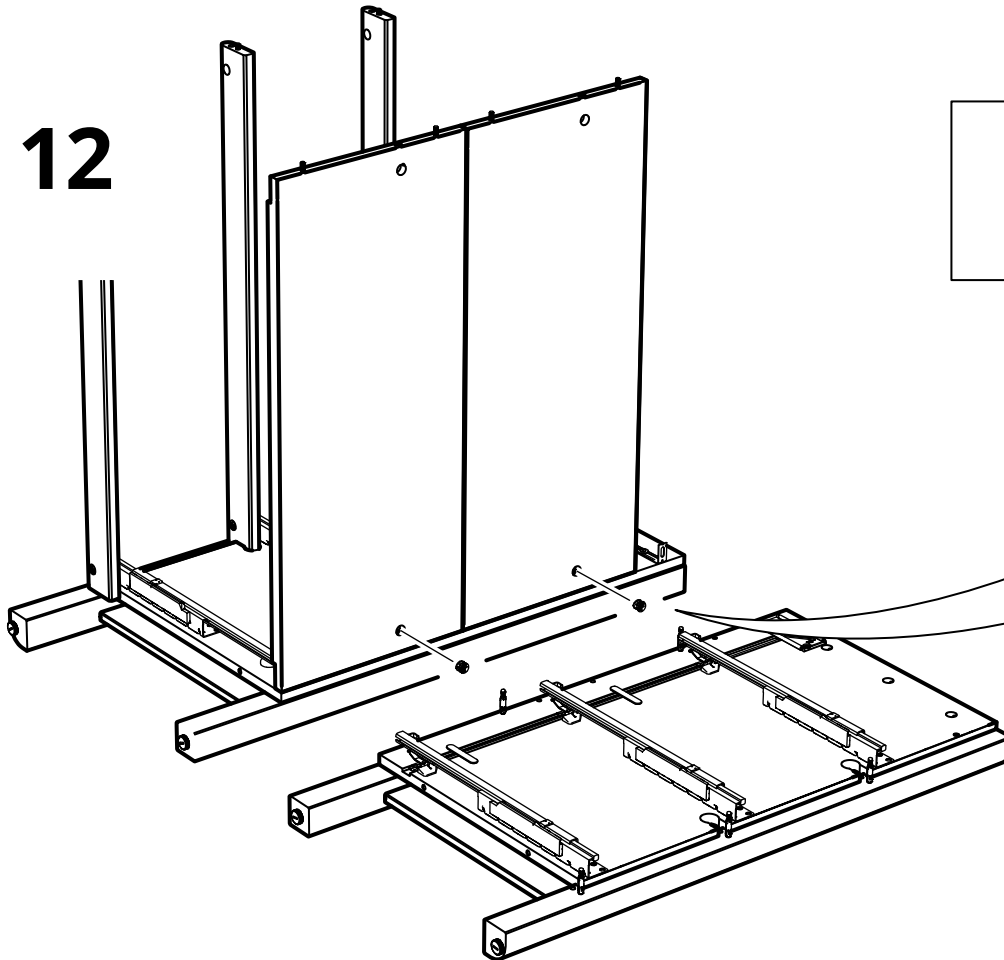  


2x

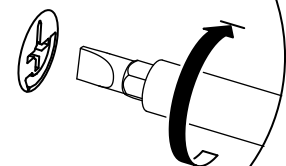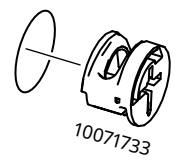  


13

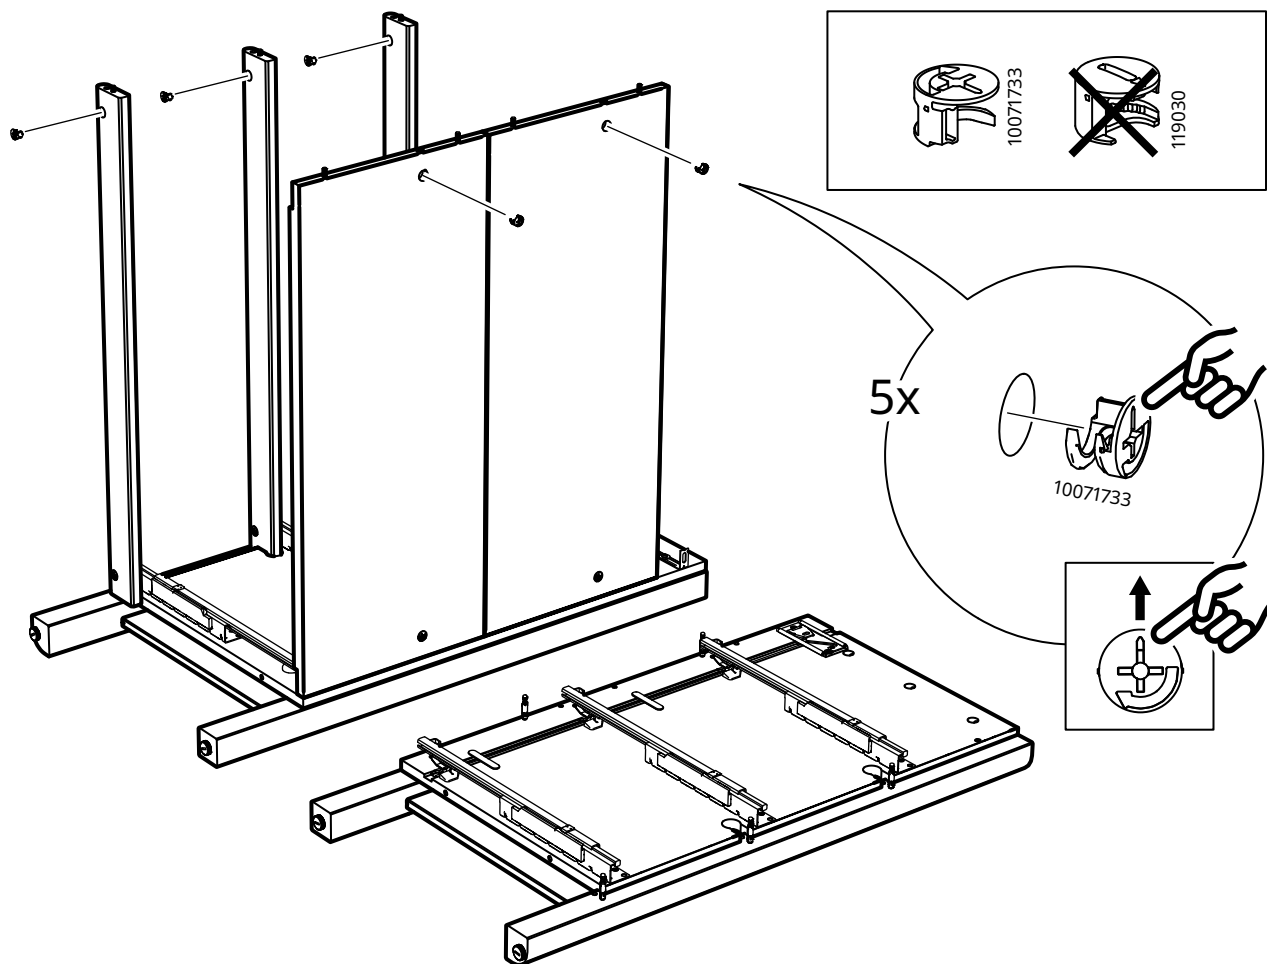 


14

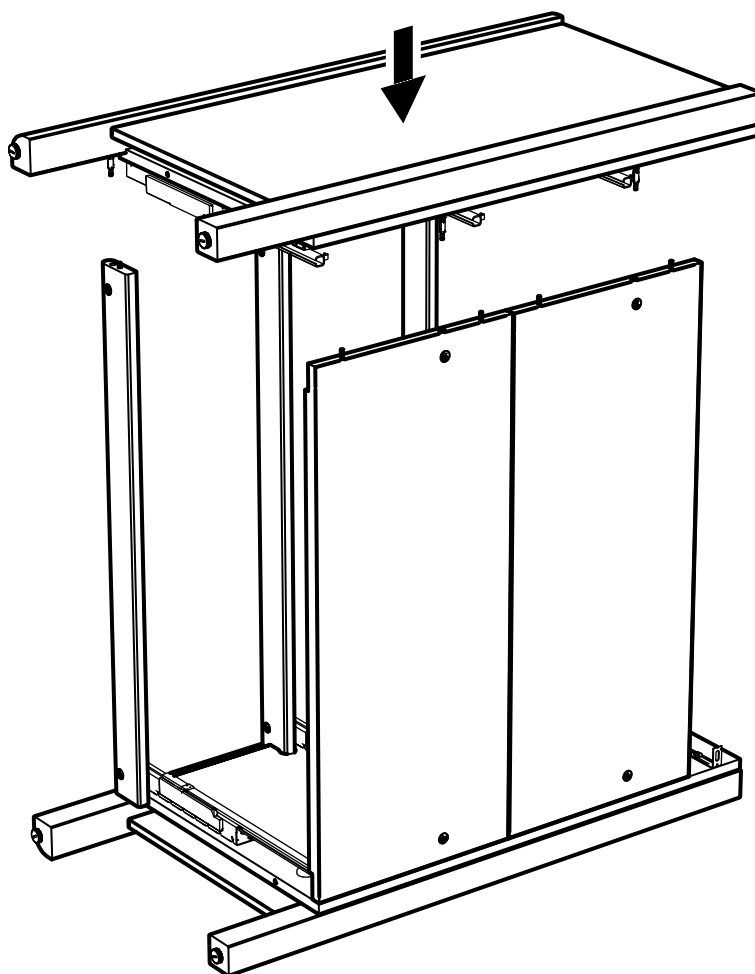 


15

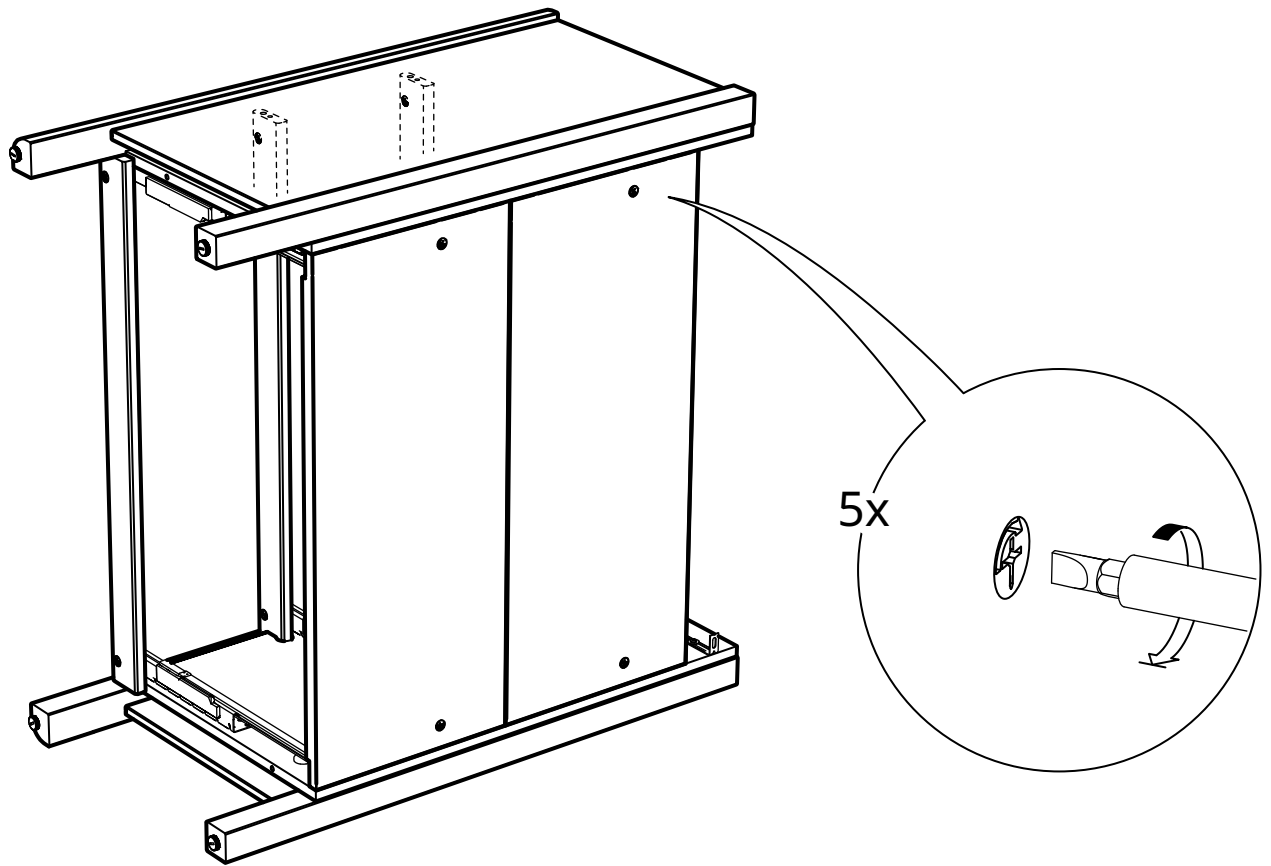 


16

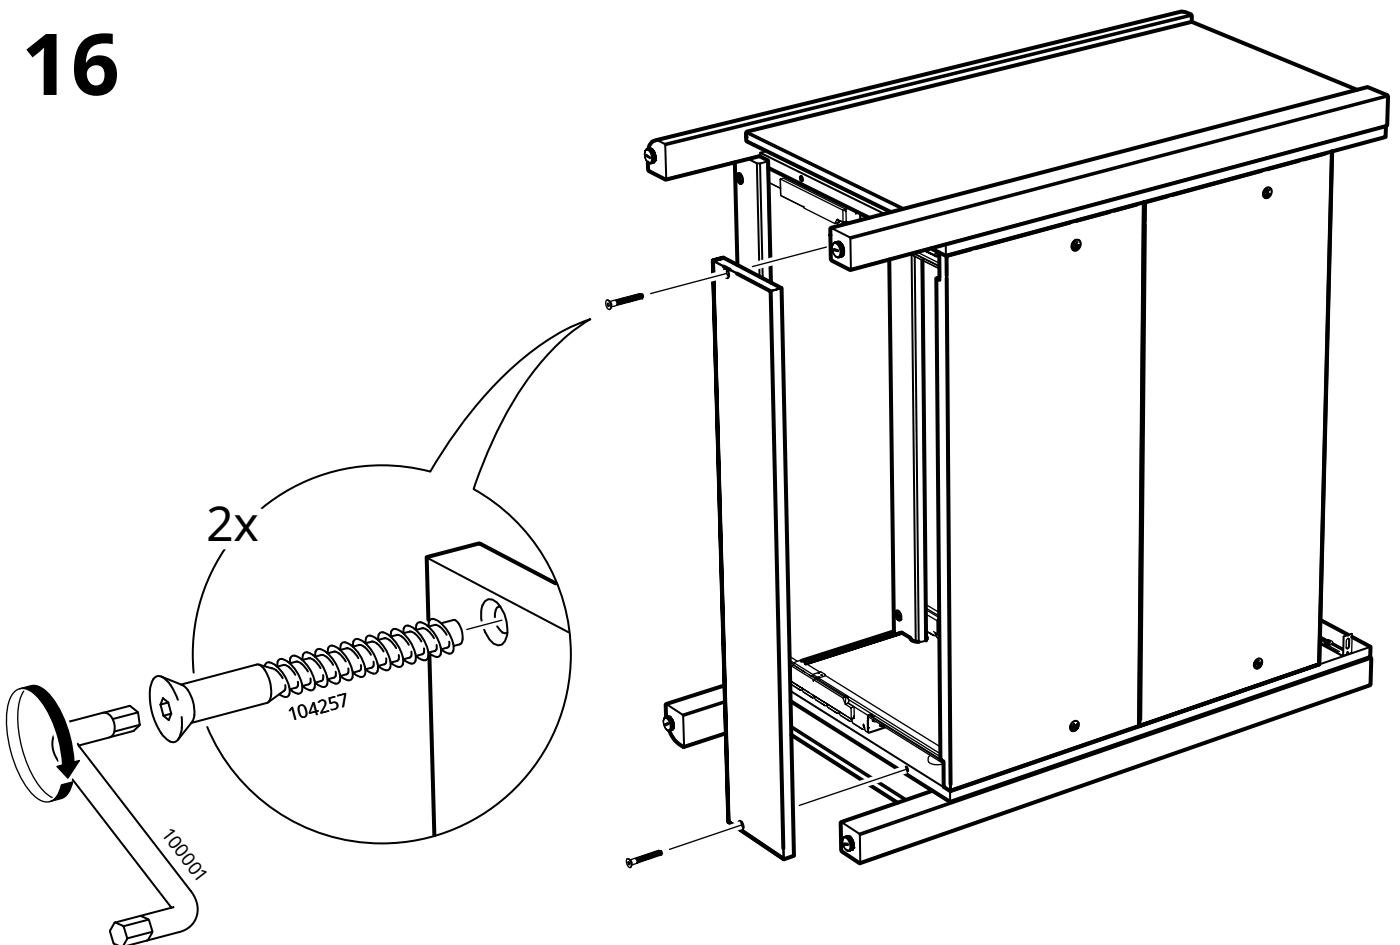 



17

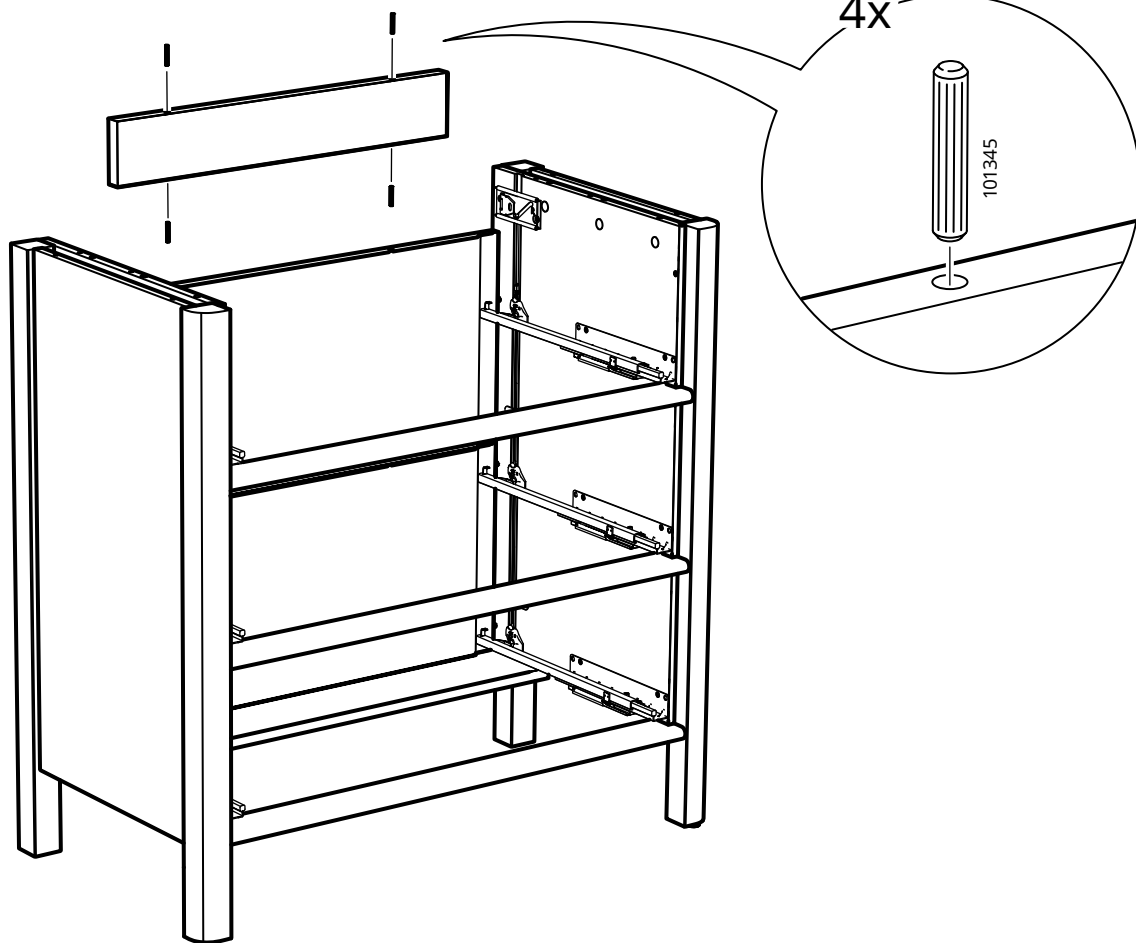 



18

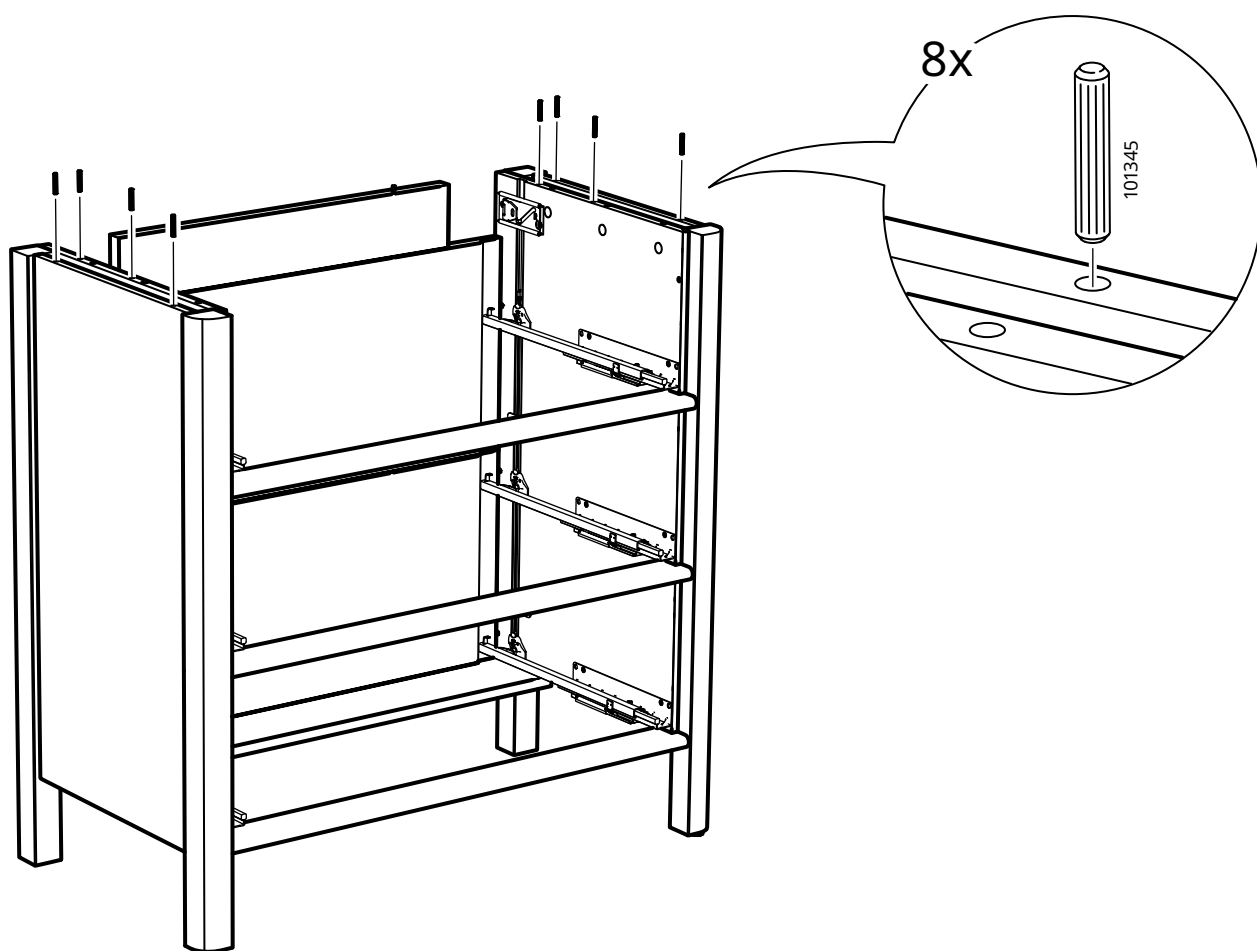 


19

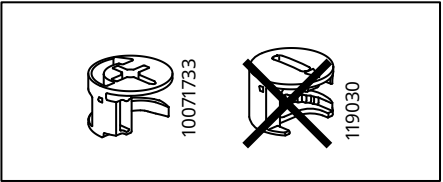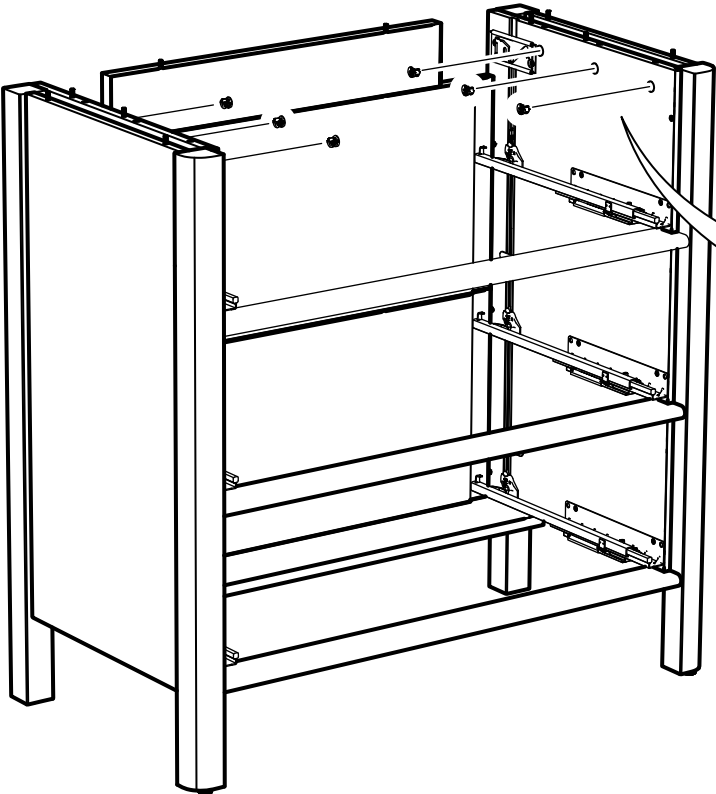  


20

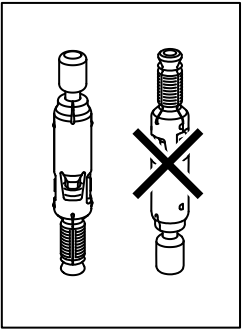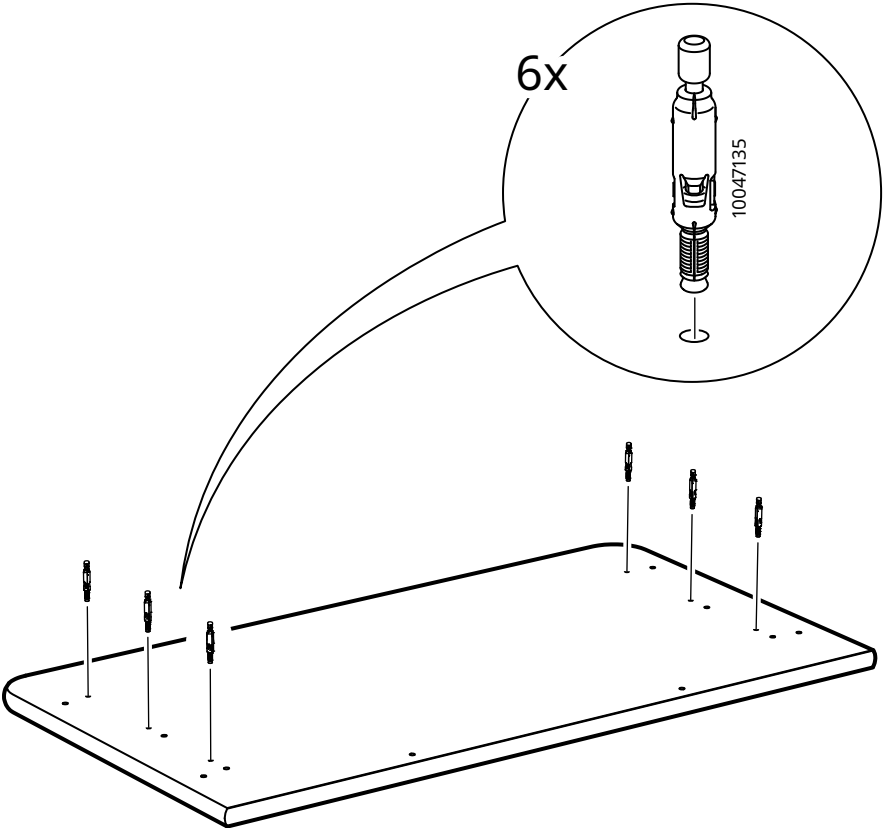  


21



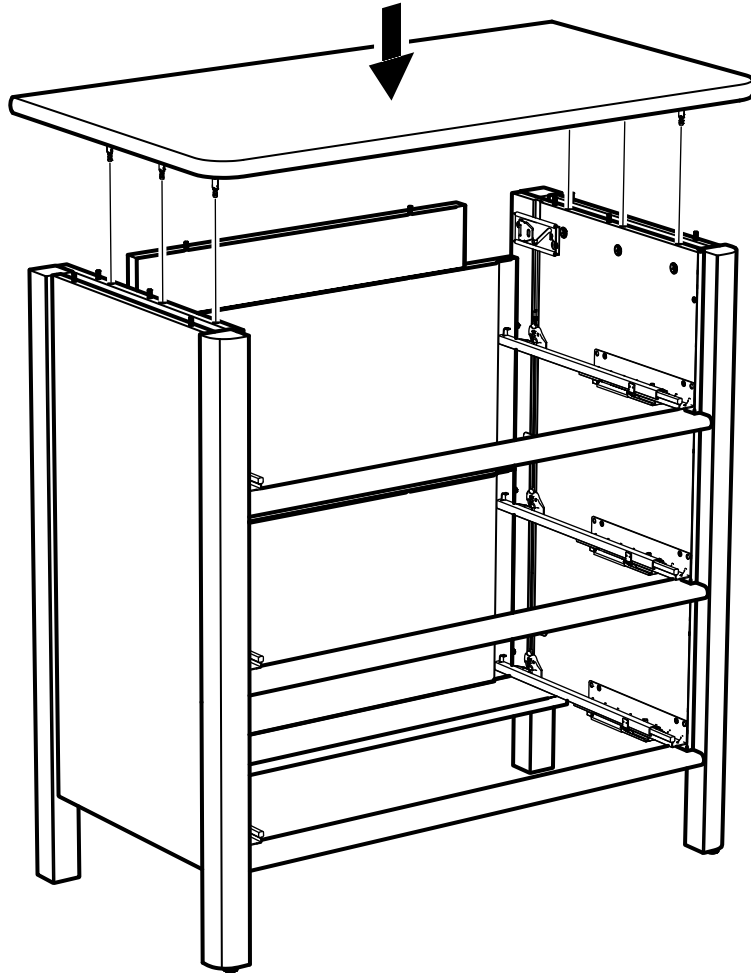 


22




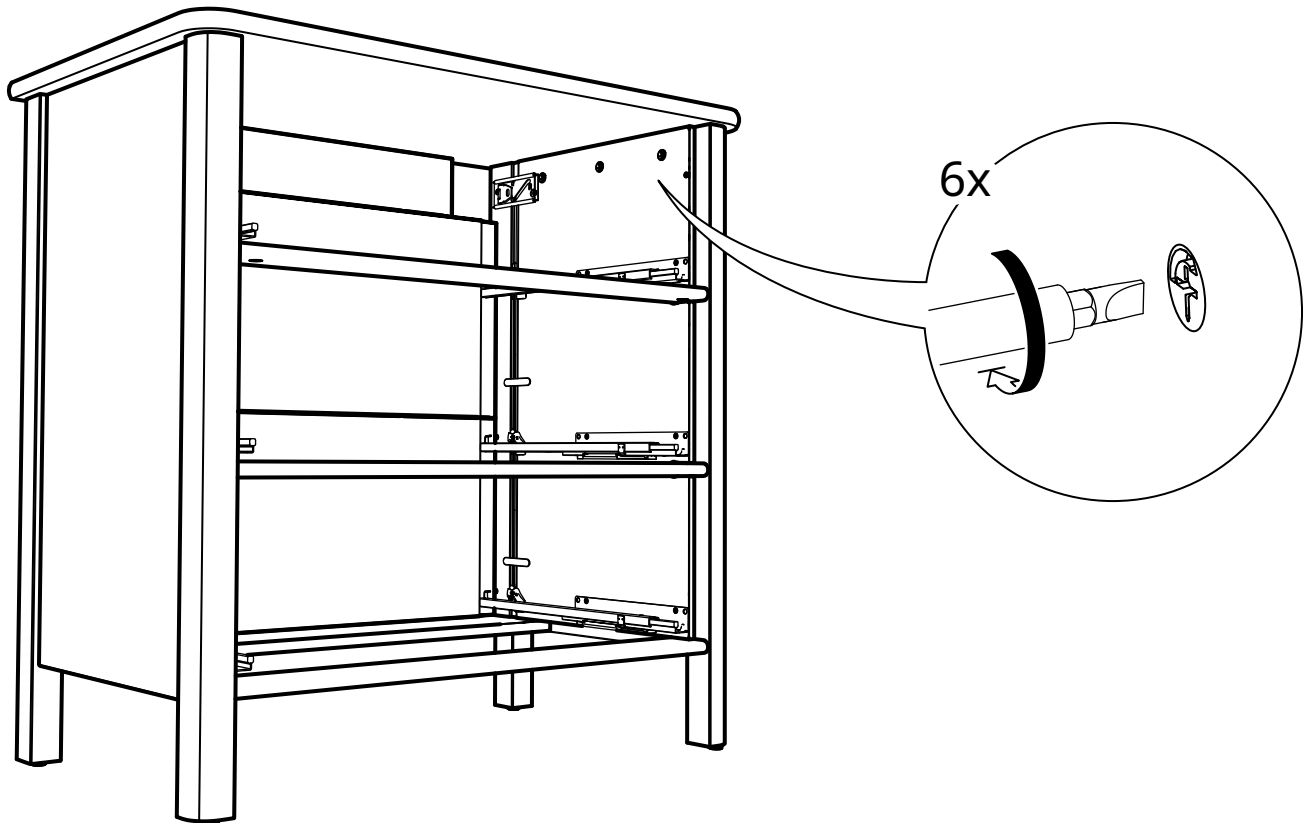 


23

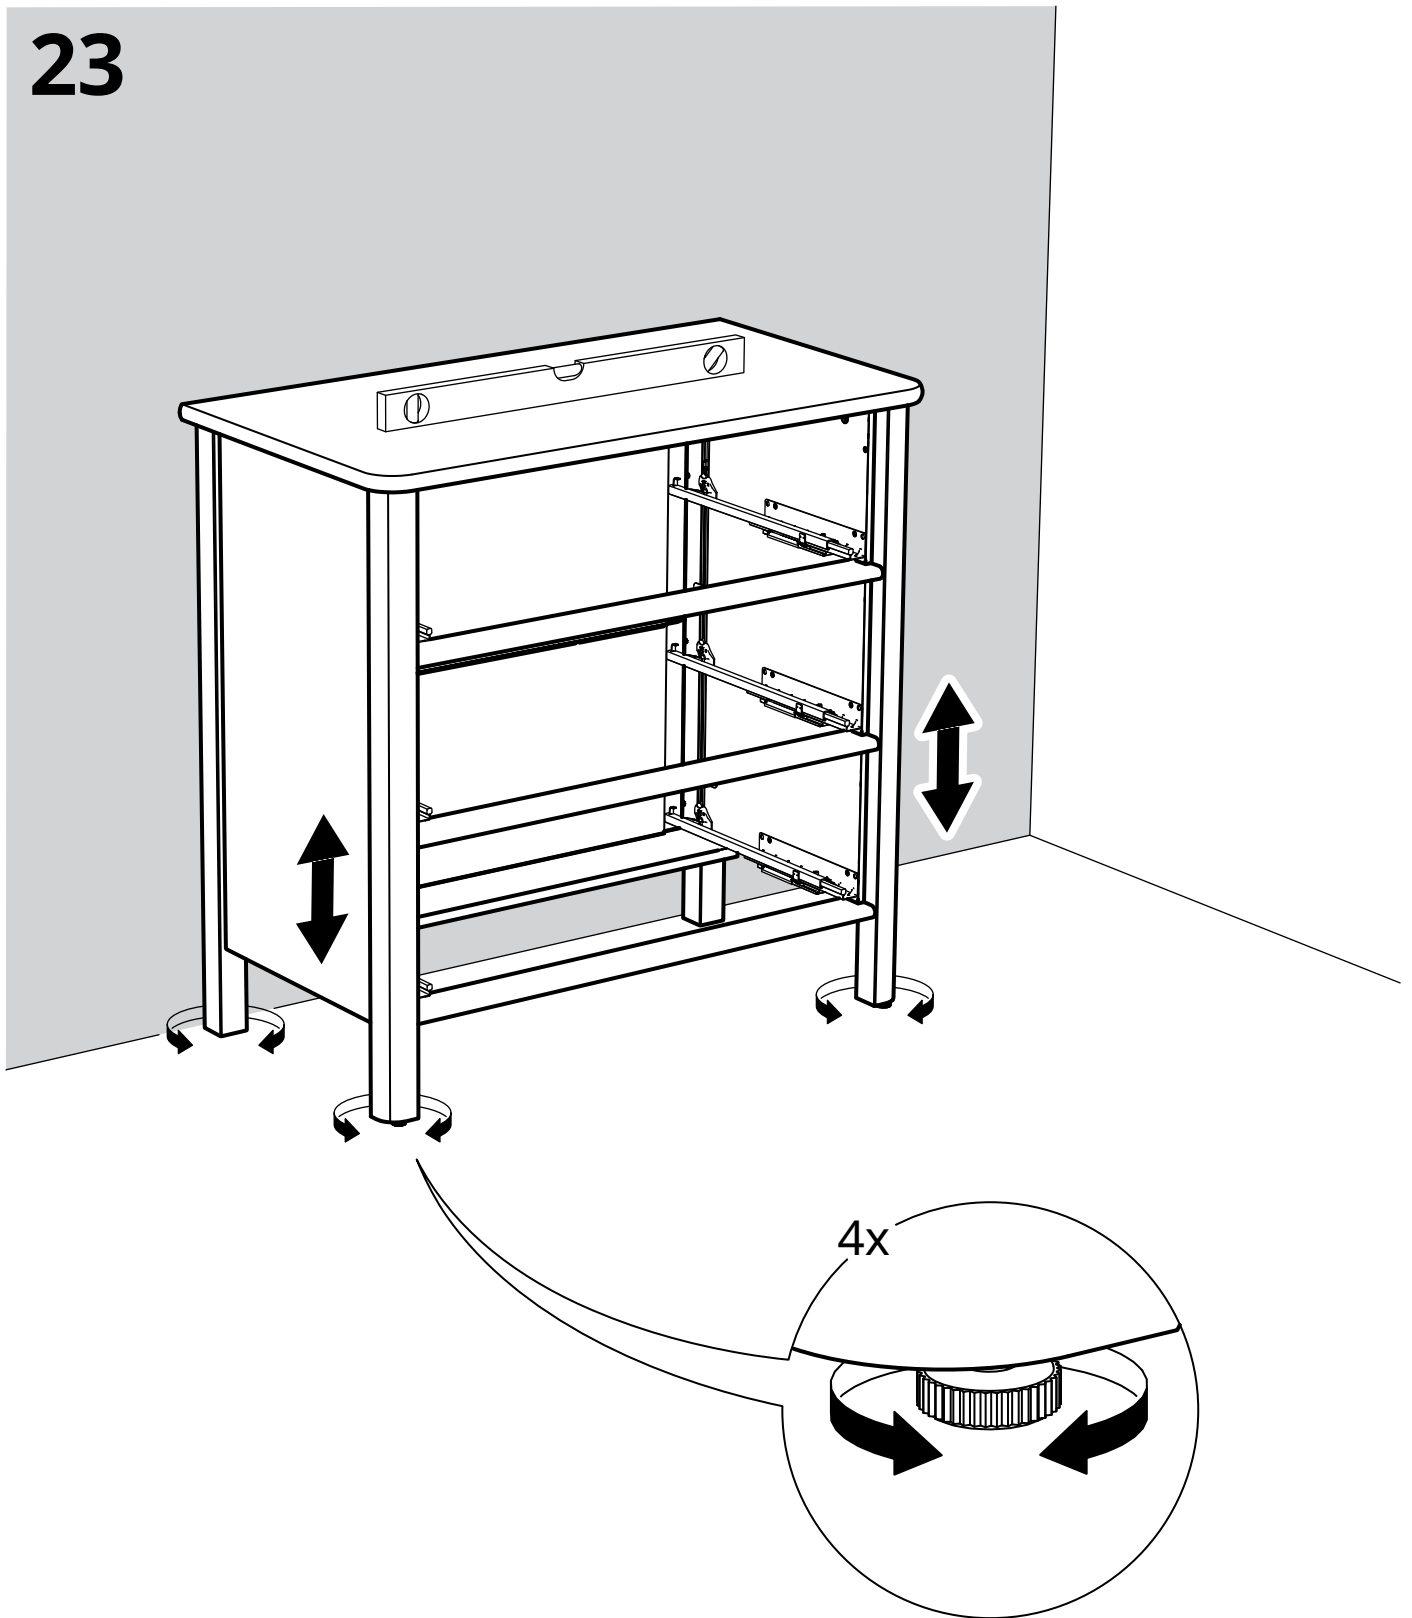 


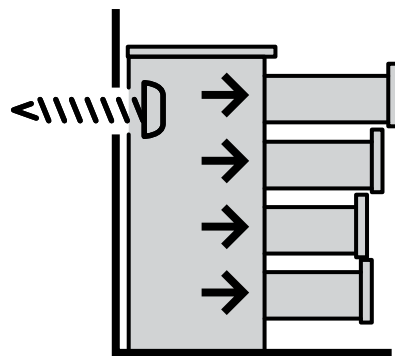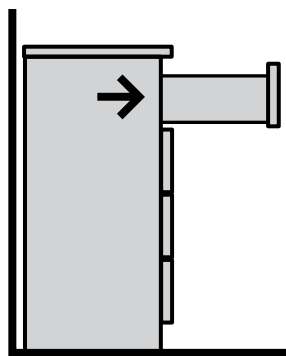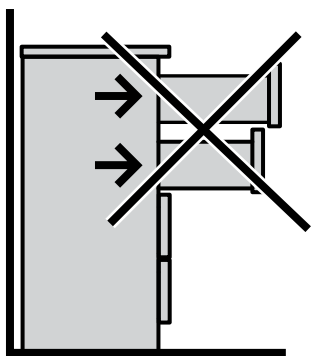   


24

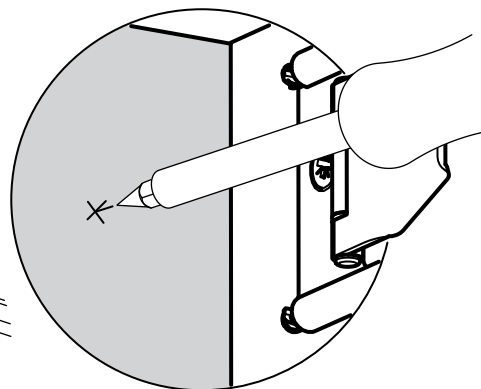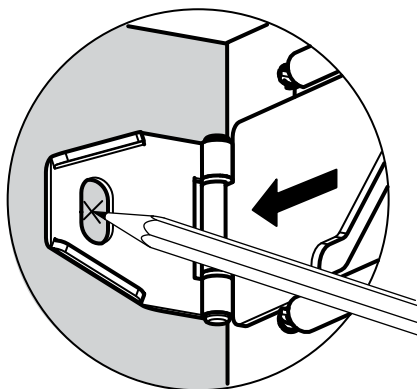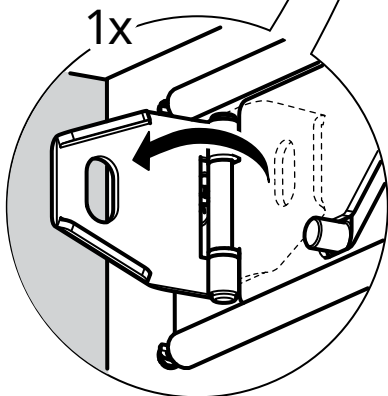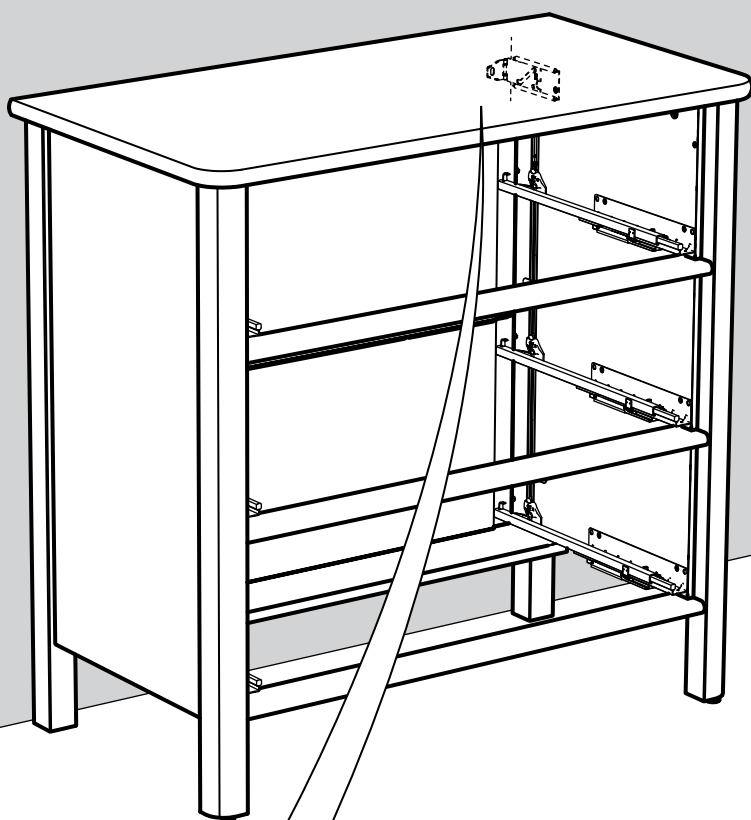    

25

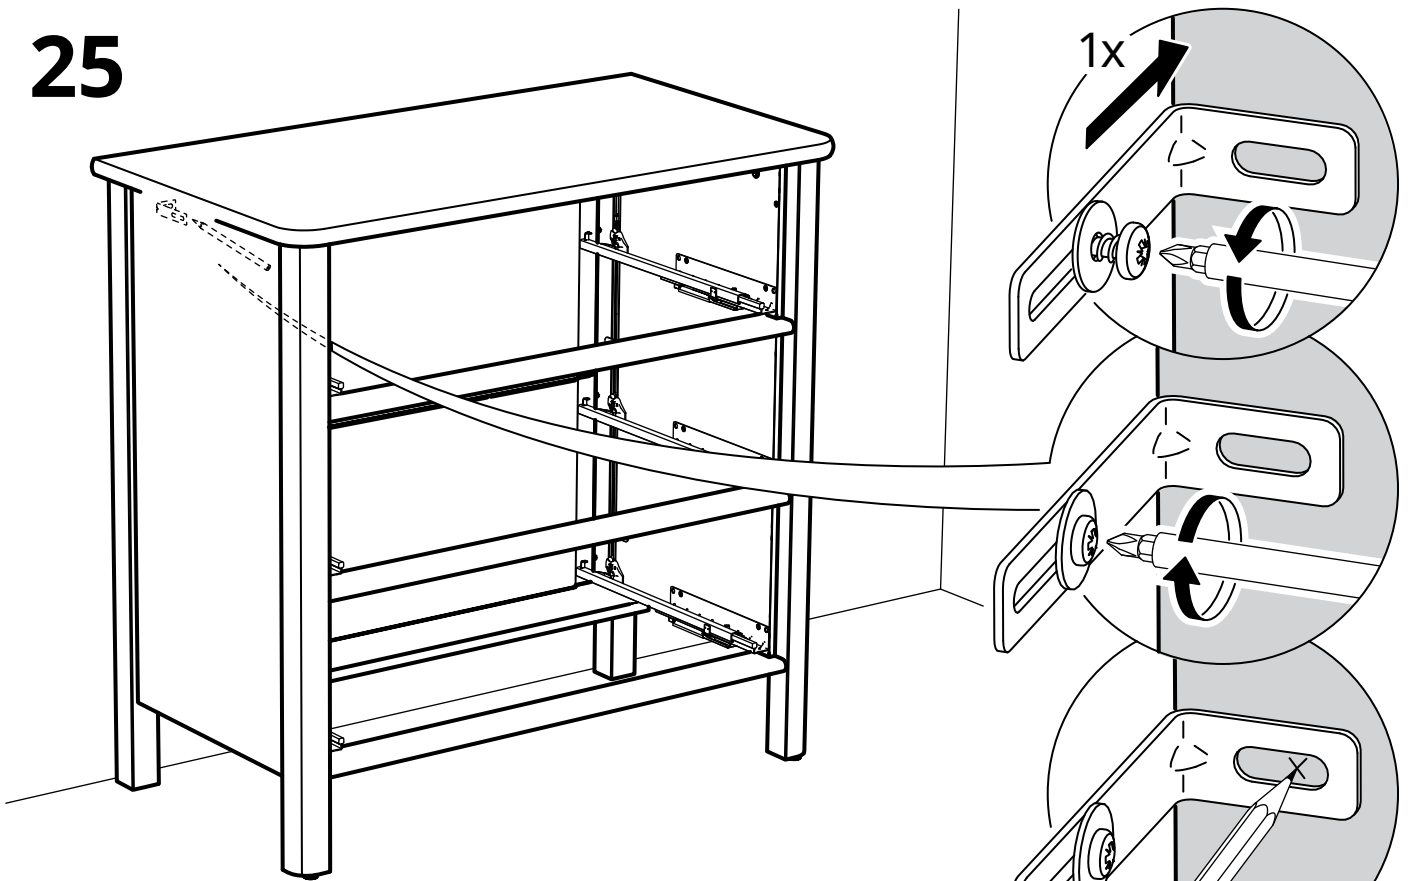 

26

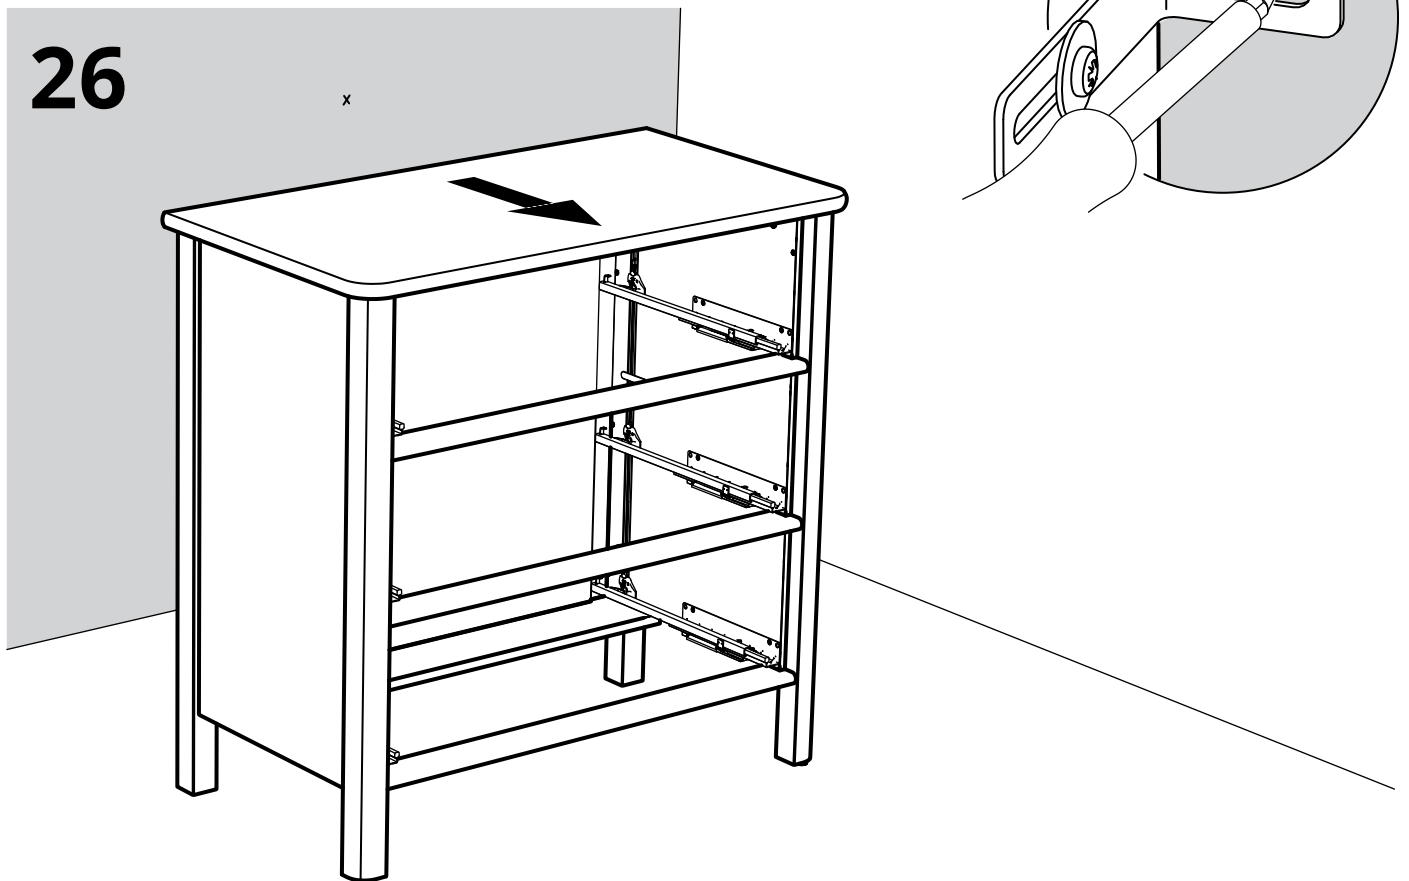 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

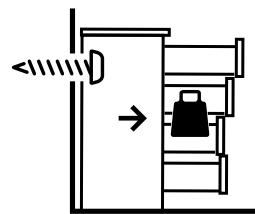


27

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

 
A

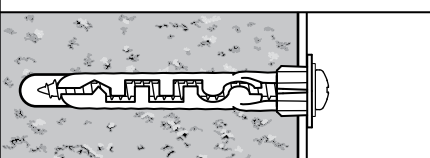


Ø 8 mm
(5/16")



 1




2

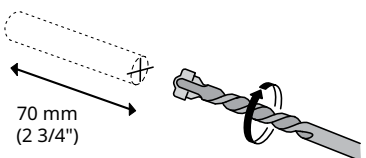 


70 mm
(2 3/4")

 3

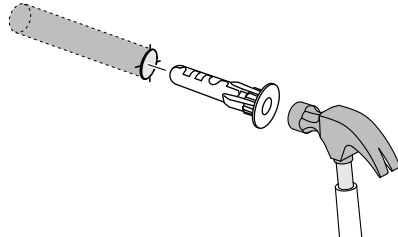


B

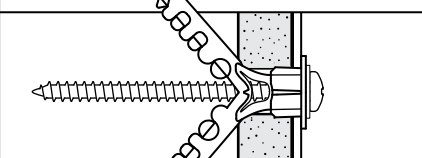 


Ø 8 mm
(5/16")



 1




2

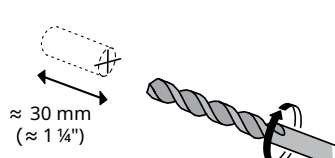 


≈ 30 mm
(≈ 1 1/4")

 3

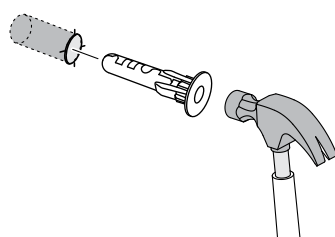


C

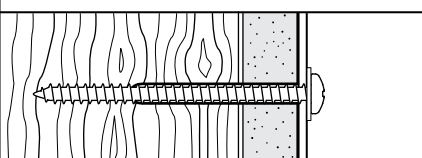 


Ø 3 mm
(1/8")



 1






2

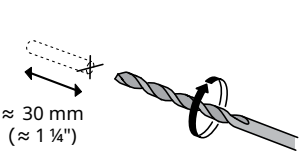 



≈ 30 mm
(≈ 1 1/4")

     3







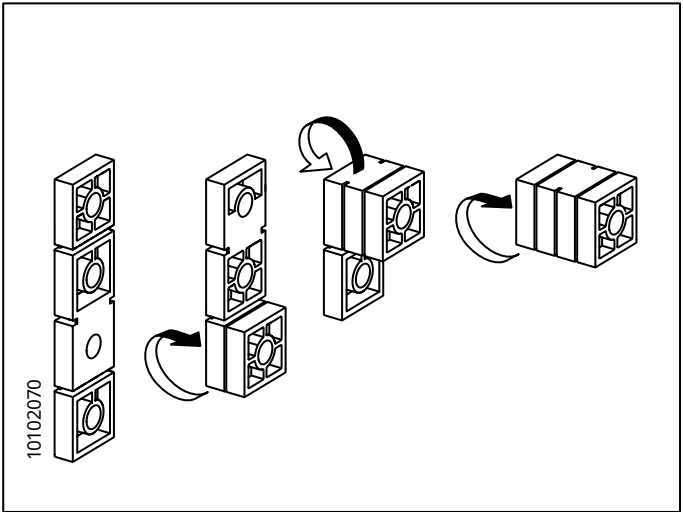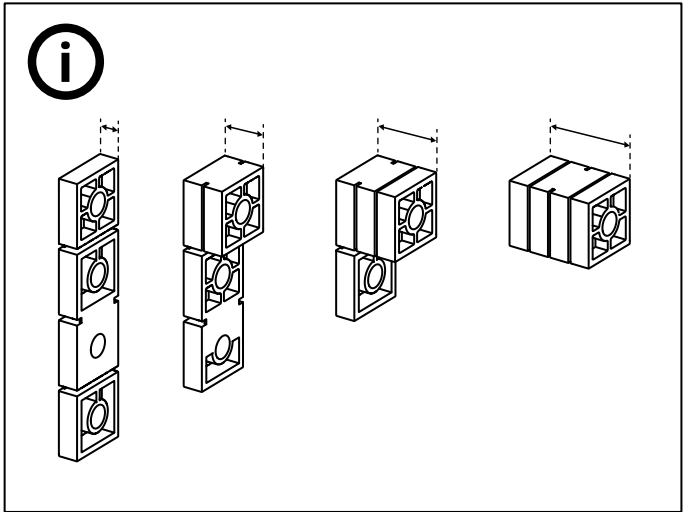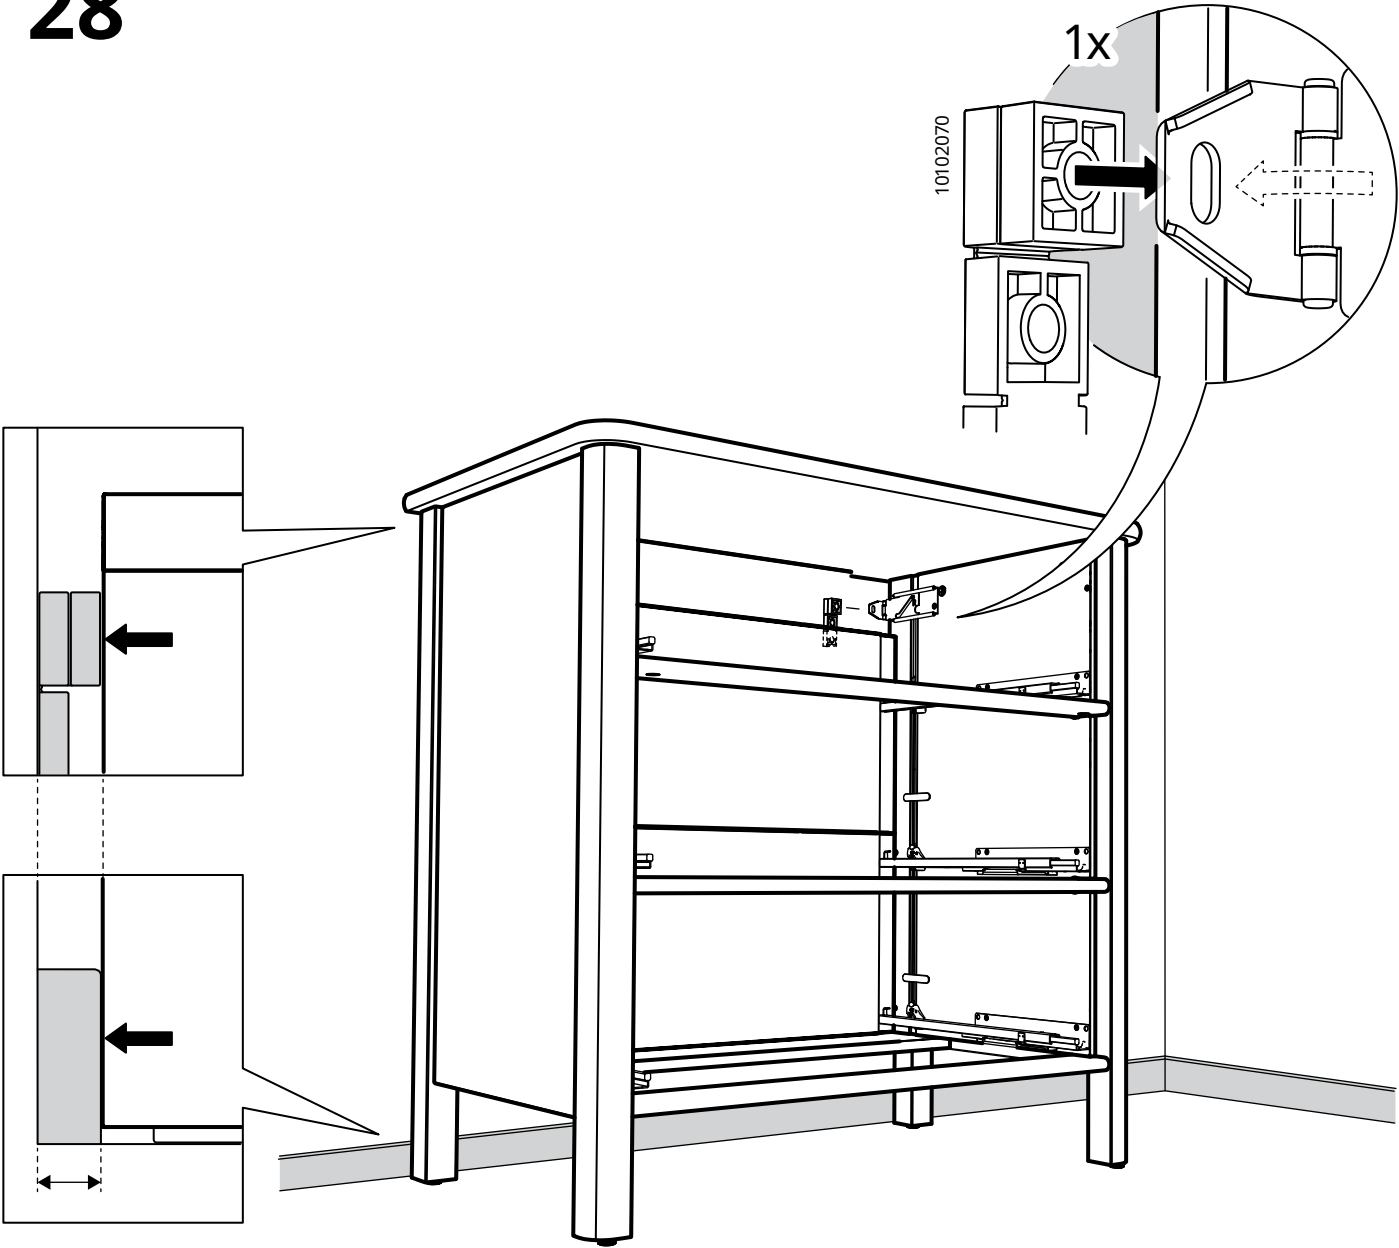


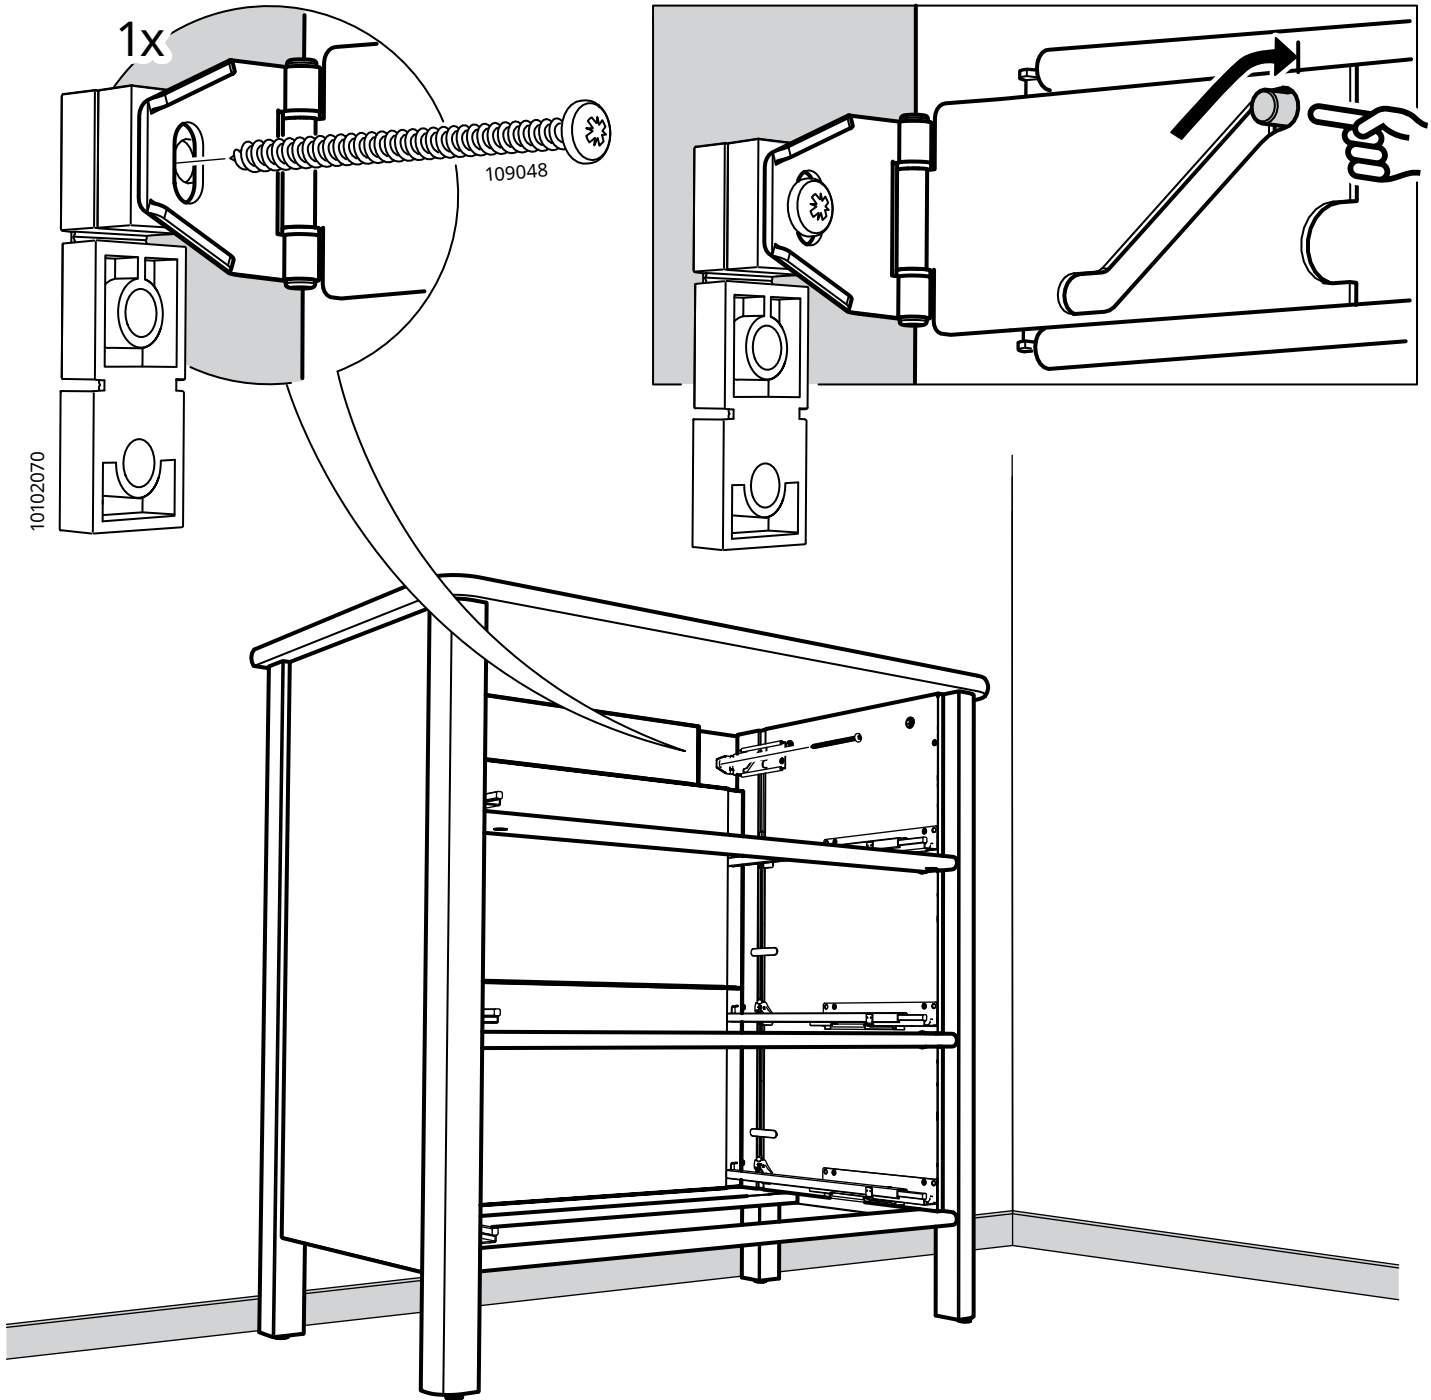


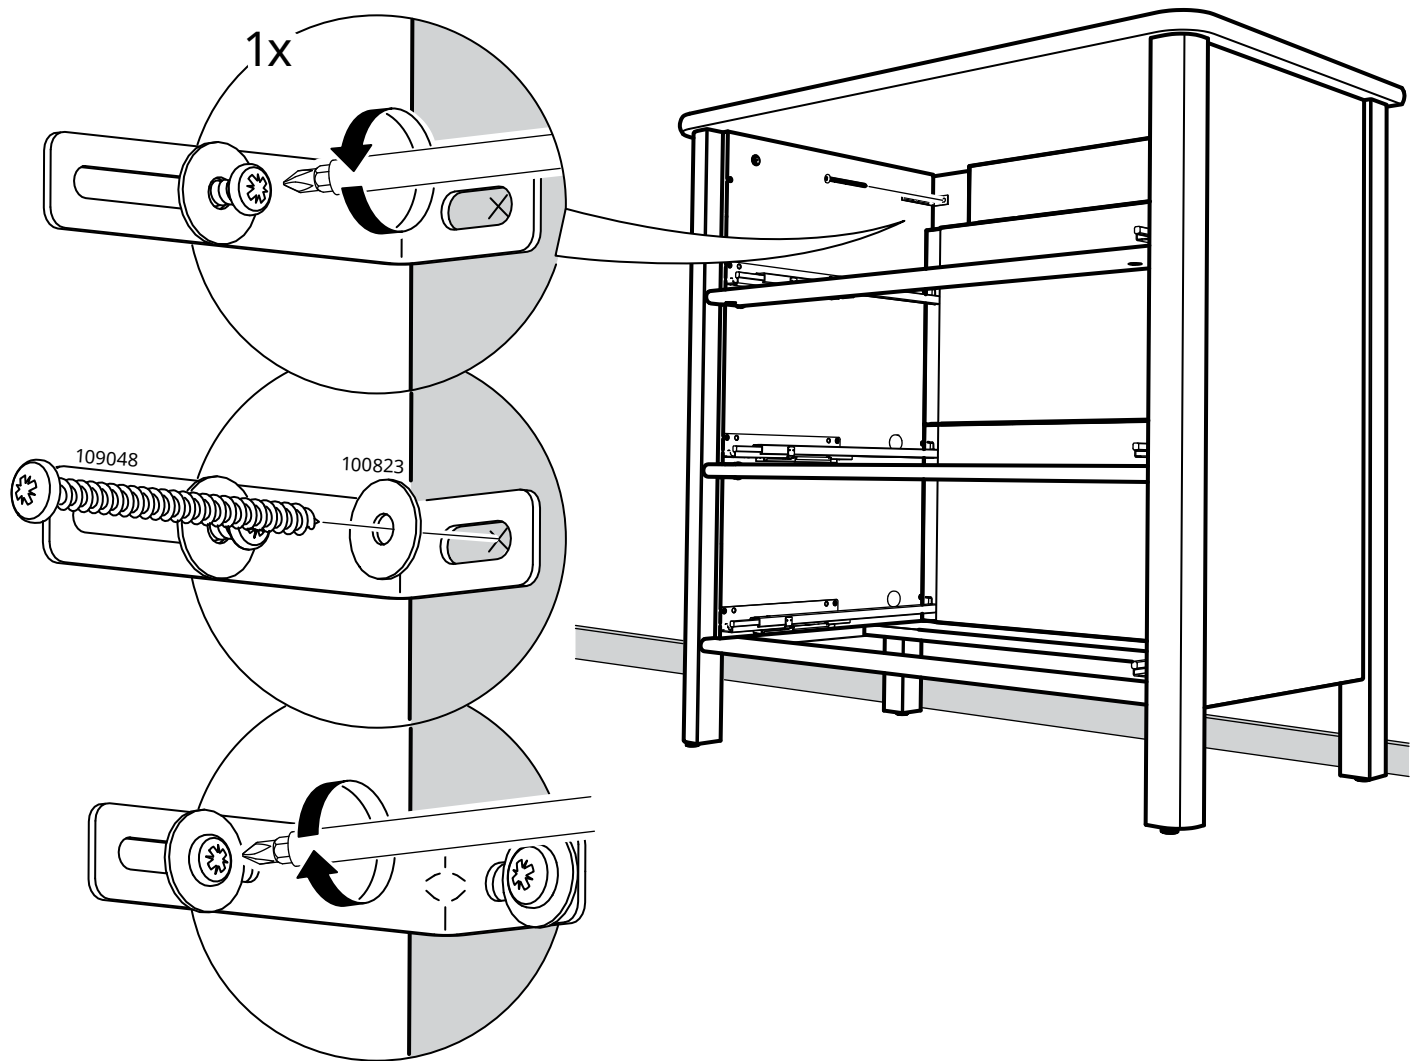


31

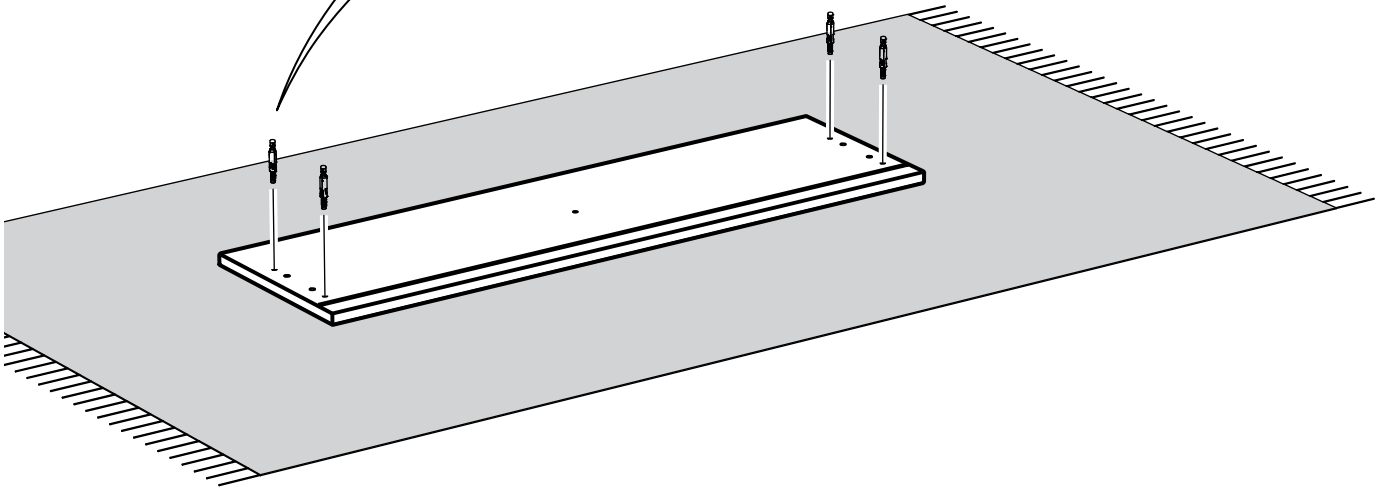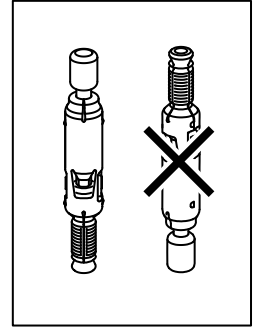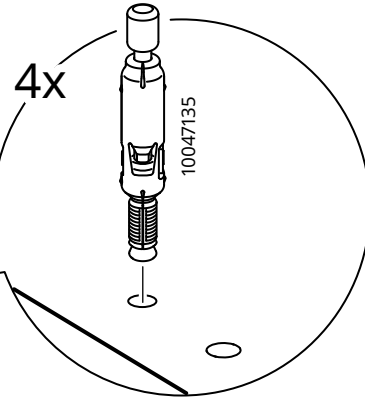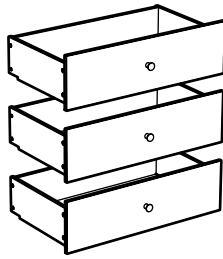    


32

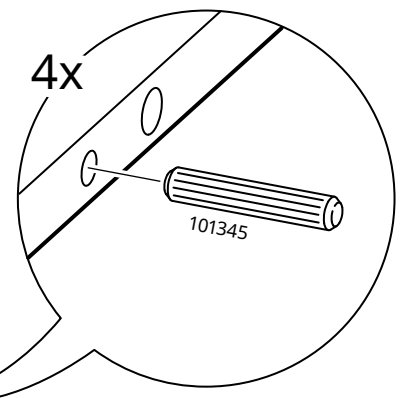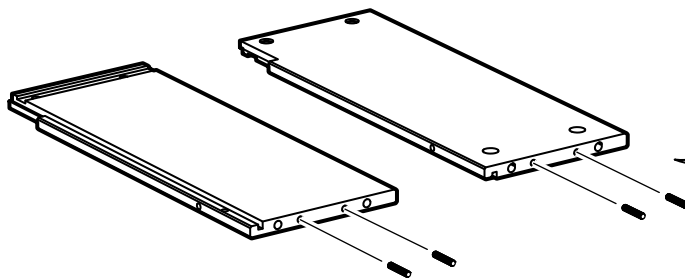  



33

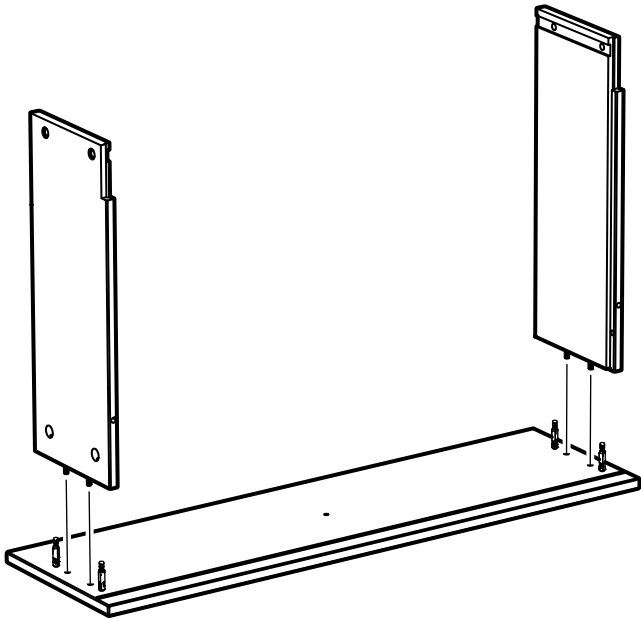 





34

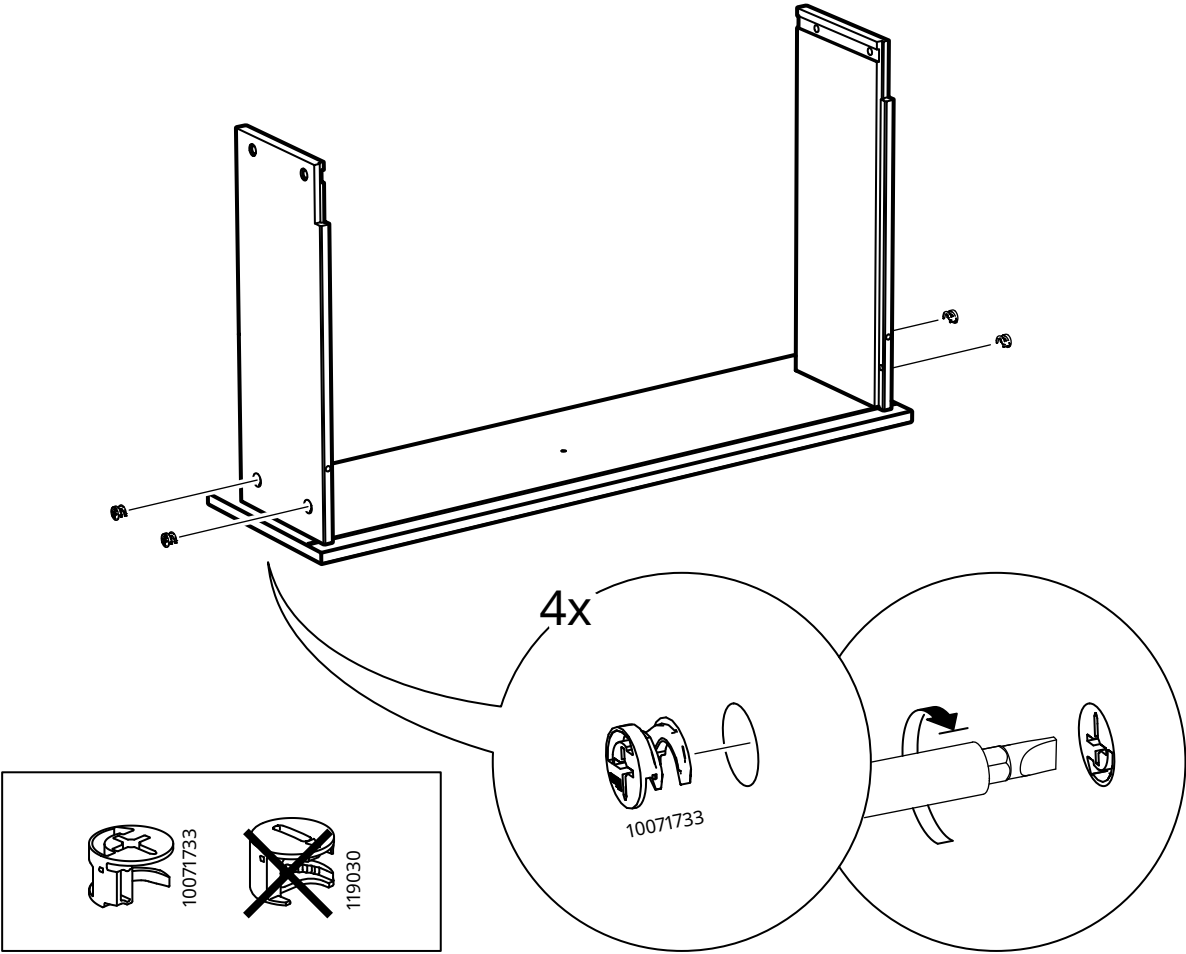 


35

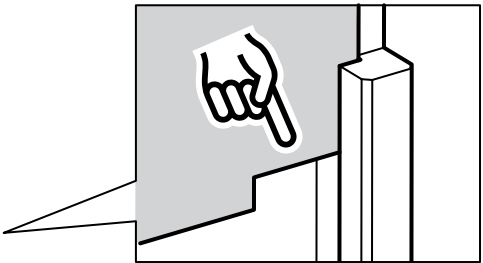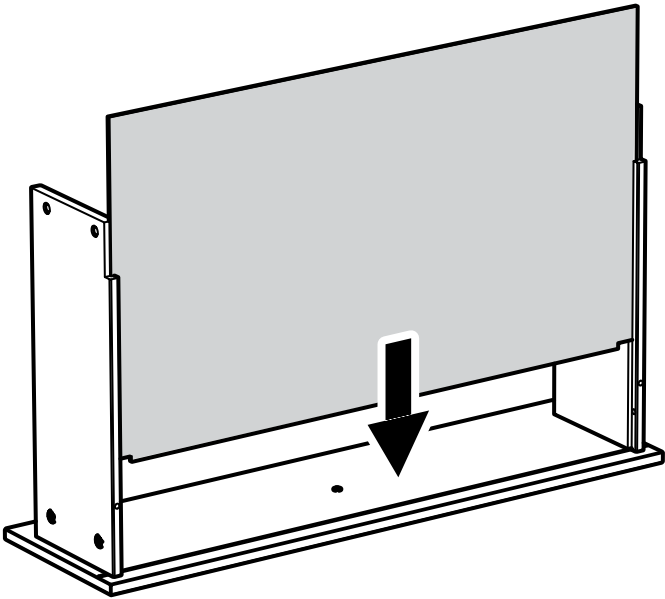  


36

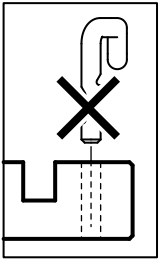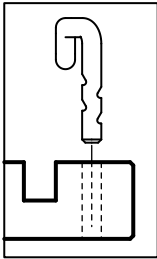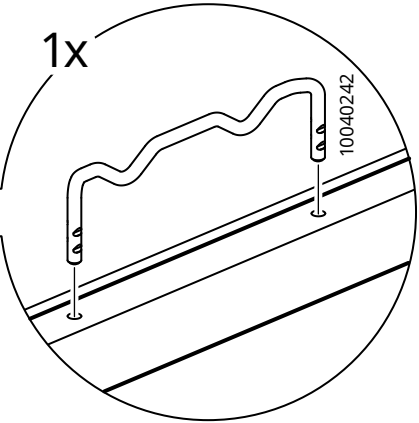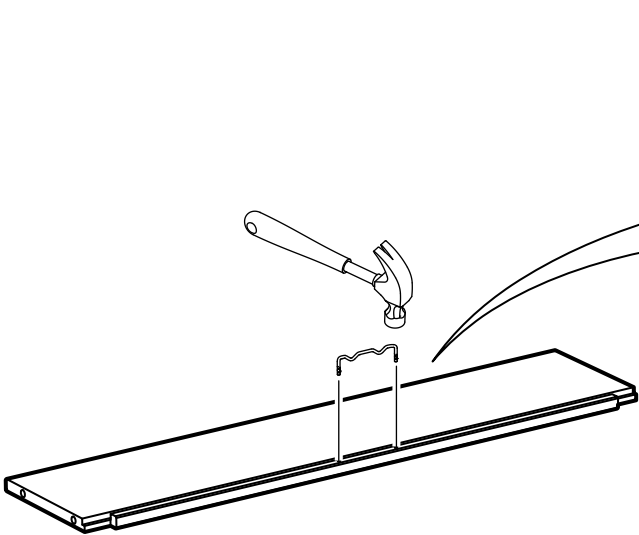    


37

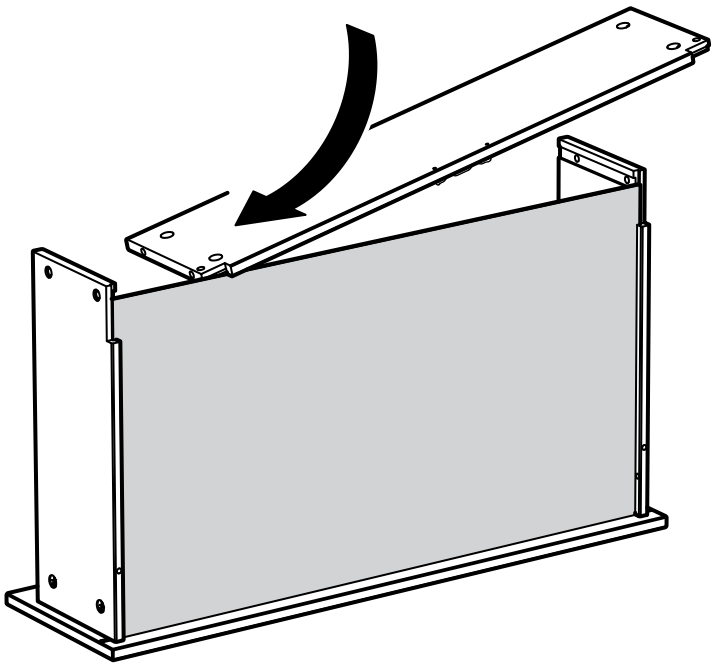 


38

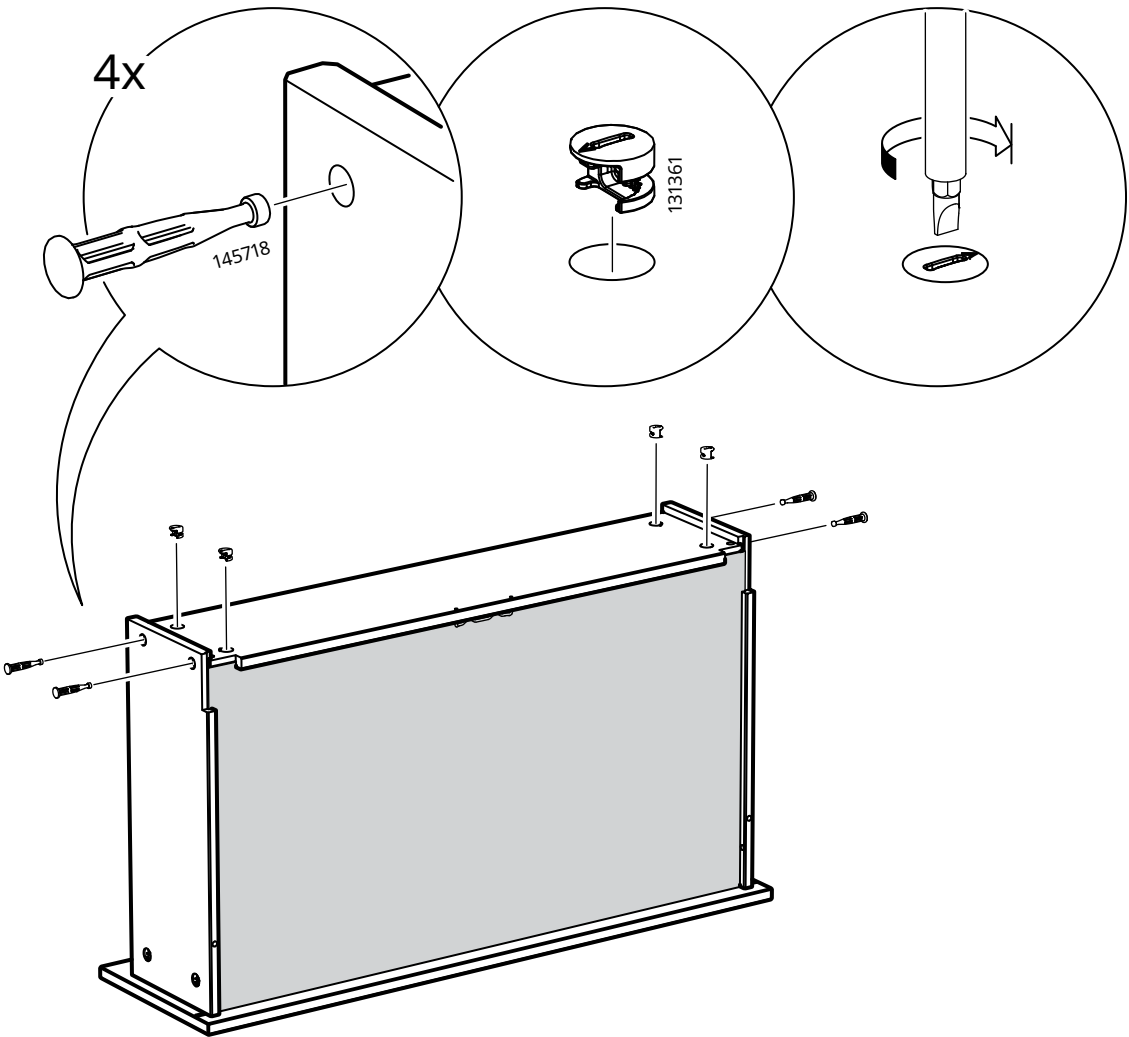 


39

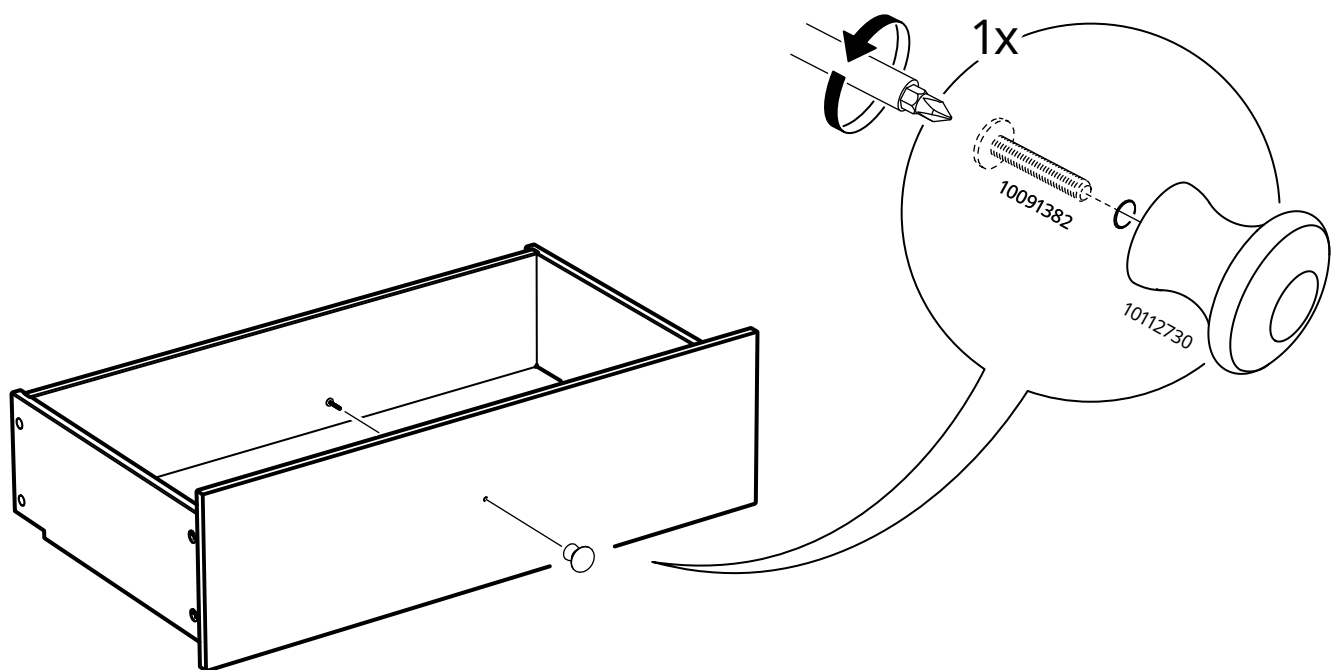 


40

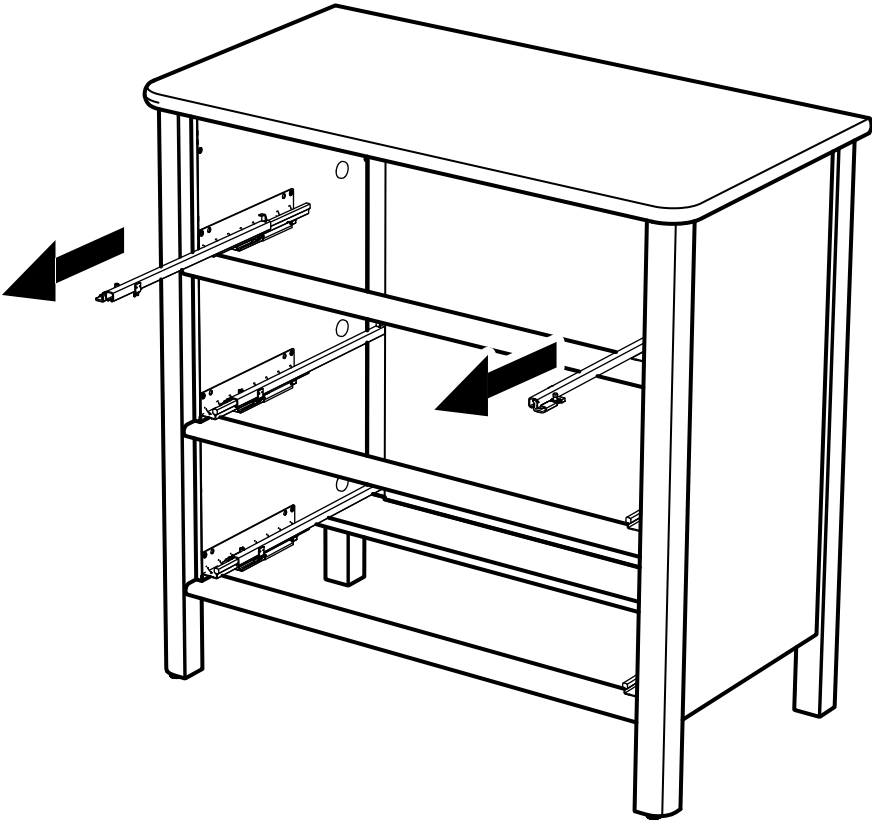 





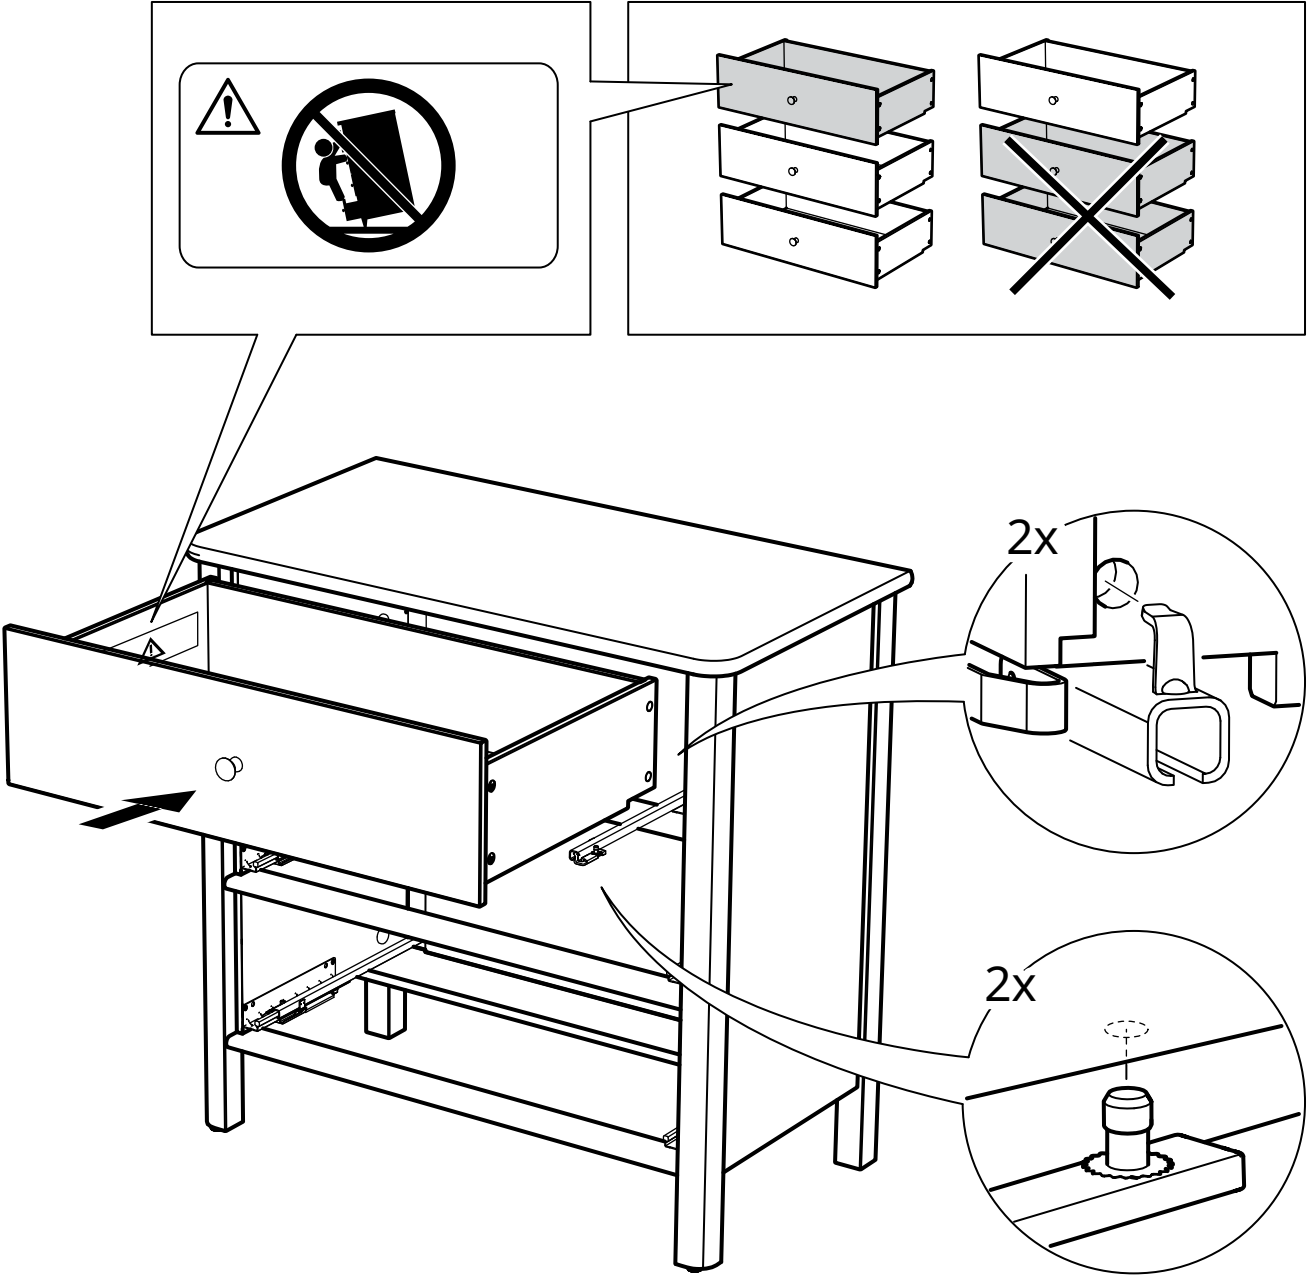 


42

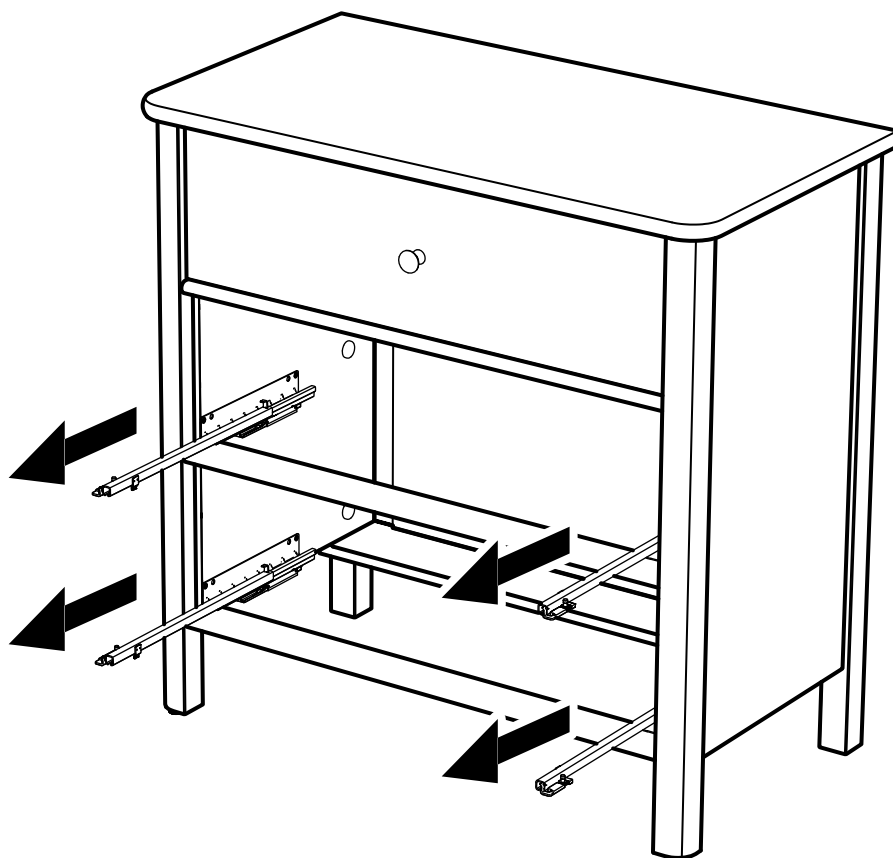 


43


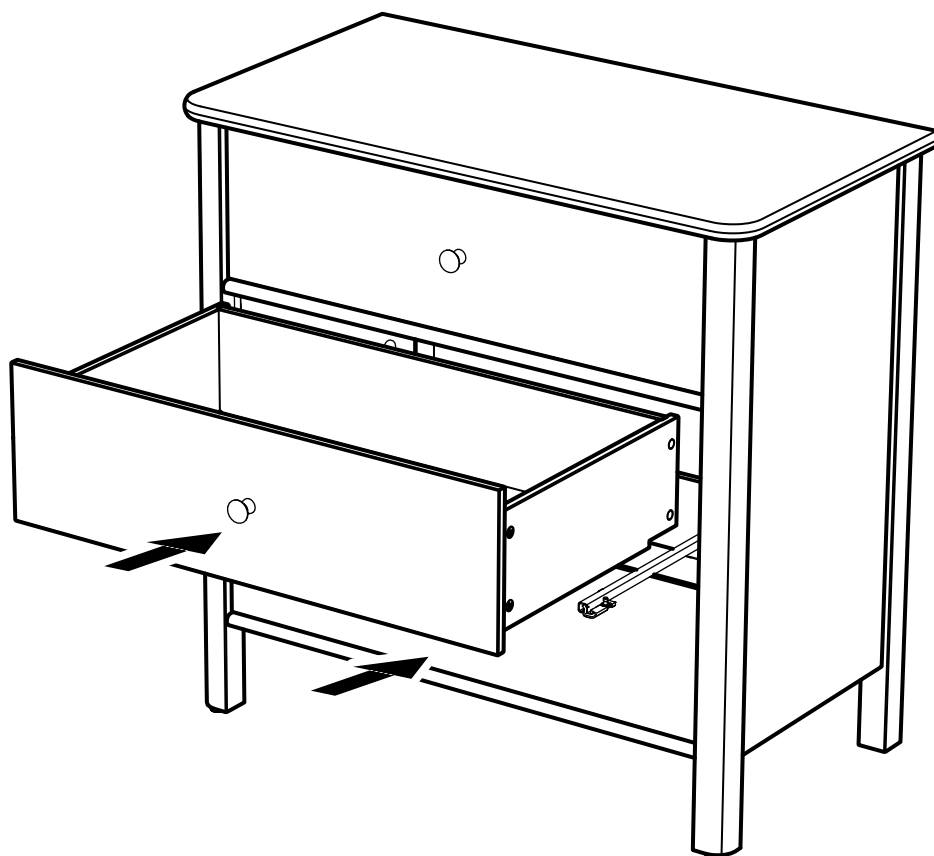 


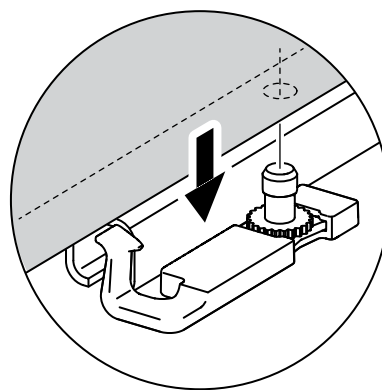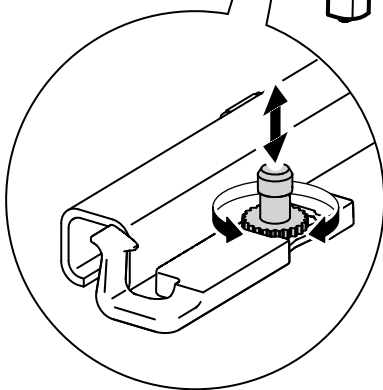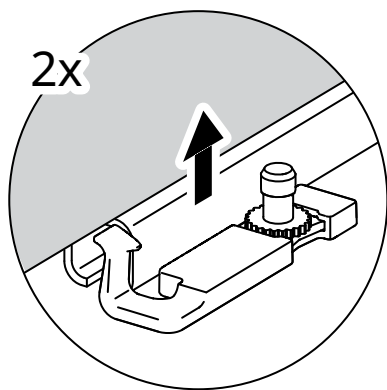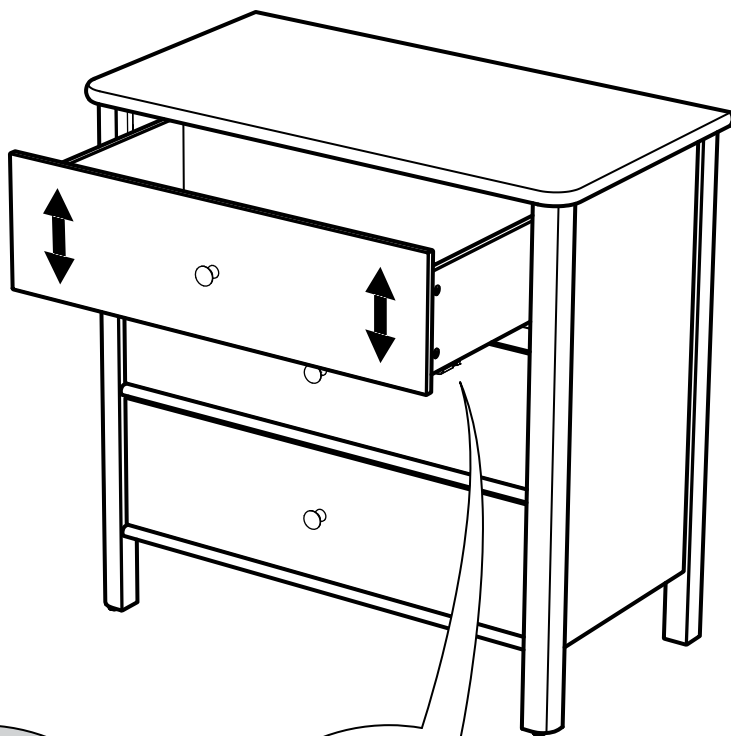    

1

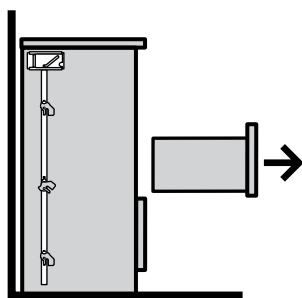 

2

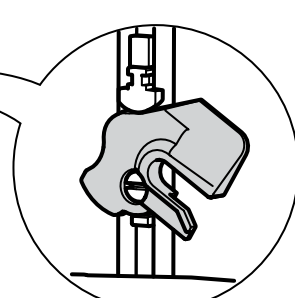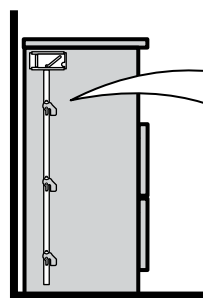  

3

