



**TRIPP-LITE**

# HOW TO REPLACE THE BATTERY IN A 1U UPS SYSTEM

TECHNICAL TRAINING

## IMPORTANT INFORMATION

### Observe Proper Precautions


- Batteries can present a risk of electrical shock and burn from high short-circuit currents. Do not dispose of batteries in case of a fire. Do not open the UPS or batteries. Do not short or bridge the battery terminals with any object.
- During hot-swap battery replacement, the UPS will not provide backup power in the event of a blackout or other power interruptions.
- Do not operate UPS without the correct batteries.



# PROCEDURES

## Step 1


- Using a Phillips screwdriver, remove the front panel's 4 screws located on each corner.

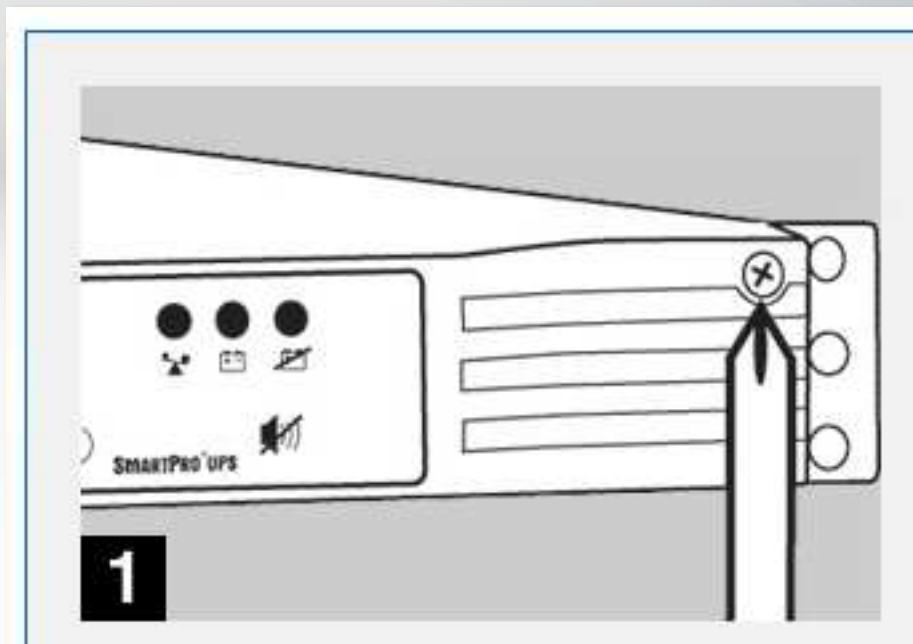

## PROCEDURES

### Step 2

- Disconnect the batteries from the unit.

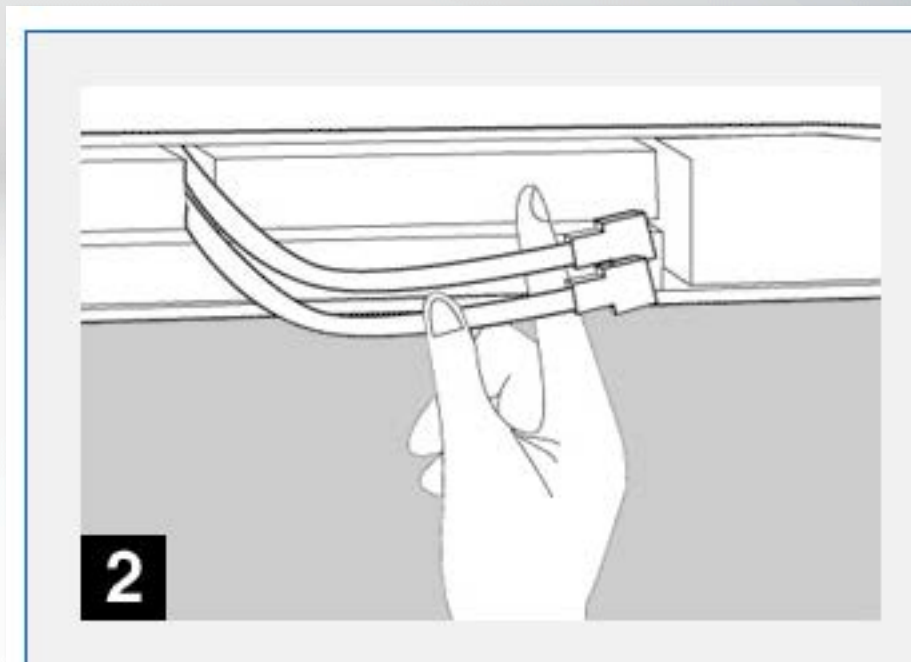


## PROCEDURES

### Step 3

- Remove and properly dispose of old batteries.


Note: The batteries are recyclable. For more information on battery recycling, you may check with a battery recycler in your area or contact Battery Solutions, Inc. (7266 Kensington Road, Brighton, Michigan 48116) by phoning 1 (800) 852-8127 or visiting their website at [www.batteryrecycling.com](http://www.batteryrecycling.com)

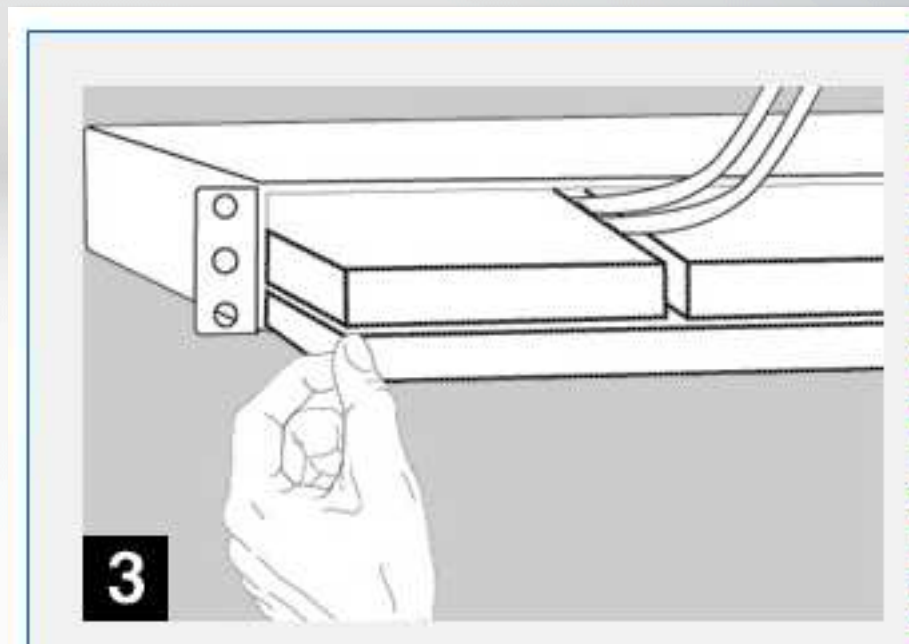

## PROCEDURES

### Step 4


- Install new batteries.

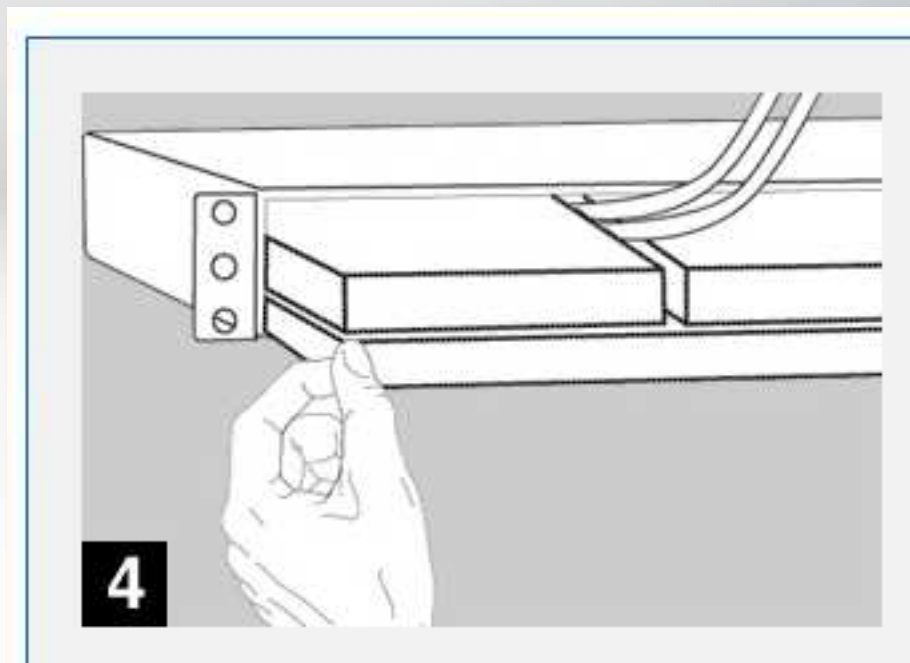

## PROCEDURES

### Step 5


- Reconnect batteries by attaching the connectors from the unit to the batteries (black-to-black and red-to-red).

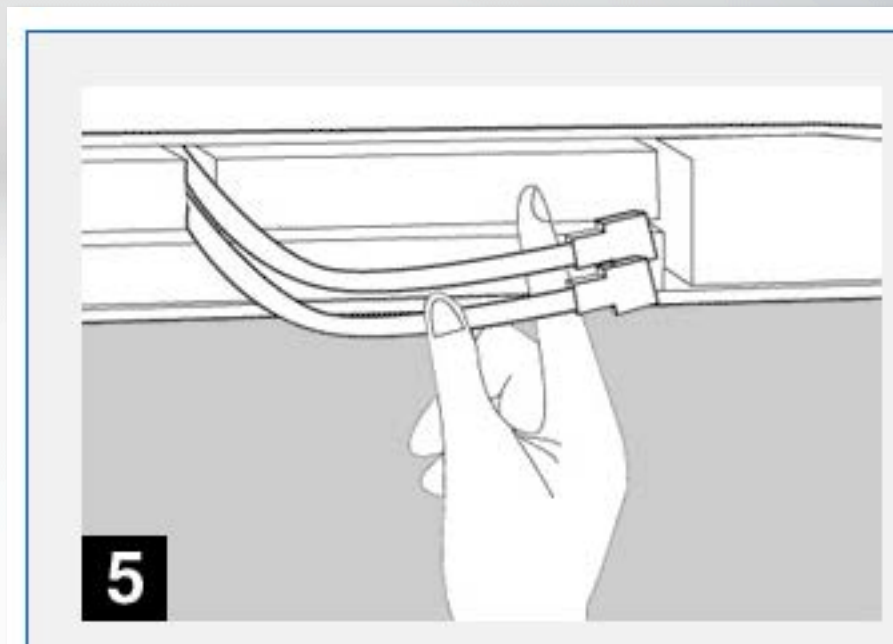

## PROCEDURES

### Step 6

- Re-attach the front panel and its 4 screws using a Phillips screwdriver.

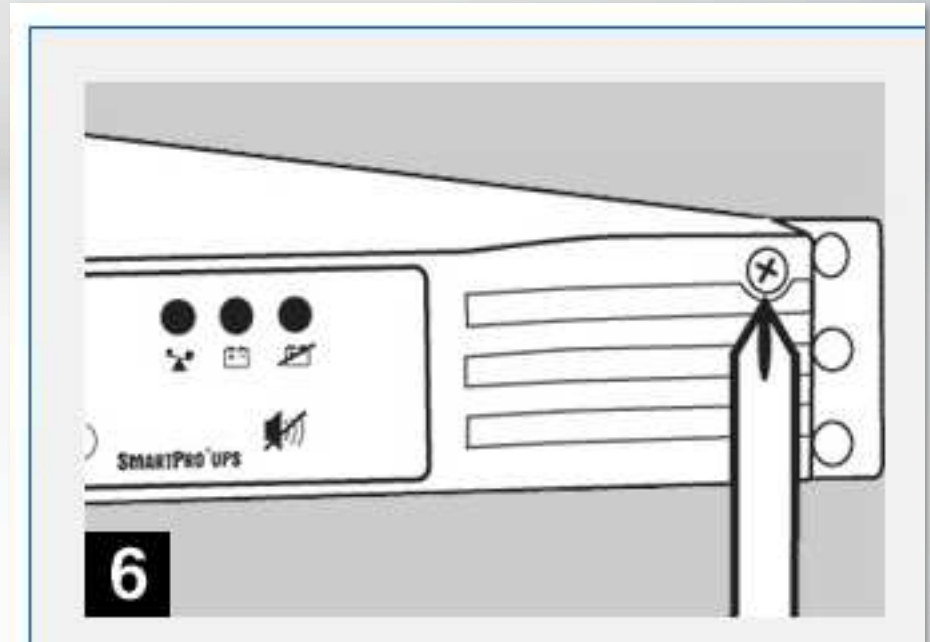

CONTACT US

## For More Information

- Visit our website [www.tripplite.com](http://www.tripplite.com)
- Contact our Tech Support Team at **773.869.1234**.

