



Affordable. Reliable. Home Improvement.

COIN SORTER USER MANUAL

MODEL NO.: SS1380

VEVOR

Affordable. Reliable. Home Improvement.

Coin Sorter

MODEL NO.: SS1380



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



WARNING:

Please read this manual carefully before using the product. Failure to do so may result in serious injury.

For your safety, it is very important that you always follow the simple precautions as below:


- Do not operate the machine if you, or it, are damp. Operating the machine under wet damp conditions can lead to an electrical shock hazard that might result in serious injury.
- Use only the same type and rating when replacing a fuse. Using an incorrect Fuse can cause a potential fire hazard if a higher rating Fuse is used.
- Ensure that both the machine and the domestic mains supply system are of the same voltage. An incorrect supply voltage could cause a potential fire hazard.
- Turn off and unplug the power before performing maintenance.
- Do not start the machine when the back cover is open.
- Do not put your fingers inside the hopper or channel when the machine is under operation.
- Turn off and unplug the power when long time no using.
- Should you have any doubts, please contact your local distributor, or sales agent, for further advice.

TECHNICAL SPECIFICATIONS

Model	SS1380
Rating(s)	120Vac, 60Hz, 10W
Product Dimensions (LxWxH)(mm)	240*180*240
Net Weight(kg)	About 4.8

*Products such as specifications, appearance, and design are subject to modification without prior notice.

MACHINE OVERVIEW

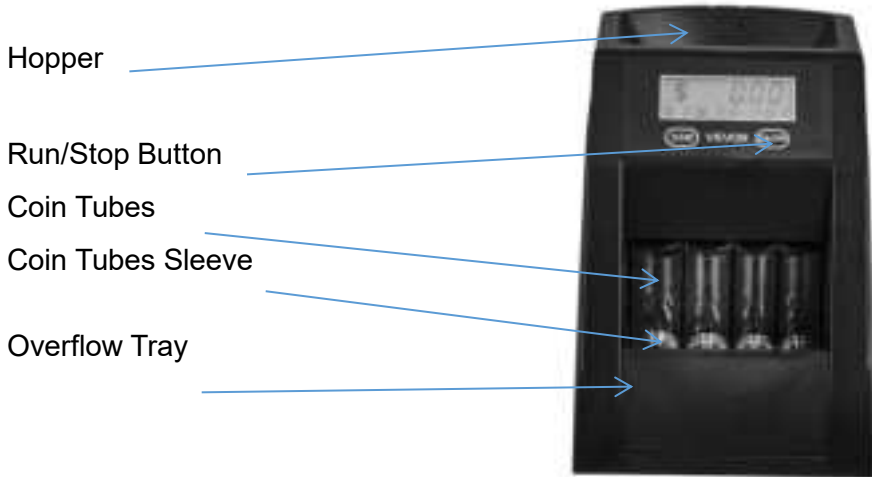

OPERATION

Denomination Quantity Amount Total Amount



QUICK START GUIDE

1. Plug the power cable into the power outlet.
2. Pull the coin tray forward.
3. Insert preformed coin tubes into the corresponding tube slots.
4. Insert coin tube sleeve into the coin tubes.
5. Press the "RUN/STOP" button to start sorting.
6. After use, remove the coin tube sleeve and store in the overflow tray.

PRODUCT OPERATION

1. Place Quick Sort Coin Sorter on a level work surface.
2. Connect the coin sorter to a 120V outlet.
3. Pull out the coin tray before beginning to sort the coins.
4. Remove the coin tubes, place coin wrappers (Option) into the correct coin tubes, and return coin tubes into the proper positions.
5. Insert coin tube sleeve into the coin tubes.
6. Press the "RUN/STOP" button to power on the machine.

NOTE: You will hear a ticking sound. This is to ensure accurate counts and smooth operation.

7. Begin placing the coins to the hopper.
8. Coins will begin to sort automatically.
9. After coin sorting is finished, press the "RUN/STOP" button to turn the machine off.
10. Once full, take the coin tubes out, remove the filled wrappers (Option) from the coin tubes, and replace them with empty coin wrappers.
11. Push the overflow tray back when you are finished sorting the coins.
12. When a tube is full, the machine will stop sorting, and the display will show which coin tube is full (25c=40, 5c=40, 1c=50, 10c=50)

ONE TUBE QUANTITY

COIN	QUANTITY	DOLLAR AMOUNT
Pennies	50	\$0.50
Nickles	40	\$2.00
Dimes	50	\$5.00
Quarters	40	\$10.00

TROUBLESHOOTING

Symptom Solutions	Solutions
Motor does not run	<ol style="list-style-type: none"> 1. Check that the power cord is plugged in. 2. Press the "RUN/STOP" button again. 3. Check that the tube trays are in the correct position, pulled all the way out.

<p>Coins are not sorting into the tubes</p>	<p>Foreign objects and/or bent, damaged, or sticky coins may cause the machine to jam:</p> <ol style="list-style-type: none"> 1. This machine is designed to resolve jams automatically. Wait about 15 seconds as the agitation screw and the running vessel rotates back and forth to release the jam. 2. Tap the machine gently on the side to loosen a jam. 3. If the machine is still not sorting, push the "RUN/STOP" button to turn the machine off. 4. Loosen the hopper lid screw with a coin. 5. Lift the hopper lid exposing the running vessel. 6. Retrieve the jammed item and replace the hopper lid. 7. Screw the hopper lid and push the "RUN/STOP" to start sorting again.
---	---

FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules; these limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.

- Increase the distance between the product and the receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
----	-----

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
----	-----

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

