



INSTRUMENT PANEL FUSE BLOCK - OWNERS MANUAL

INSTRUMENT PANEL FUSE BLOCK

The instrument panel fuse block is in the end of the driver side of the instrument panel.

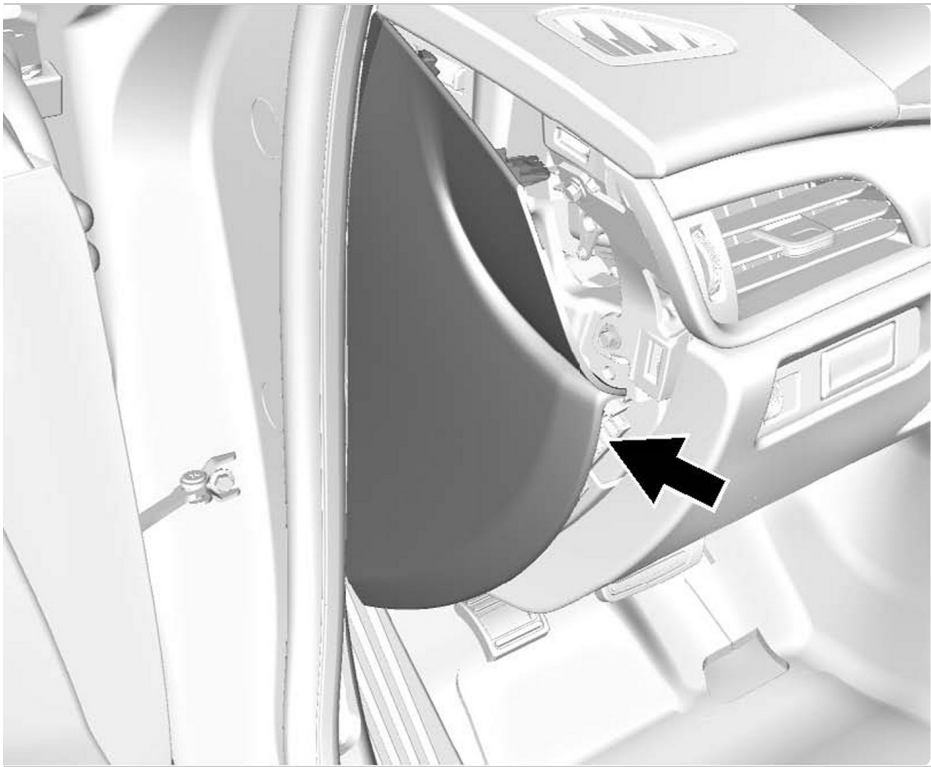

To access the fuses, remove the end panel by gently prying with a plastic tool near each clip, beginning at the point shown.

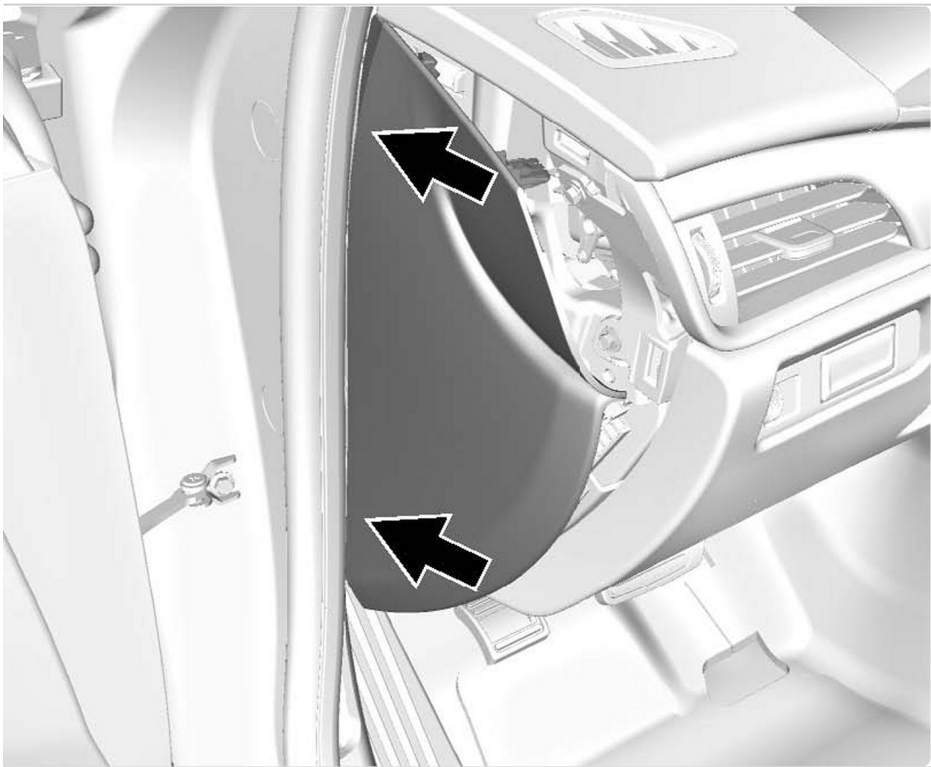

To install the end cover, insert the tabs on the back of the cover into the slots in the instrument panel at the points shown. Align the clips with the slots in the instrument panel, and press the cover into place.

The vehicle may not be equipped with all of the fuses and relays shown.

Notice: Spilling liquid on any electrical component on the vehicle may damage it. Always keep the covers on any electrical component.

NUMBER	USAGE
Fuse 1	Not Used
Fuse 2	Data Link Connector
Fuse 3	Not Used
Fuse 4	Not Used
Fuse 5	Heater, Ventilation, and Air Conditioning Control
Fuse 6	Electric Steering Column Lock
Fuse 8	Battery
Fuse 9	Heated Steering Wheel
Fuse 10	Not Used
Fuse 11	Logistics Shunt 1
Fuse 12	SDM/AOS
Fuse 13	Cluster/HUD/ICS/Steering Wheel Controls
Fuse 14	Radio/Heater, Ventilation, and Air Conditioning
Fuse 16	Not Used
Fuse 17	Accessory Power Outlet 1
Fuse 18	Accessory Power Outlet 2
Fuse 19	Steering Wheel Controls

Fuse 20 Not Used
Fuse 21 Not Used
Fuse 22 Logistics Shunt 2
Fuse 23 Not Used
Fuse 24 Not Used
Fuse 25 Not Used
Fuse 27 RAP Relay
Fuse 28 Front Heater, Ventilation, and Air Conditioning Blower
Fuse 29 Power Steering Column
Fuse 30 Not Used

CIRCUIT BREAKERS USAGE

CB7 Not Used
CB26 Not Used

RELAYS USAGE

Relay K10 RAP/Accessory
Relay K605 Logistics
Relay K609 Not Used