

HJSR32 Ble

Function Declaration



Key label	Function
1	<p>Short press to release one key run to TV position (with initial value)</p> <p>Multiplexing function: Long press FLAT+TV button for 5 seconds, backlight flashes, control box buzzer rings three times, the current head motor and foot motor position to the new TV position (power off will not be cleared)</p> <p>Note: Long press FLAT+ head rise for 5 seconds, the backlight flashes, and the control box buzzer rings three times to restore to the initial fixed position</p>
2	<p>Short press to release one key Run to SNORE position (with initial value)</p> <p>Reuse function: Long press FLAT+SNORE button for 5 seconds, backlight flashes, control box buzzer rings three times, the current head motor and foot motor position to the new SNORE position (power off will not clear)</p> <p>Note: Long press FLAT+ head rise for 5 seconds, the backlight flashes, and the control box buzzer rings three times to restore to the initial fixed position</p>
3	<p>Short press release one key Run to ZG position (with initial value)</p> <p>Reuse function: Long press FLAT+ZG button for 5 seconds, the backlight flashes, the buzzer of the control box rings three times, and the current position of the motor of the head and the motor of the foot is changed to the new ZG position (not cleared after power failure).</p> <p>Note: Long press FLAT+ head rise for 5 seconds, the backlight flashes, and the control box buzzer rings three times to restore to the initial fixed position</p>
4	Turn on/off underbed light (default: 5 minutes)
5	Long press the button, the head motor rises, release the button to stop the movement
6	Long press the button, the head motor drops, release the button to stop the movement
7	Long press the button, all the motor rises, release the button to stop the movement
8	Long press the button, all the motor drops, release the button to stop the movement
9	Long press the button, the foot motor rises, release the button to stop the movement

10	Long press the button, the motor of the foot drops, release the button to stop the movement
11	Short press release one key Run to M1 position (no initial value) Reuse function: Long press the M1 button for 5 seconds, the backlight flashes, the buzzer of the control box rings, and all the motor positions are remembered as the new M1 positions (not cleared after power failure).
12	One-key reset, all the motor return to the position of 0 stroke, power on reset.
13	Short press to release one key Run to M2 position (no initial value) Reuse function: Long press the M2 button for 5 seconds, the backlight flashes, the buzzer of the control box rings, and all the motor positions are remembered as the new M2 positions (not cleared after power failure).
14	Mode switching --CONSTANT-PULSE-WAVE
15	If the massager is in working state, click this key, all massagers stop working; If the massager is in the inactive state, press this key to timing the working time of the massager, 10mins/20mins/30mins, corresponding indicator 1/2/3 on the top will be switched on successively.
16	The head massager starts to work in constant mode, tap to switch the function cycle of "1 /2 /3 / off" successively, and automatically turn off after 30 minutes of work;
17	The foot massager starts to work in constant mode, tap to switch the function cycle of "1 /2 /3 / off" successively, and automatically turn off after 30 minutes of work;
18	Press the flashlight to turn on, release the flashlight to turn off.
<p>Coding method:</p> <p>[Remote control head up + head down + control box to code key] Control box buzzer sounds, indicating successful code</p> <ul style="list-style-type: none"> * The control box has a reset function for the code key (click to release the reset) * Control box synchronization line function, complete synchronization, synchronization * The control box is powered on and reset. During the reset process, press any key to interrupt the motor in motion * If an unexpected power failure occurs during operation, please wait until the automatic reset is complete or press FLAT to reset before using!!! 	
<p>Remote control mutual learning function (A: learn remote control, B: learn remote control) :</p> <p>1. B learns A: press B's head drop + foot drop for 5S, and the flashlight is on. Press A's head rise + head drop within 10S, and B's flashlight blinks, indicating successful learning.</p>	

- | |
|--|
| 2, learning function release: long press B's head rise + foot drop 5S, flashlight light, indicating successful release |
| 3. When the remote control that has been successfully learned is powered on again, the flashlight flashes, indicating that the remote control has been successfully learned. At this time, the remote control can no longer pair the code, and the learning function needs to be lifted to pair the code |
| Long press the remote control head up + head down without releasing, while installing the battery replacement remote control code value |

Note:

To protect the reliability and safety of the motor and control box, do not switch keys frequently.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,



which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.