

Quick Guide of Ingnok Portable Monitor

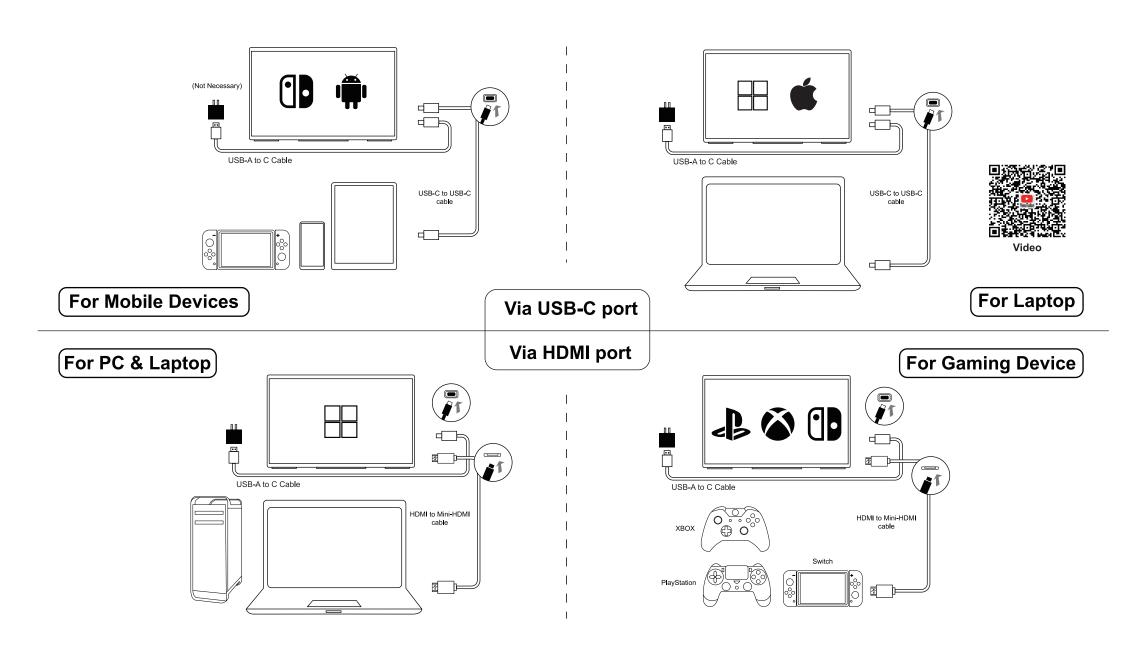

How to Use this Cover as a Stand?

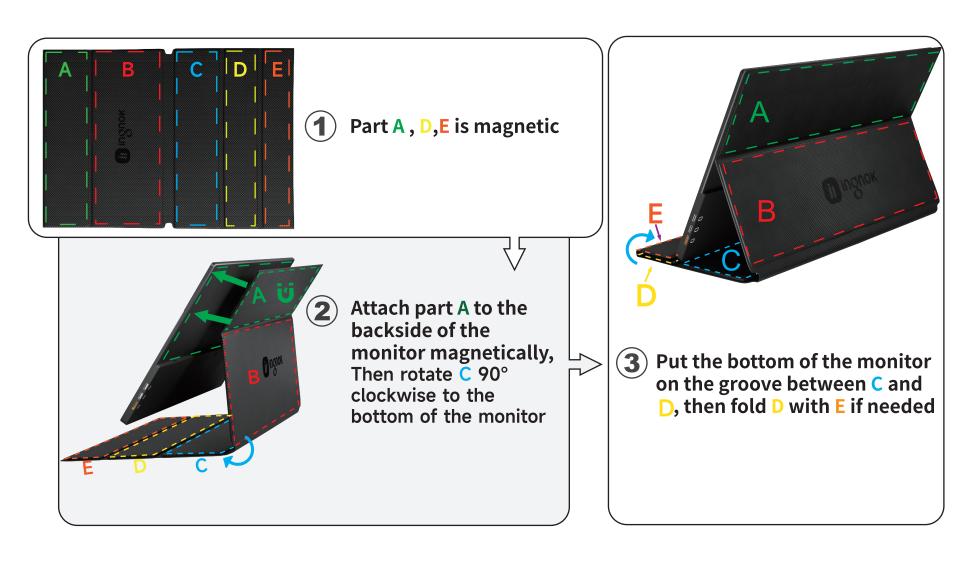






E-Mail

Monitor Introduction

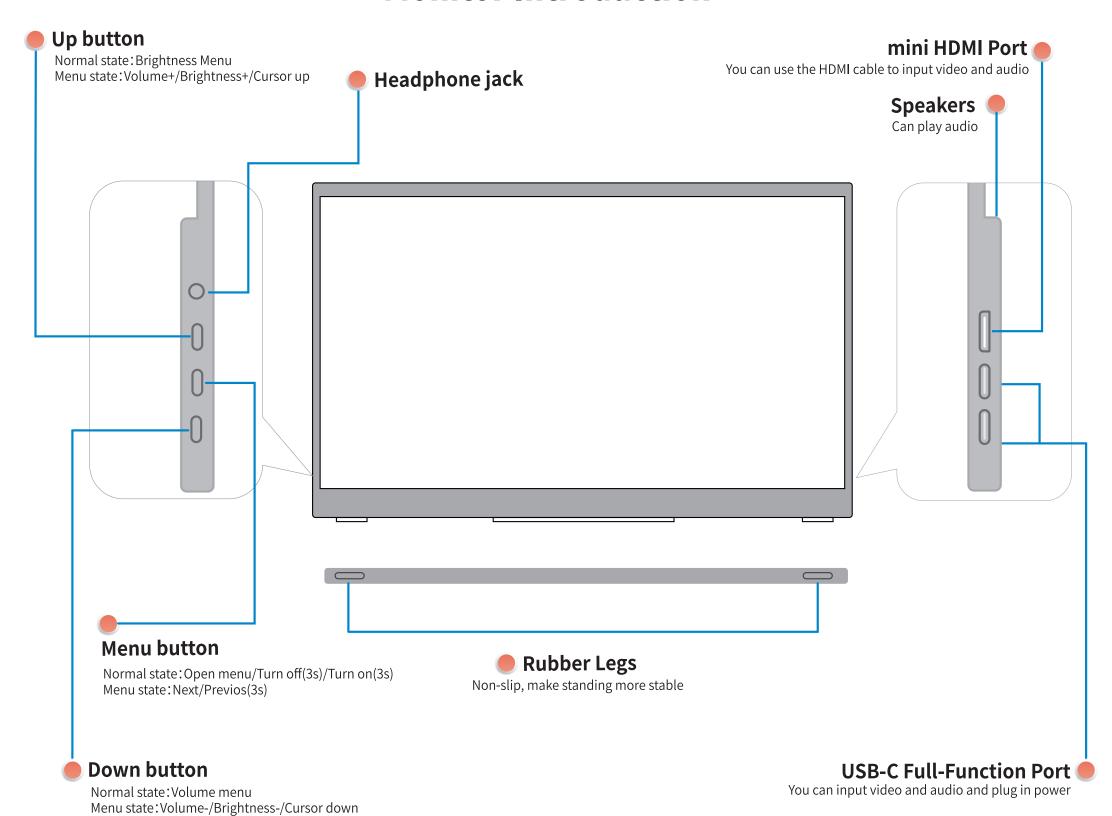

Menu instructions



After adjusting the ECO mode (except the default mode): the brightness and contrast **cannot** be adjusted, and HDR **cannot** be turned on.

