 




If you have any question, please contact us.
service@lifepluspro.com

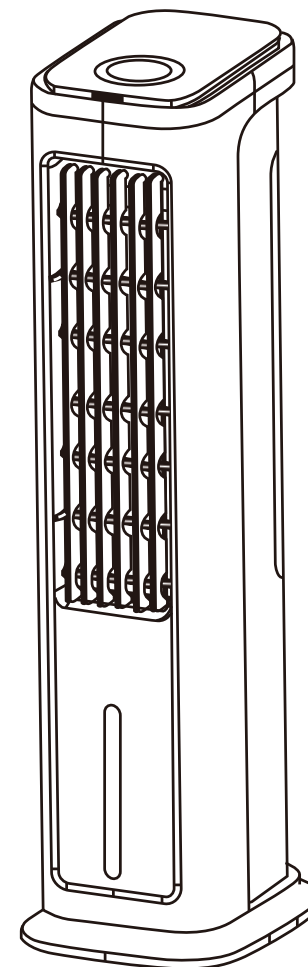

USER MANUAL
EVAPORATIVE COOLER
WTF-006

Thank you for your purchase

Please read this manual in detail before using.

Please keep it for future reference.

TABLE OF CONTENTS

SECTION 1

SAFETY PRECAUTIONS PAGE 1

SECTION 2

INTRODUCTION PAGE 1

TECHNICAL SPECIFICATION PAGE 2

PRODUCT DIAGRAM PAGE 2

SECTION 3

OPERATING THE AIR COOLER PAGE 3-5

OPERATING THE WATER TANK PAGE 5

USING THE ICE BOXES PAGE 5

SECTION 4

CLEANING AND MAINTENANCE PAGE 5-6

SECTION 5

TROUBLESHOOTING GUIDE PAGE 6

SECTION 6

WARRANTY PAGE 7

SAFETY PRECAUTIONS

- Make sure this appliance and the power cord is not damaged before operating. In case of damage, please consult your authorized technical service.
- Unplug the power cord plug before taking out the water tank.
- Do not insert any objects to the ventilation or exhaust opening for this may damage the= product and could cause electrical shock or fire.
- Do not operate your unit with a cover on it as this may result to overheat and motor damage.
- The plug must be removed from the electrical outlet when not in use and before moving, installing, uninstalling and cleaning.
- Do not add any chemical or metal ingredients into the water tank.
These materials are dangerous and may cause problems.
- Be careful not to expose infant or elder directly to the air cooler for a long time.
- This appliance should be used at the rated voltage and frequency as indicated in rating label.
- This appliance is not intended for use of persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance.
- Do not use your air cooler in or around water, that may cause electric shock and risk of fire.
- Do not pull the unit while the power is on. Always ensure that the plug is fully inserted into the electrical outlet before operating.
- Do not attempt to disassemble, repair or modify this appliance for the warranty will be void if repair is carried out by unauthorized person/services.
- Do not leave your unit under direct sunlight for a long time.
- Before using the evaporative air cooler function, always ensure that it contains water.
Clean the tank with fresh tap water every two weeks.


INTRODUCTION

The evaporative air cooler product is specially designed with cooler function. The air cooler cools the air by the process of evaporation of water, which in turn helps reducing the green house effect. The evaporative air cooler should not be used in enclosed spaces. It is recommended to place it near an open window to create a "flow-through" effect and experience the desired cooling effect. For the best performance, it is advised to fill the water tank with water or ice if available when using this unit. This product is suitable for diversified climatic environment for a relaxing and comforting atmosphere.


TECHNICAL SPECIFICATION

Rated Voltage	120V
Rated Frequency	60Hz
General Power	80W
Water Tank Capacity	5L

 PRODUCT DIAGRAM

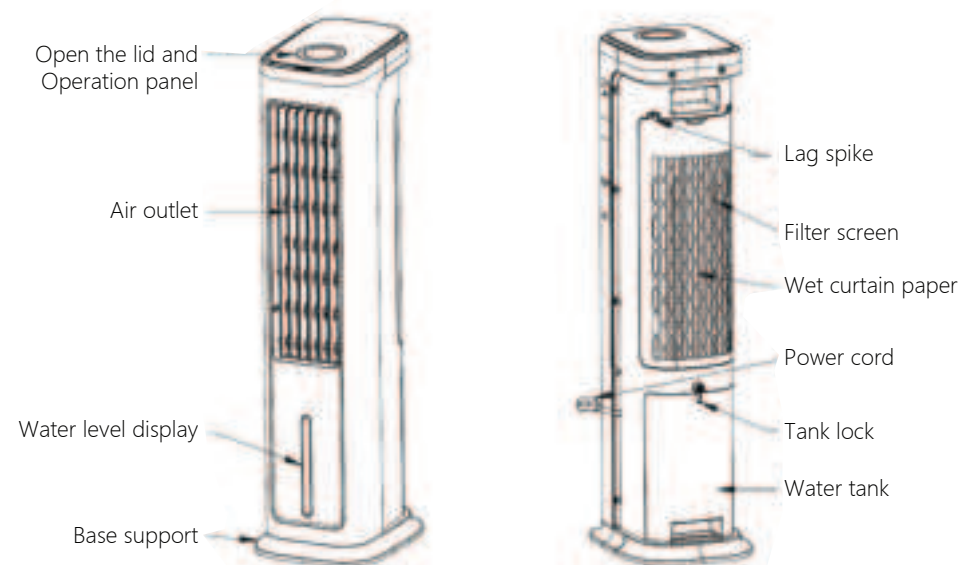

OPERATING THE AIR COOLER

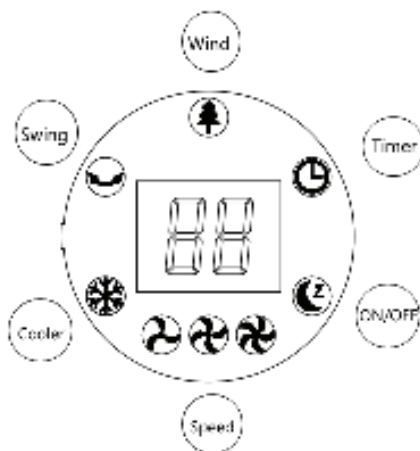 

Insert the plug into the electrical outlet. Press the "On/Off" button to turn the unit "ON". The LED indicator automatically shows the room temperature and shifts the fan to standby mode. The functions of the unit can be controlled via control panel or by remote.

1. On/Off

Pressing the "On/Off" button on the control panel or pressing the "On/Off" button on the remote control will turn the unit "ON" at intermediate speed. After few minutes, the fan will drop to show speed or to the pre-programmed memory setting. To switch back the standby mode, simply press the "On/Off" button on control panel or press the "On/Off" button on remote control.

2. Speed

Press this key to choose between high, medium and low fan speed. Each time the "Speed" button is pressed, an icon will appear on the LED screen indicating the current speed level.

3. Wind

Press the "Wind" button to choose the type. Indicator light will display the selected type of wind;

Normal: A continuous wind blow that can be adjusted to low, med and high speed.

Natural: Natural setting provides a soft and comfortable environment with a selection of low, medium and high speed.

Sleep: When the "Speed" Mode is at high level, the sleep function will run at high-speed natural wind for 30 mins, then switch to medium-speed natural wind for 30 mins, and then keep running at low-speed natural wind.

When the "Speed" Mode is at medium level, the sleep function will run at medium-speed natural wind for 30 mins, then switch to low-speed natural wind and keep running at low-speed natural wind.

When the "Speed" Mode is at low level, the sleep function will keep running at low-speed natural wind.

4. Timer

Press "Timer" button to set the fan between 1-12 hours, the indicator light will show the selected time and the unit will operate until the preset time. Continuously press the button to your desired running time.

To cancel the timer, simply press the button until the indicator shows "00".

5. Swing

Press "Swing" button to change the wind direction. The swing icon will appear on the screen when the function is activated. Press the button again to stop the oscillation. The vertical direction of air flow can be adjusted manually by directing the outlet louvers up and down.

6. Cooler

Press this key to activate the air cooler function. Water pump will take the water from the tank and pour it onto the cooling pad. Cooling pad absorbs the heat of the water and evaporated air is blown out through the fan. The cool breeze by the cooler drops the temperature and creates a relaxing cooling effect.

Caution: If the water level is low or there is no water in the tank, do not activate the "Cooler" function.

Check the water level first and add clean water if needed, also to replace the stale water. It is recommended to replace water in the tank at least once a week.

7. Auto Lights Off

If there is no operation after 1 minute, the lights on the control panel will automatically turn off. And press any button to turn on the lights.

8. Remote

Remote control operates with a CR2025 lithium cell.

Direct the remote control to the control panel of the evaporative air cooler. If remote doesn't work, please check the battery first. Replace it if needed.

If you are not going to use it for a long time, take out the battery to prevent damages that may occur due to battery leakage.

OPERATING THE WATER TANK

Check the level of water in the tank frequently. Be sure that water level is not below the "MIN" marking which is located on the front of the unit. Activating the "Cooler" function with insufficient amount of water may cause malfunction of the water pump and warranty of your product will be void.

Before refilling water, please turn your unit off and unplug the power cord.

USING THE ICE BOXES

In order to increase the cooling effect of your fan, you can use ice boxes which are included with the unit. Before using, place them in the freezing compartment of your refrigerator for a few hours. Then place them into the large section of the tank and add water reaching "MAX" level. Utilizing ice boxes drops the temperature of the air flow which will create more effective cooling effect.

CLEANING AND MAINTENANCE

Dusts may accumulate in the dust filter or cooling pad after some time and may affect the cooler's function. Therefore it is recommended to clean your evaporative cooler regularly. Below are written steps on how to clean this unit.

Turn off the air cooler and unplug the power cord before beginning to clean.

Dust Filter and Cooling Pad

1. First, please use a "+" shaped wrench to remove the 2 nails on the top of the filter.
 2. Pull out the dust filter and the cooling pad carefully by hands.
 3. Use mild cleaning agent and soft brush in removing the dust and dirt on the filter.
 4. Use a clean cloth or soft brush to remove dust and dirt on the cooling pad. Rinse with clean water if needed and leave open air dry.
- Never use any harmful chemical solution for that may cause damage to the pad.
5. When done, first attach the bottom part of filter and the pad, then push the upper part into the unit and tighten the 2 nails by wrench.

Warm tip: Your cooler takes water from narrow section of the water tank and pumps it on the cooling pad. The water flowing through the cooling pad goes down to the large section of the water tank. The cycle results to absorption of dust and dirt in the air which makes the air safer and fresher to breathe.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Fan does not work	<ul style="list-style-type: none"> • Power cord is not plugged or not properly. • The "On/Off" button on the control panel is not activated. 	<ul style="list-style-type: none"> • Plug the power cord properly. • Press the "On/Off" button on the control panel.
The temperature of air being expelled by the cooler is not cold enough.	<ul style="list-style-type: none"> • Dust accumulates on the dust filter and cooling pad. • Water level in the tank is below "MIN" level. 	<ul style="list-style-type: none"> • Follow the steps in cleaning the dust filter and cooling pad. • Unplug the unit, refill the tank with clean tap water.

WARRANTY

After-sales Service Letter of Commitment

To provide customers with premium products and services is our commitment
to every customer.

All products purchased in our company are guaranteed to keep in good repair for 1 year.

If quality problems happen in guarantee period, our company will maintain for free or
provide replacement.

Additionally, our company provides technical support and fittings for life. After-sales
service isn't restricted by time and hear feedback idea of users and deal with them in
time. If you are caught in some problems when using our products, welcome to contact
us at any time.

Email us: service@lifepluspro.com