


SET UP CENTER & FRONT & REAR SPEAKERS

Center speaker
Cable: 157.48inch


SL speaker
Cable: 374.02inch

SL speaker
Cable: 374.02inch


P3

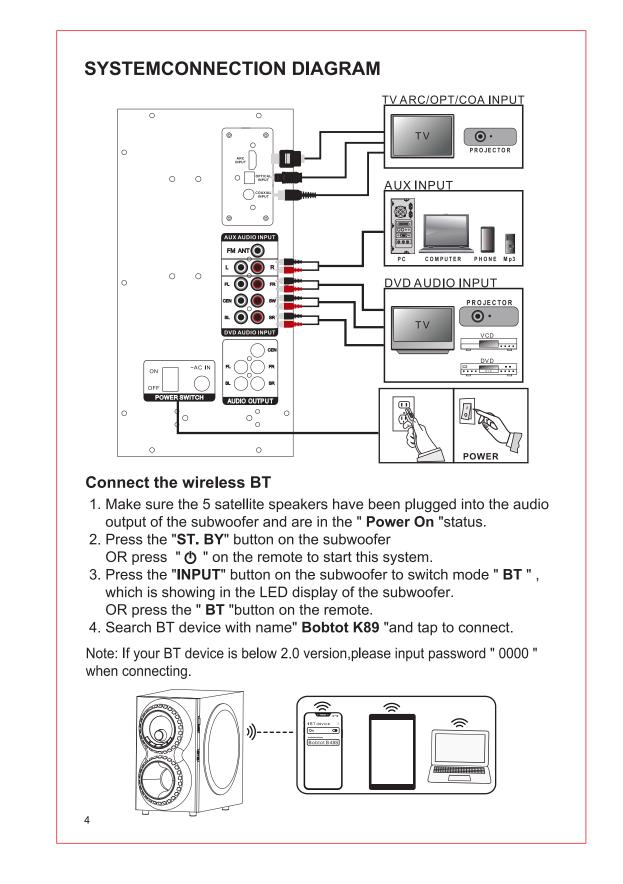


P10

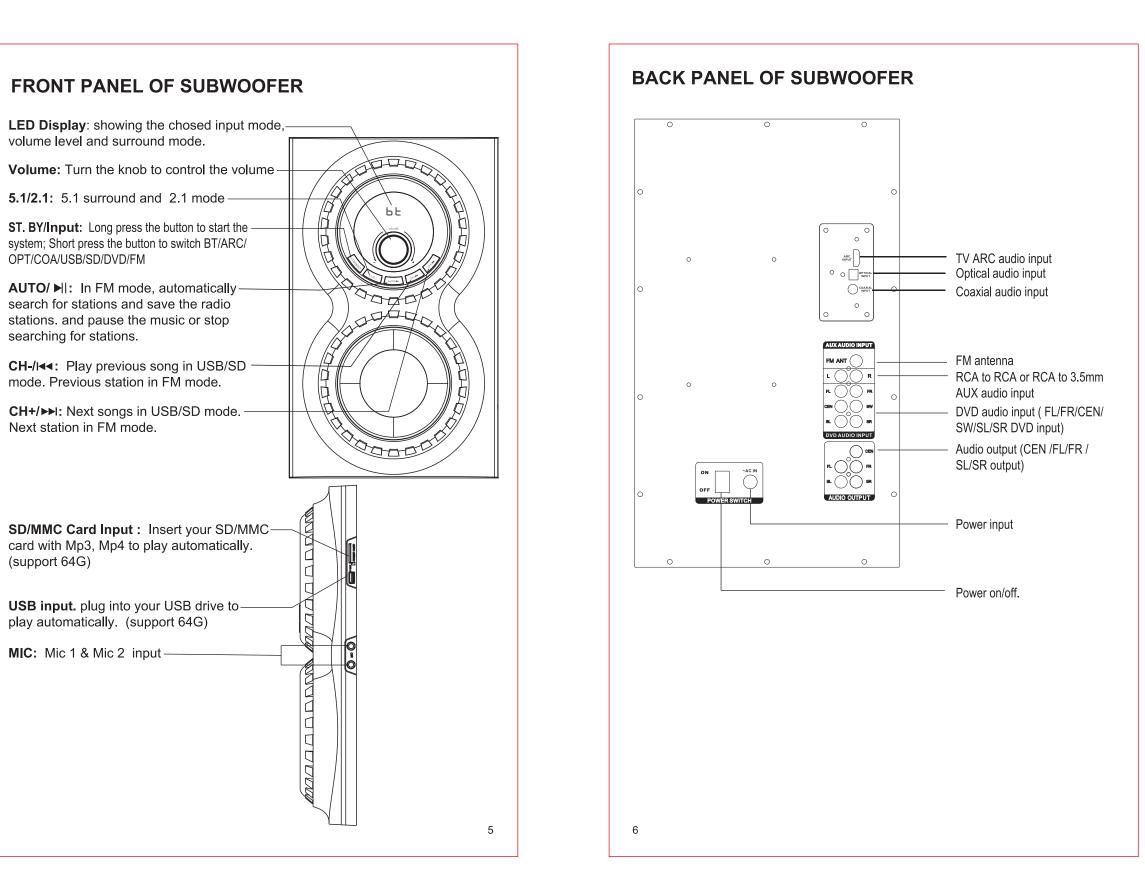



P5 P6

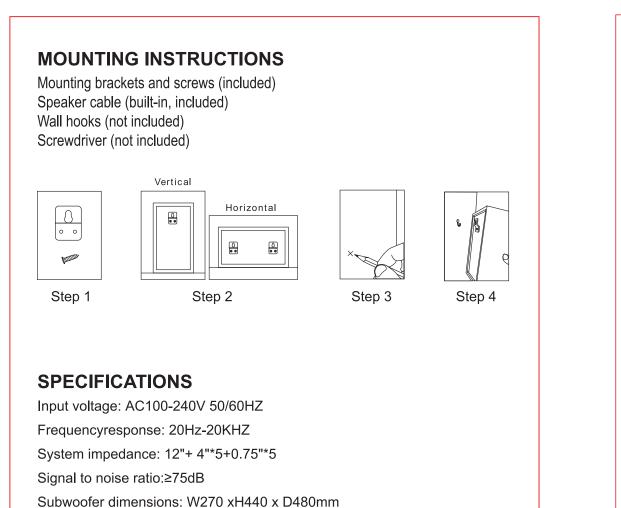

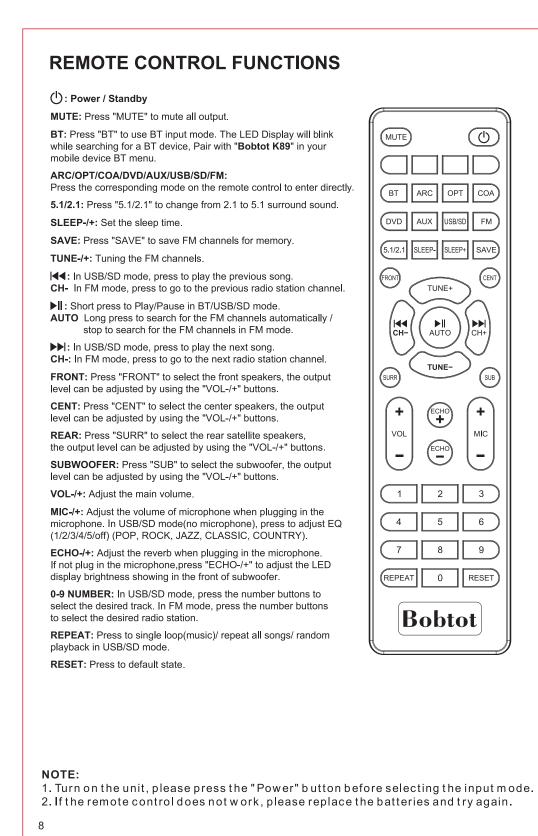

Certification Connect your TV FCC Statement 1. Plug the TV ARC / Optical / Coaxial cable into the audio input on the back of the subwoofer, the other port plugs into the socket of your TV. This device complies with part 15 of the FCC Rules. Operation is subject 2. Make sure the 5 satellite speakers have been plugged into the audio output to the following two conditions: (1) This device may not cause harmful interference, and of the subwoofer and are in the " **Power On** "status. (2) this device must accept any interference received, 3. Press the " **ST. BY** " button on the subwoofer or press " () " on the remote including interference that may cause undesired operation. to start this system. 4. Press the " **INPUT** " button on the subwoofer to switch mode Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate " ARC/OPT/COA ", which is showing in the LED display of the subwoofer, the equipment. or press the " ARC/OPT/COA "button on the remote. 5. TV Setting- Sound output - select your mode to " TV ARC / Optical / Coaxial " Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. 6. TV Setting- Expert Setting - Digital Output Audio Format Setting to " PCM ". These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy 1. For optical connections, please make sure the protective caps at the ends of the and, if not installed and used in accordance with the optical cable are removed before plugging it in. instructions, may cause harmful interference to radio communications. 2. The coaxial cable is not included. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the Other System Connection interference by one or more of the following measures: 1. For 5.1 surround sound, insert audio cables from your device into the -Reorient or relocate the receiving antenna. corresponding DVD speaker sockets at the back of subwoofer. (FL/FR, CEN/SW,SL/SR input) -Increase the separation between the equipment and receiver. 2. For dimensional sound, you can insert the audio cable connected to the AUX -Connect the equipment into an outlet on a circuit different from that to port of your device into the back of subwoofer, or insert a USB flash drive into which the receiver is connected. the USB socket at the front of the subwoofer, or insert an SD/MMC card into SD input at the front of subwoofer. -Consult the dealer or an experienced radio/TV technician for help. 3. For clear, stronger FM signal, insert white antenna cord into FM Antenna socket This equipment complies with FCC radiation exposure limits set forth for at the back of subwoofer. Press" **FM** "on the remote control to enter FM mode, an uncontrolled environment. and then press " **AUTO**/ ►II " to search the stations automatically and This equipment should be installed and operated with minimum will save the FM station automatically. distance 20cm between the radiator & your body. 4. In FM mode, semi - automatic station - searching, press " **TUNE+/-** "to

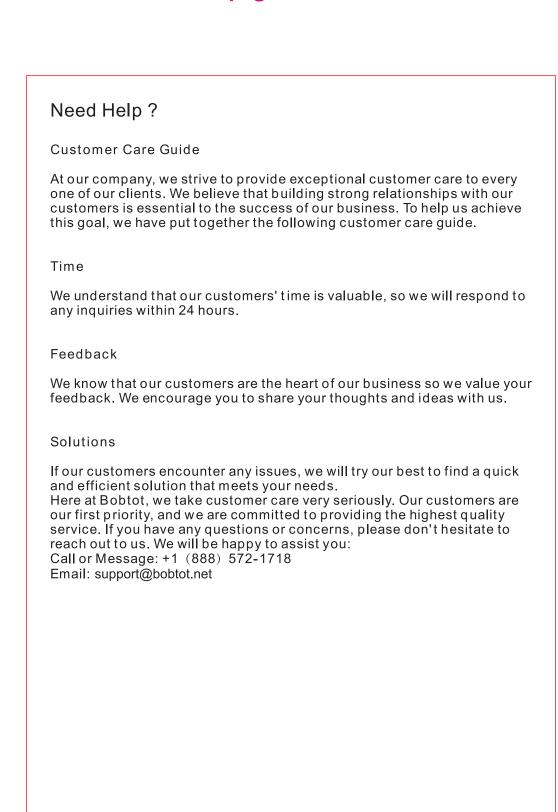

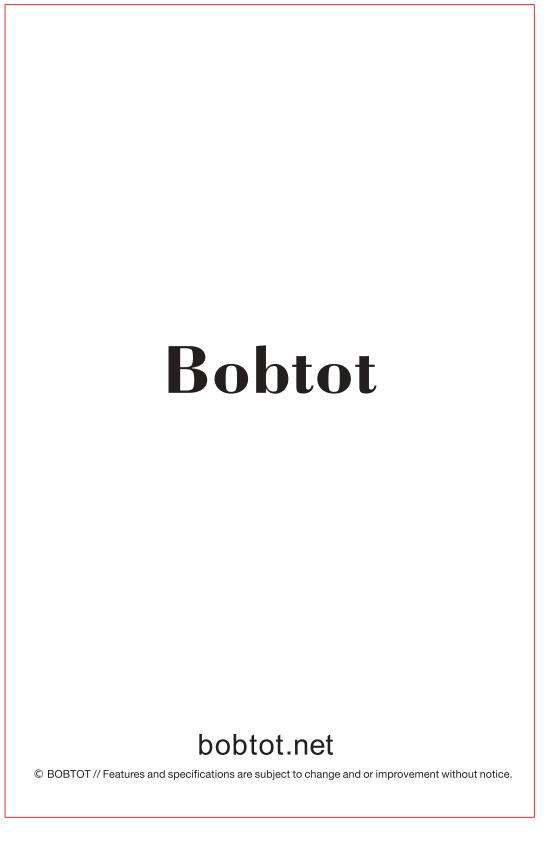

P11 P12

说明:尺寸:140x215mm 材质:128G铜版纸 四角双面印刷

Center satellite speaker dimensions:W150xH262xD145mm

Net weight: 44.53lb(20.2 Kg)

Front L/R satellite speaker dimensions: W150xH262xD145mm

Rear L/R satellite speaker dimensions: W150xH262xD145mm

Cable length:Front L/R:157.48inch, Rear L/R:374.02inch, Center: 157.48inch

材质: 128G铜版纸 四色双面印刷 6张装订本

说明:尺寸:140x215mm

5. Support microphone, only plug into the MIC 1 & 2 input and play it. Press " MIC+/- " on the remote to control the mic volume. Press " ECHO+/-" on the remote to adjust the ECHO.

select a station you like.

材质: 128G铜版纸 四色双面印刷 6张装订本

说明:尺寸:140x215mm

材质: 128G铜版纸 四色双面印刷 6张装订本

POF