

# Power AirFryer360Plus™

## Quick Start Guide

· AIR FRYING



EMERIL LAGASSE

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

### STEP 1



Insert the Drip Tray below the bottom heating elements (at the very bottom of the Unit).

### STEP 2



Place food on a Crisper Tray\* and slide the Tray into one of the shelves on the inside of the Unit. Use the markings on the door of the Unit to choose the best shelf to use for your recipe.

\*The Pizza Rack also slides into the shelves. The Baking Pan should be placed on top of the Pizza Rack when used.

### STEP 3



Press the Airfry Button on the Control Panel to select the Airfry cooking preset.

### STEP 4



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

### STEP 5



When the cooking cycle is complete, use oven mitts or potholders to remove the Crisper Tray from the Unit by sliding the Tray out of the Unit.

# Power AirFryer360Plus™

## Quick Start Guide

### · ROTISserie



EMERIL LAGASSE

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

#### STEP 1



Insert the Drip Tray below the bottom heating elements (at the very bottom of the Unit).

#### STEP 2



Hold the assembled Rotisserie Spit at a slight angle with the right side higher than the left side and insert the left side of the Spit into the Rotisserie connection inside the Unit. With the left side securely in place, drop the right side of the Spit into the Rotisserie connection on the right side of the Unit.

#### STEP 3



Press the Rotisserie Button on the Control Panel to select the Rotisserie cooking preset.

#### STEP 4



Press the Start/Pause Button to begin the cooking process. You can press this button to pause during any cooking cycle.

#### STEP 5



When the cooking cycle is complete, use oven mitts or potholders (ideally silicone) to remove the Rotisserie Spit from the Unit by lifting the right side and then the left side of the Spit to release the Spit from the connection points.