



INSTALLATION


1 Dimensions

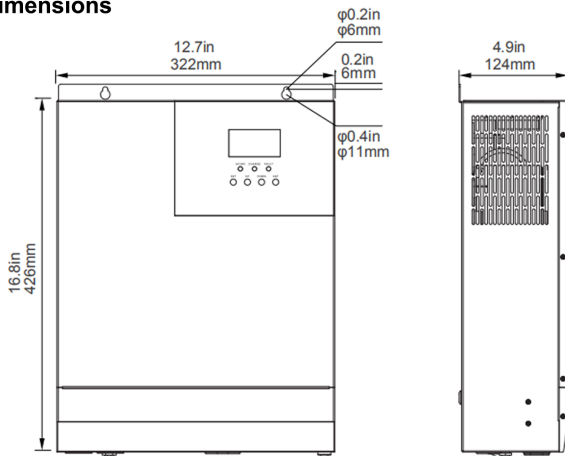


2 Make sure the solar inverter main power is turn OFF!

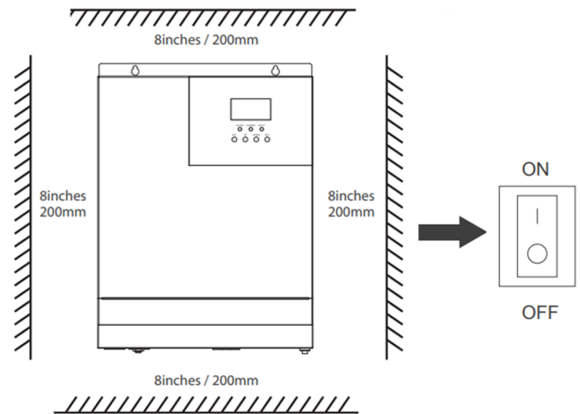

3 Wiring instructions, Battery and PV lines and AC output lines and AC IN lines and GND lines, according to the picture instructions to choose the color of the line; Operate the correct wiring position according to the picture

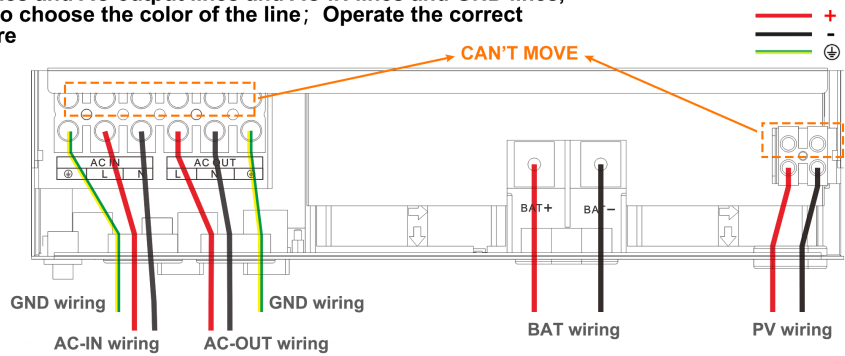


4 Use wire models according to picture requirements

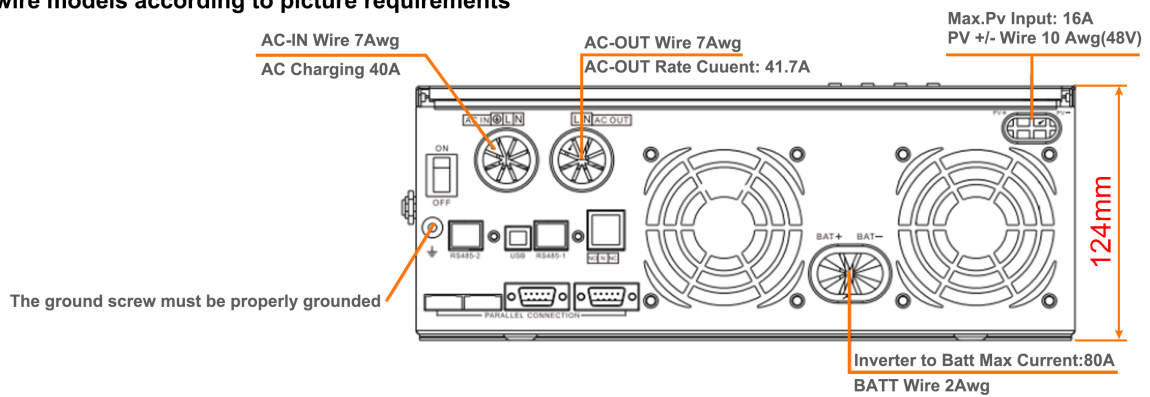


5 Connection diagram of AC ground wire


⏏ : Ground | L: Live | N: Neutral

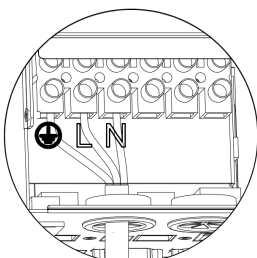

AC Input Wiring

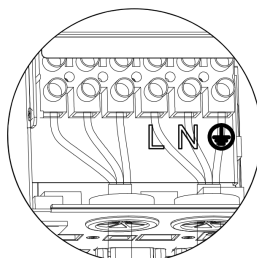

AC Output Wiring

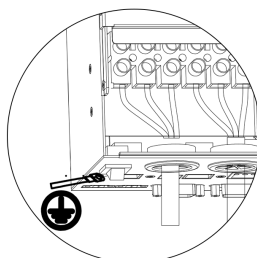

GND Wiring

NOTE

1. Make sure any circuit breakers are disconnected and ensure the unit is in the off position.
2. For PV to charge 48V battery banks, you will need a minimum PV voltage of 120VDC.
3. Connection order: connect with battery first, then solar panels, when everything done, you need to press "OFF/ON" button.
4. Setting item voltage value: [12] < [04] < [14]