 


NIRVANA ZENITH PRO **SMART GUIDE**

PACKAGE CONTENTS







(8)

OFF



ON



CHOOSE "NIRVANA ZENITH PRO"

(*)

(Pm)

(2%)

(Pm)

(Pm)


(33)

Long Touch (2s) Left Earbud Right Earbud Tap 3 Times

Tap Once Tap Twice Left Earbud Right Earbu

Ambient Mode

ANC Mode Normal Mode

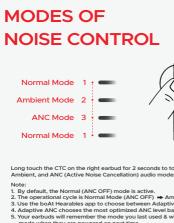

MULTIPOINT CONNECTION

Pair Nirvana Zenith Pro with your first media device via Bluetooth. urn off the Bluetooth on the first device. Switch on the Bluetooth on your second media device to pair with Nirvana Zenith Pro. the first medi device again



Note:


- Streaming audio in LDAC mode might reduce the playtime of your earbuds.

- Please refer to your phone's user manual for instructions on how to activate LDAC.

FUNCTIONS

(CALL/MUSIC)

Note: The earbuds may start at 100% volume when first switched on. You ca to your preferred level using the volume controls on the media device.

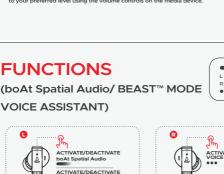



RESET NIRVANA ZENITH PRO

Reset Button

Activate/Deactivate Multipoint Connectivity Activate/Deactivate In-Ear Detection Smart Diagnostics Function Over-the-Air Software Updates

ORGET DEVICE

PUT BOTH EARBUDS IN THE CHAR CASE & KEEP THE CASE LID OPEN.

boAt Spatial Audio: Long touch the CTC on the left earbud for 2 seconds to activate boAt Spatial Audio. Long touch the left earbud CTC again for 2 seconds to switch to boAt Signature Sound.

BEAST** Mode: Tap the left earbud CTC 3 times to activate BEAST** mode. Tap the left earbud CTC 3 times again to de-activate BEAST** mode.

Volce Assistant Tap the right earbud CTC 3 times to activate the default smart voice assistant (coogle Voice Assistant).

vote:

Note: Spatial Audio is activated only when both earbuds are worn. This mode will be deactivated in both collegile earbud; mode.

The earbuds may start at high volume when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.

WHITE LED FLASHES CONTINUOUSLY 100%: SOLID WHITE LED

- <10%: 3 RED LED FLASHES


(30%-100%): 3 WHITE LED FLASHES


Headphone Type

Bluetooth Version Active Noise Cancellation

Music Playtime

30%: 3 QUICK WHITE LED FLASHES

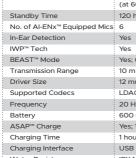

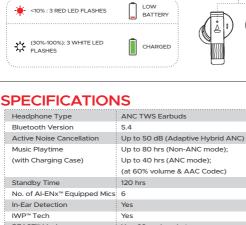


(4)


1) Charger/Brick/Adapter : 5V/2A 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand) Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -



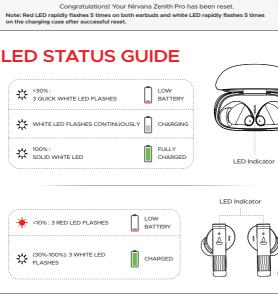

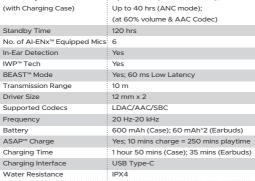

Note: (1) Before using the earbuds for the first time, charge them.
(2) Please note that the earbuds cannot be used / so LEARN MORE ABOUT YOUR PRODUCT

Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information