

Operation

PUSH BAR

 
Press the push bar to open or close the door.

GARAGE DOOR OPENER LIGHTS

Press the LIGHT button to turn the garage door opener lights on or off. When the lights are turned on they will stay on until the LIGHT button is pressed again, or until the garage door opener is activated. Once the garage door opener is activated the lights will turn off after the specified period of time (the factory setting is 4-1/2 minutes). The LIGHT button will not control the lights when the door is in motion.

Light Feature

The lights will turn on when someone enters through the open garage door and the safety reversing sensor infrared beam is broken. If using the garage door opener light as a work light, turn the light on using the light button on the wall control or the light will turn off after a set amount of time.

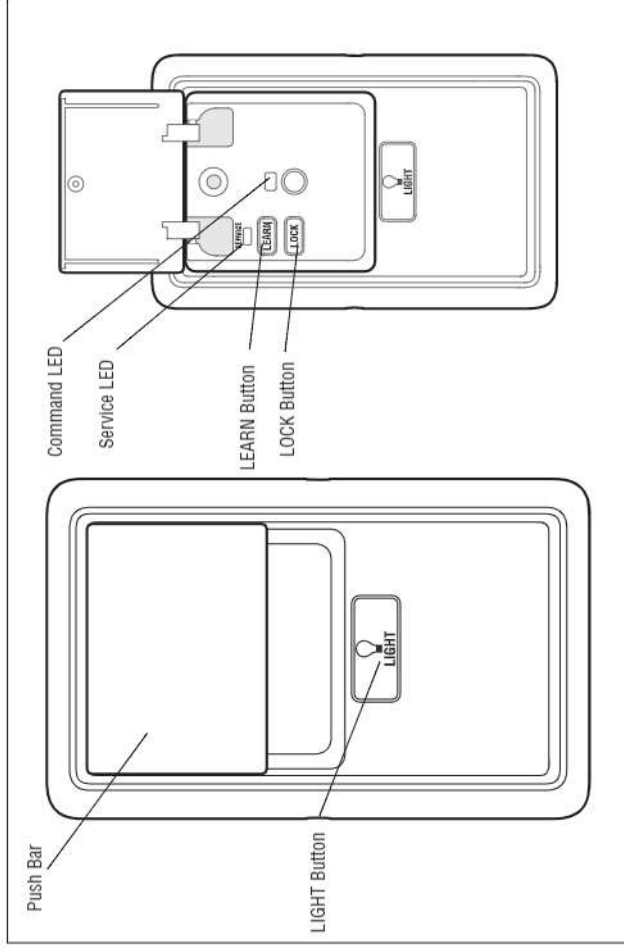


Program


TO ADD, REPROGRAM, OR CHANGE A REMOTE CONTROL/KEYLESS ENTRY PIN

NOTE: The following steps are for standard accessories. If programming is unsuccessful, refer to your accessory or garage door opener manual for programming information.

 - 1 Press and release the LEARN button on the door control to enter Programming Mode.

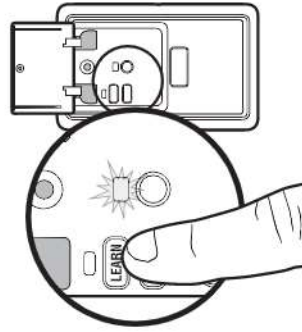

 - 2 Press and release the LEARN button again, the LED will flash once.

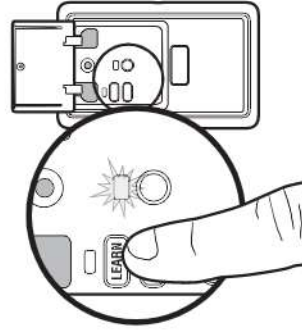


- 3a Press the button on the remote control that you wish to operate your garage door.



OR

 - 3b Enter a 4-digit personal identification number (PIN) of your choice on the keyless entry keypad. Then press the ENTER button.

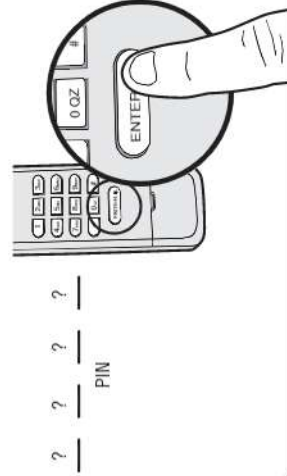

The garage door opener lights will flash (or two clicks will be heard) when the code has been programmed. Repeat the steps above for programming additional remote controls or keyless entry devices.

Feature Settings

LOCK

 
Activate:

NOTE: Your remote controls will NOT work when LOCK mode is active however your keyless entry will still allow access to your garage.

Press and hold the LOCK button for 2 seconds. The command LED will flash as long as the lock feature is activated and your handheld remote control will not operate your door at this time.

Deactivate:

Press and hold the LOCK button again for 2 seconds. The command LED will stop flashing and normal operation will resume.

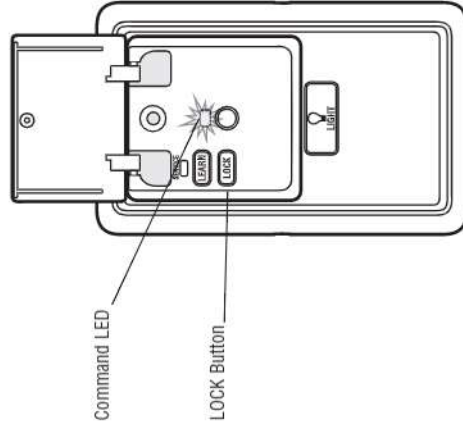

LIGHT

To change the amount of time the garage door opener lights will stay on (default time is 4-1/2 Minutes):

Press and hold the LOCK button until the garage door opener lights flash.* The garage door opener lights will then indicate the current light duration by flashing up to 4 times (see table below).

NUMBER OF TIMES GARAGE DOOR OPENER LIGHTS FLASH	TIME THE GARAGE DOOR OPENER LIGHT STAYS ON
1	1 ½ Minutes
2	2 ½ Minutes
3	3 ½ Minutes
4	4 ½ Minutes

To change the light duration time repeat the steps above until the lights flashes indicate your desired time frame.

Light Feature

NOTE: Factory setting is on.

 
This feature will turn on the garage door opener lights when the safety reversing sensors beam has been broken.

Deactivate:

Start with the garage door opener lights off. Press and hold the LIGHT button to turn on the light, continue to hold until the light turns off.*

Activate:

Start with the garage door opener lights on. Press and hold the LIGHT button to turn off the light, continue to hold until the light turns on.*

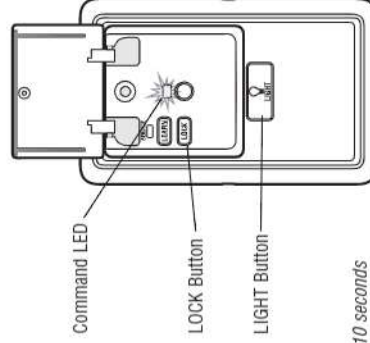


* Approximately 10 seconds

MAINTENANCE ALERT SYSTEM (MAS)

Activate/Deactivate:

NOTE: Factory setting is off.

 Press and hold the LEARN button. Then press the LIGHT button. The service LED will flash the status; Activated is 2 flashes and deactivated is 3 flashes.

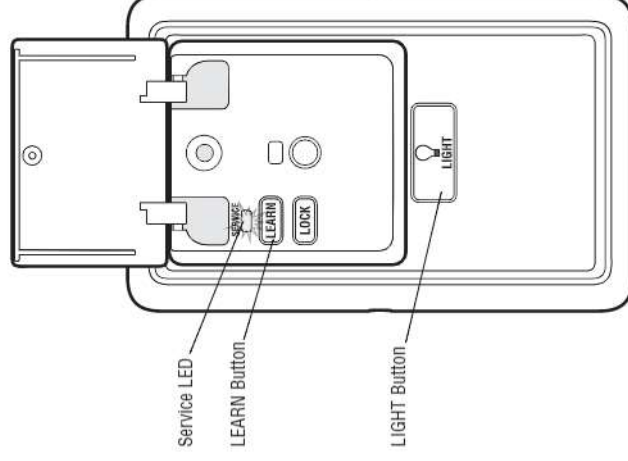

Warranty

ONE YEAR LIMITED WARRANTY

The Chamberlain Group, Inc. warrants to the first consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

FOR SERVICE DIAL OUR TOLL FREE NUMBER:

1-800-528-9131

www.liftmaster.com