

L.O.L. Surprise!™ Smartwatch, Camera & Game
L.O.L. Surprise!™ Smartwatch, Camera & Game is packed with interactive games, dual P.O.V. and selfie cameras, and more! You can dance with Sprints, interact with M.C. Swag, and customize Diva's fashions!



CONTENTS

- 1. L.O.L. Surprise!™ Smartwatch, Camera & Game
- 2. Watchband
- 3. Clip/Stand
- 4. Micro-USB Cable

Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

SPECIFICATIONS

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable)
Battery Life	Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	2402MHz-2480MHz
Max. Radio Frequency Power Transmitted	-2.3dBm

MICRO-USB PORT

NOTE: An adult must charge the device and connect to a computer.

Use the included **Micro-USB Cable** to connect the device to your computer to transfer photos and videos and to charge the device.

 
- 1. Open the cover over the Micro-USB port on the smartwatch.
- 2. Insert the Micro-USB side of the cable into the port.
- 3. Insert the large USB end into a USB port on your computer.

BATTERY CHARGING

Prior to use, it is recommended that you fully charge your L.O.L. Surprise!™ Smartwatch, Camera & Game for optimal performance.

NOTE: The device should be OFF prior to charging. To power OFF, hold the home button for about 5 seconds, until a sound plays and the device shuts off.

- 1. Remove the watchband or clip/stand from around the smartwatch.
- 2. Insert the larger end of the Micro-USB cable into a USB port on your computer.
- 3. Lift open the cover over the Micro-USB port on the smartwatch and insert the Micro-USB cable into the port.
- 4. A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.
- 5. You can now turn on the device, add your favorite accessory and begin playing.

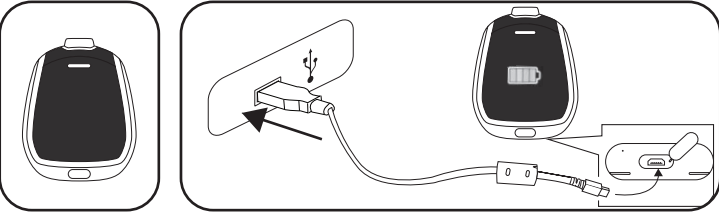

NOTE:

 
- See page 24 for more **BATTERY INFORMATION**.

SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

USING THE DUAL CAMERAS

There are two cameras on the L.O.L. Surprise!™ Smartwatch, Camera & Game, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 10-11.

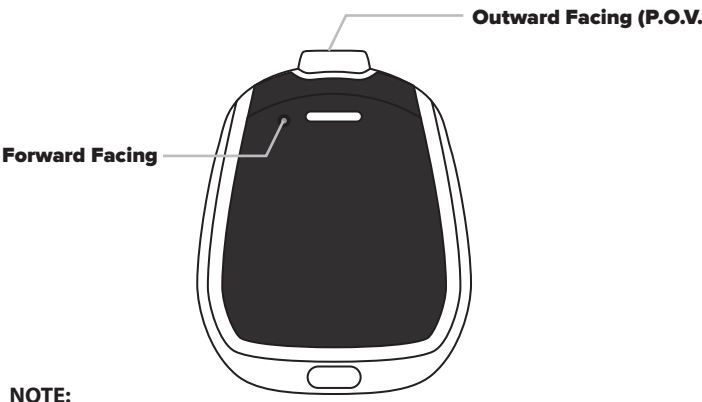

NOTE:

For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

TRANSFERRING FILES FROM THE SMARTWATCH

To start, plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4.

On your computer, you will see a removable drive called LOLSurprise. Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in those folders to the desired location on your computer. **TIP:** Photo and video files will not be deleted from the smartwatch until you manually delete them on the device by pressing the trash can icon in the photo and video apps.

You cannot load photos or videos from other devices onto the L.O.L. Surprise!™ Smartwatch, Camera & Game, as the file types may not be compatible.

NOTE: Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

WEARING THE SMARTWATCH

As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat, soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

 
Avoid wearing the watchband too tightly, which may also contribute to skin irritation. The band should not be too loose so that is does not stay in place properly, but it should also not be so tight that is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with the L.O.L. Surprise!™ Smartwatch, Camera & Game.

USING THE CLIP/STAND

In addition to wearing the L.O.L. Surprise!™ Smartwatch, Camera & Game on your wrist, you can use the included clip/stand to attach it to your clothing or use it as a display stand on a table. The smartwatch will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband.

TIP: For both the watchband and the clip/stand, make sure the device's arms and legs are able to move in and out of the casing. Ensure a proper fit before use.

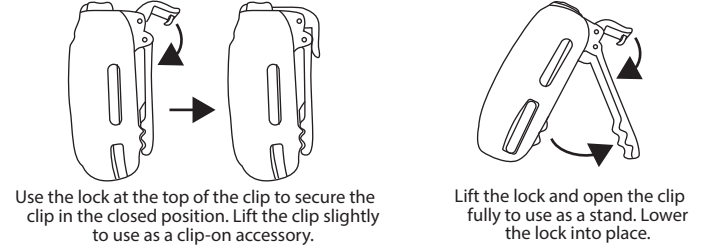

HOME BUTTON

 
Press and hold the home button on the front of the smartwatch for about 5 seconds to turn it on.

Once the smartwatch is turned on, press the home button once to rotate the display between **M.C. SWAG MODE**, **MENU MODE** and **WATCH SCREEN MODE**.

From **M.C. SWAG MODE**, press the home button to switch to **MENU MODE**.

From **MENU MODE**, press the home button to switch to **WATCH SCREEN MODE**.

From **WATCH SCREEN MODE** press the home button to switch to **M.C. SWAG MODE**.

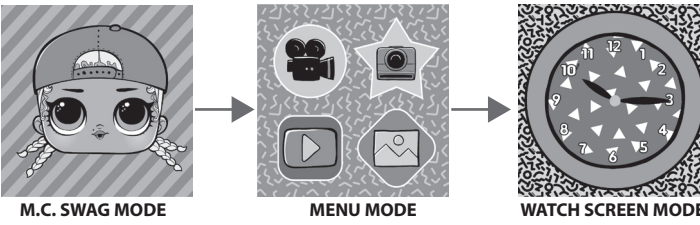

QUICK MENU VIEW

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity, daily steps, and battery charge level. Swipe up to make this quick view menu disappear or it will disappear after a few seconds. Tap on the volume or wireless connectivity icons to make changes to those settings.

NOTE: The quick view menu will not appear by swiping down on the screen while the smartwatch is listening to you in M.C. Swag Mode.

M.C. SWAG MODE

Press the home button on the front of the smartwatch to rotate the display to **M.C. SWAG MODE**.

- 1. When you touch the screen in M.C. Swag Mode, the device's arms and legs will move!
- 2. Shake M.C. Swag around to make her dizzy!
- 3. Leave M.C. Swag alone and watch her yawn or whistle.
- 4. Swipe right to tickle M.C. Swag and make her giggle.
- 5. Swipe left to make M.C. Swag annoyed!
- 6. Swipe up and M.C. Swag will listen to you! Try saying, "Hi M.C. Swag," or asking a question to see her response. Swipe down, left, or right on her face to disable the listening mode.
- 7. Press and hold M.C. Swag's face to open up fun emojis for her to interact with and express herself!
- 8. Sometimes M.C. Swag will suggest a game to play or an app to use with a speech bubble icon. Click on the icon to open the app M.C. Swag suggests. This will also boost her happiness on the stat bar (see **HEALTH** on page 16).

PLUS SO MUCH MORE! What else can your L.O.L. Surprise!™ Smartwatch, Camera & Game do?

MENU MODE

Select from a variety of games and activities which include your favorite L.O.L. Surprise!™ characters, access dual P.O.V. and selfie cameras, and send messages! Press the icons on the screen to open up sub-menus (indicated by an arrow next to the icon).

To exit a menu selection, press the home button.

There are four main menu screens, and three sub-menus for games, fitness games/tracking, and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.

VIDEO CAMERA



VIDEO GALLERY



FASHION SHOW



ALARM CLOCK



TIMER

CAMERA

IMAGE GALLERY



SETTINGS

Date, Time, Date Format, 12 or 24 Hour Clock, Language, Brightness, Volume, Firmware Updater, Device Name, Wireless Connectivity

HEALTH

CALENDAR

STOPWATCH

 
CAMERA

REMEMBER: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.



Video Camera:

- Record selfies or point of view (P.O.V.) videos with your device!
- Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V.
- Press the circle button on the bottom of the screen to start recording, and press the square button to stop recording your video.

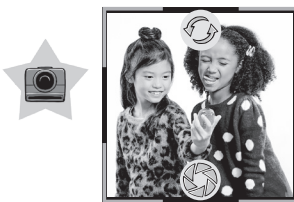

Camera:

- Take selfies or P.O.V. photos with your device!
- Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V.
- Press the shutter button on the bottom of the screen to take your picture.

CAMERA



Video Gallery:

- View all videos that you've taken on your device.
- Tap on a video in the gallery to watch it.
- Swipe left or right to view all of your videos.
- Press the icon in the top left to go between the enlarged video view and the gallery view.
- Press the play button over the video to play it.
- Press the two arrows icon on the top of the screen to rotate your video.
- Press the trash can icon to delete the video. Then, press the check to delete or the X to cancel.

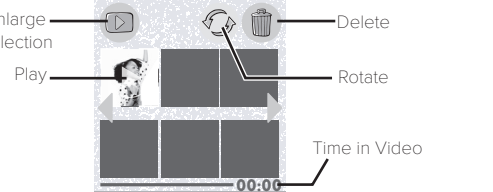 


Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the large image icon in the left-hand corner to enlarge the photo you have selected.
- Press the pencil icon to add a sticker your image.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image, and use the arrows to select the border you want.

- Press the stamp icon to remove the border.
- Press the check mark to save your edited image as a new picture.
- Press the trash can icon to delete your photo. Then, press the check to delete or the X to cancel.



 
GAMES MENU

All games have three level options, where 1 is the easiest level and 3 is the hardest level. See if you can win each game playing all three levels!




L.O.L. Surprise!™ Time:

- Match the digital time to the analog time on the screen to earn stars.
- The clock will select a random analog time.
- Touch the digital numbers. Then, press the arrows above and below the digital numbers to enter the time shown on the analog clock.
- When you think the time you have set is correct, press the check mark to submit your answer.
- After 5 correct answers, M.C. Swag's face will show up with a fun animation!
- A new clock time will appear, so keep playing!
- Earn stars as you enter the correct time!

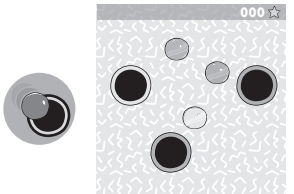


A-Maze-Ing Balance:

 - Guide the colored balls into the hole with the matching color.
- If you are wearing the smartwatch on your wrist, move your wrist around to roll the balls. If the smartwatch is in the clip/stand, rotate the device to roll the balls.
- Earn stars for every ball you match correctly!

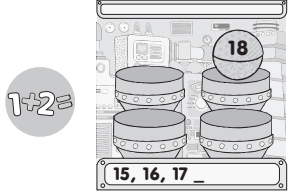

Yeah Math!:

 
- Solve the math problem by selecting the correct number on the L.O.L. Surprise!™ ball when it pops up on the screen.
- If you answer correctly, you'll earn a star!
- Try again if you select the wrong answer.

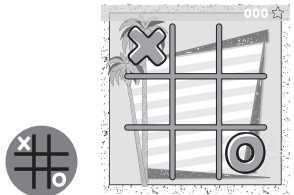

Tic-Tac-Toe:


- Play a game of Tic-Tac-Toe against the device.
- Pick a section to place your X. Three X marks in a row wins! Three O icons in a row means the smartwatch won that round.
- Earn a star for each game you win!

 FITNESS MENU

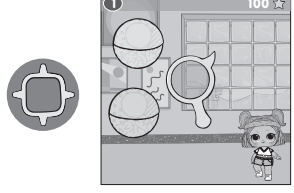


Treasure Hunt:

 - Start walking around with your smartwatch.
- Walk around until L.O.L. Surprise!™ balls appear.
- Aim the spy glass over a ball, and try to match the object in the lower left corner to the object in the ball.
- Keep trying until you collect the right object!
- For each correct object, earn stars!

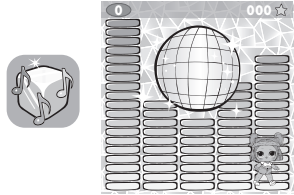


Freeze Dance:

 - Dance until the music stops!
- When the music stops and a hand is on the screen, make sure to freeze!
- Don't move while the music is stopped.
- Don't stop moving while the music is playing.
- Earn a star for each minute of play when you freeze at the right time! If you are still dancing when the music stops, if you move while the music is still stopped, or if you stop moving while music plays, try again!

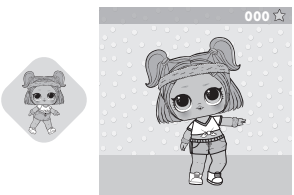

Sprints Says:

 - Watch the move that Sprints wants to you copy.
- Perform that move the number of times that the screen shows.
- The number will count down as you perform the move repetitively.
- Earn stars for completing moves!

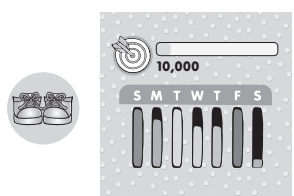


Activity Tracker:

- View your daily activity steps.
- Set a step goal by clicking on the target icon.
- Set a target step goal by pressing the + and - icons.
- Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps.
- Press the check mark to set your goal.
- REMEMBER:** Always consult a doctor before starting new physical activities.


MESSAGING

 REMEMBER: Your L.O.L. Surprise!™ Smartwatch can connect to other L.O.L. Surprise!™ Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS** (making sure it is toggled to the ON [Green] position). Now, you can send messages with other nearby L.O.L. Surprise!™ Smartwatches. **NOTE:** Wireless connectivity is only compatible with other L.O.L. Surprise!™ Smartwatches and will not connect to other types of devices.

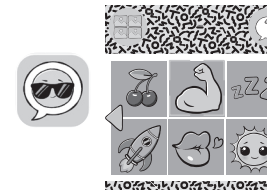

Messaging:

 
- Message another nearby L.O.L. Surprise!™ Smartwatch!
- Send images from your gallery or click the emoji icon in the top-left corner to send an emoji!
- Press the send icon in the top-right corner to send your message.
- Select the L.O.L. Surprise!™ Smartwatch you want to send the message to.
- A graphic representing a transfer between two L.O.L. Surprise!™ Smartwatches will appear on the screen to confirm your messages being sent.
- A chat bubble will pop up on the receiving L.O.L. Surprise!™ Smartwatch when your message has sent.
- The receiving device must press the chat bubble to view the message.
- NOTE:** Pictures sent to another L.O.L. Surprise!™ Smartwatch cannot be saved on that device. They will disappear after about 15 seconds.

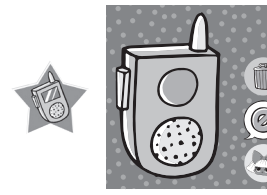

Walkie Talkie:

- Press the button on the top of the two-way radio to record.
- Press it again to stop recording.
- Press the middle icon to select fun voice effects, like extra fast, slow-mo, robot, hamster or no effect.
- Press the trash can icon to delete the message.
- Press the play button to play your message back.
- Press the L.O.L. Surprise!™ icon to send the message to a nearby L.O.L. Surprise!™ Smartwatch. Select the L.O.L. Surprise!™ Smartwatch you want to send the message to. A graphic representing a transfer between two L.O.L. Surprise!™ Smartwatches will appear on the screen to confirm your message is being sent.
- A chat bubble will pop up on the receiving L.O.L. Surprise!™ Smartwatch when your message has sent.
- The receiving device must press the chat bubble to hear the walkie talkie message.
- NOTE:** Messages sent to another L.O.L. Surprise!™ Smartwatch cannot be saved on that device. They will disappear after about 15 seconds.

 
FASHION

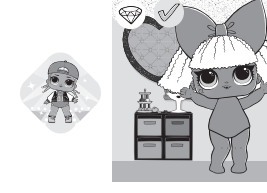

Fashion Show:

- Swipe left or right on the touchscreen to see all of the L.O.L. Surprise!™ rooms and four different dolls!
- Open the diamond icon in the top-left corner to see all the fashion items, pets, and other items you have collected.
- Swipe left and right to see all of your options.
- Press the back arrow to go back.
- Tap an item and press the check mark to add it to the doll and room you're in.
- Press and hold the item to move it around, and then press the check mark when you're happy with it.
- Uncheck the icon to move the item.
- Drag the item to the sides of the screen to remove it.
- How many ways can you mix and match?

 STATS

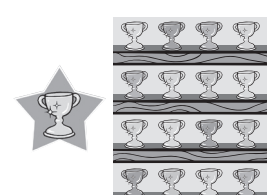


Rewards:

- See all the trophies you've earned from playing games and interacting with M.C. Swag.

Reward Scoring:

- Earn one star for each correct answer.
- Earn a new treasure reward in the treasure box for every 10 stars collected.
- Level up after 100 stars to earn a trophy!

 STATS (CONT.)

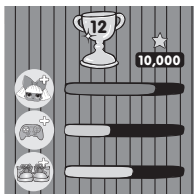


Health:

- Interact with M.C. Swag in M.C. Swag Mode to increase this stat bar.
 - Play and win games to increase this stat bar.
 - Meet your step goals, walk and play fitness games to increase this stat bar.
- REMEMBER:** This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

SETTINGS MENU

Date, Time, Date Format, 12 or 24 Hour Clock, Language, Brightness, Volume

 To cycle through each setting, swipe left or right on the screen. Make the appropriate changes. Then, press the check mark to set your selection. If the setting is already accurate, press the check mark to continue or swipe left to the next screen.

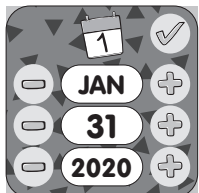

Date Selection:

- Use the + and - symbols to change the month, day, or year.
- Press the check mark to set your selection.



Time Selection:

- Press the hour and minute numbers or swipe up and down on the numbers to change the time.
 - Press the check mark to set your selection.
- NOTE:** The smartwatch will not automatically change for Daylight Savings Time.

16



Date Format Selection:

- Choose how you want to display the date:
 - MM/DD/YY
 - DD/MM/YY
- Press the check mark next to your selection to set the display.



 
12 or 24 Hour Clock Selection:

- Choose how you want to display the time:
 - 12 Hour Cycle
 - 24 Hour Cycle (for example, 6:00 p.m. would display as 18:00).
- Press the check mark next to your selection to set the display.



Language Selection

- Tap on the language name to cycle between:
 - English
 - Spanish
 - French
 - Dutch
 - German
- Press the check mark to select your language.

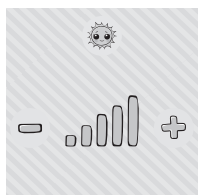

Brightness Setting

Use the + and - symbols to change the brightness of the screen.



Volume Setting

Use the + and - symbols to change the device's volume level.

17

 
SETTINGS

Firmware Updater, Device Name, Wireless Connectivity




Firmware Updater:

- Check that your L.O.L. Surprise!™ Smartwatch, Camera & Game is up to date with the latest available firmware.
 - The screen will show you which version you have.
 - Visit mgae.com/customer-care/firmware to confirm you have the latest version.
- NOTE:** You will also see this screen on your first start up after updating the firmware.

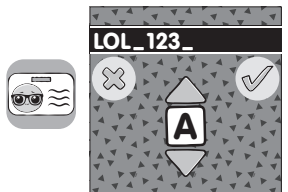

L.O.L. Surprise!™ Smartwatch, Camera & Game Device Name:

 - Your device is named LOL_123_ by default, but you can add onto the LOL prefix to customize it!
 - Should you choose a new name, press the up and down arrows to select a letter or number.
 - Press the letter or number to set it.
 - Press the X to clear the letter or number you've selected.
 - Press the check mark to save your new device name.
- NOTE:** Your device name will always start with LOL. The first four characters LOL_ cannot be erased.

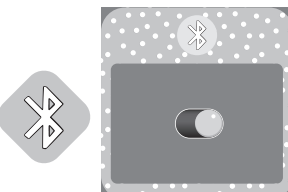


Wireless Connectivity Selection:

- Use the toggle button to turn wireless connectivity on (green) or off (pink).
- NOTE:** See page 5 for more wireless connectivity information.

18

 CALENDAR & TIMERS

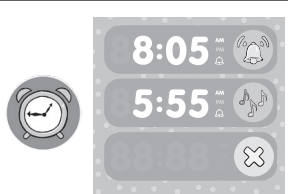

Alarm Clock:

- Set up to three different alarms with custom wake up sounds.
 - Press the X icon next to the time to select that timer.
 - Press the X icon next to the timer again to make the numbers appear.
 - Next, press the numbers to select that alarm.
 - Press the hour and minute numbers to change the selection.
 - Continue changing the hour numbers to switch between AM and PM.
 - Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
 - Cycle back to the X icon to delete the alarm.
 - When your alarm goes off, M.C. Swag will appear.
 - Press the stop icon to turn the alarm off.
- NOTE:** The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

 
Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Swipe left or right to cycle through the sticker options.
- Press the check mark to add the sticker to the date.
- Press the X icon to remove it.



19

CALENDAR & TIMERS (CONT.)

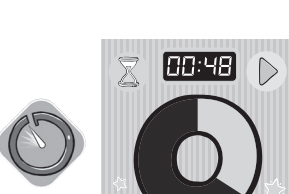

Timer:

- Set a custom timer by swiping up or down (or tapping) on the minutes and seconds numbers to set the desired duration of time.
- Select a preset timer by pressing the icon in the top left. By default these times are:
 - Brushing Teeth: 2 Minutes
 - ZZZ: 30 Minutes
 - Book: 15 Minutes
 - Broom: 15 Minutes
 - Sleep Mask: 2 Minutes
 - Music: 30 Minutes
 - Phone: 15 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the check to set the timer.
- Press the play button to start the timer.
- Press pause to pause the timer.
- An animation of the timer you selected will appear when the timer is done.



Stopwatch:

 
- Time yourself doing various activities and having fun!
- Press the play button to start the stopwatch.
- Press the stop button to stop the stopwatch.
- Press the X button to reset the stopwatch.

20

WATCH SCREEN MODE

Press the home button to rotate the display to **WATCH SCREEN MODE**.

Swipe left or right on the touchscreen smartwatch surface to select from over 50 watch faces. Stop swiping to set the watch face that you like.

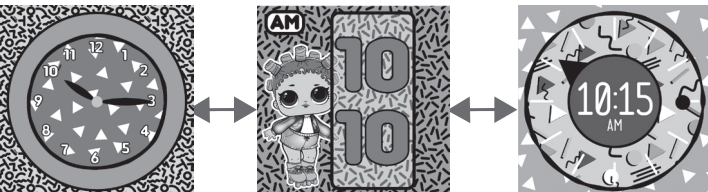

21

TROUBLESHOOTING

The smartwatch has stopped working.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. NOTE: If the device still does not work, charge the battery (see page 4) and follow the steps above.
The touchscreen is not responding properly.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. It should now work properly. NOTE: If the device screen still does not work, charge the battery (see page 4) and follow the steps above. TIP: Use the tip of your finger rather than your finger nail for best results using the touchscreen.
The image or video taken is not clear.	1. Ensure the lighting in the area you are shooting is sufficient. 2. Check that the camera lens is clean. If dirty, wipe with a dry, soft cloth and blow on it to remove debris. See CARE AND MAINTENANCE on page 23.
Cannot connect the device to a computer.	1. Ensure there is a good connection between the device and the computer via the Micro-USB Cable. See MICRO-USB PORT on page 4 and other supporting sections for more information. 2. If the cable is damaged, contact consumer service. Do not attempt to use the cable if it is damaged.
Wireless connectivity is not working properly.	1. Stay within close proximity (about 50 ft./15m with nothing in the way) of other L.O.L. Surprise!™ Smartwatches when connecting wirelessly. 2. The device must have a sufficient amount of battery power to connect wirelessly. Recharge the device using the included Micro-USB cable.
The device is not charging.	1. Only use the included Micro-USB cable to charge the device. 2. It is recommended you only charge the device using a USB port on your computer. 3. Make sure to charge the device regularly, even if it is not in use. A battery that has not been charged in a long time may no longer accept a charge.

22

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

USAGE	BATTERY LIFE
Low Usage	5 Days
Typical Usage	2 Days
Heavy Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn't regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period.

This chart is only an estimate of the projected battery life before charging is needed.

24

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Caution:** Modifications not authorized by the manufacturer may void users authority to operate this device.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.
- CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

This warranty is applicable only to the original purchaser, is non-transferable and applies only to MGA Entertainment, Inc. products or parts. This product is covered by a 6-month warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This warranty does not apply to:

- Consumable parts, such as batteries
- Cosmetic damage, including but not limited to scratches and dents
- Damage caused by use with non-MGA Entertainment, Inc. products
- Damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes
- Damage caused by operating this product outside the permitted or intended uses described by MGA Entertainment, Inc. in this manual
- A product or part that has been modified
- Defects caused by normal wear and tear or otherwise due to the normal aging of the product
- If any MGA Entertainment, Inc. serial number has been removed or defaced

LIMITED WARRANTY CONT.

For assistance, please contact consumer service:

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikies.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

United Kingdom: For warranty service or replacement part information, please visit our website at: littletikies.co.uk, and/or call +0800 521 558 or write to 50 Presley Way, Crownhill, Milton Keynes MK8 0ES, Bucks UK. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Benelux Region: For warranty service or replacement part information, please visit our website at: littletikies.nl, and/or call +31(0) 172 758038 or write to klantenservice@mgae.com. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Outside of these countries: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under warranty. Return of the product under warranty must adhere to the following rules:

If MGA Entertainment, Inc. believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF MGA ENTERTAINMENT, INC. CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY MGA ENTERTAINMENT, INC. IN ITS SOLE DISCRETION. ANY DISPUTES RESULTING FROM THIS WARRANTY SHALL BE SUBJECT TO THE FINAL AND CONCLUSIVE DETERMINATION OF MGA ENTERTAINMENT, INC.

To the extent permitted by law, MGA Entertainment, Inc. will not be responsible for direct, special, incidental or consequential damages resulting from any breach of warranty.

DATED SALES RECEIPT REQUIRED FOR PROOF OF PURCHASE

27

USER GUIDE

Illustrations are for reference only. Styles may vary from actual contents.

571391, 571391E5C, 575238

6+

For more information including the latest instructions, visit:
WWW.MGAE.COM



PRINTED IN CHINA
0820-1-E/NT

WWW.LOLSURPRISE.COM
©2020 MGA Entertainment, Inc.
L.O.L. SURPRISE!™ is a trademark of MGA in the U.S. and other countries.
All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries.
Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

U.S. Consumer Service
2180 Barlow Road Hudson,
Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill,
Milton Keynes,
MK8 0ES, Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Barnije 68-70, 2404 XG
Alphen a/d Rijn, The Netherlands
Tel: +31 (0) 172 758038
E-mail: klantenservice@mgae.com

Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

28