

Default Layout

LAYER 0

tap for **SPACEBAR**
hold down for SHIFT




Main
SPACEBAR

Tap both for **SPACEBAR**

Tap both for ENTER

hold **Fn** for LAYER 1

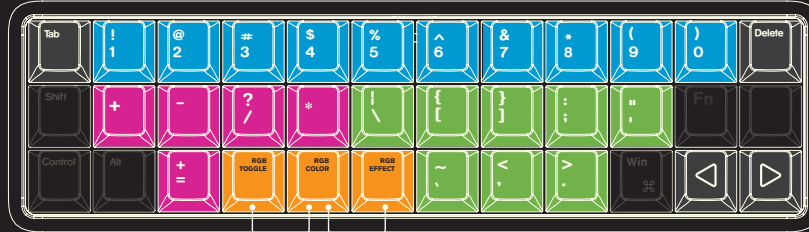

Tap both for Backlight level down -

Tap both for Backlight level up +

MEMORY TIP

CALCULATOR KEYS


- A Add (+)
- S Subtract (-)
- D Divide (/)
- F Factor / Multiply (x)

RGB LIGHTING CONTROL KEYS

- C Color Change
- X Light eXtinction toggle
- V RGB Effect Variation

TYPE 30

Quick Start Guide

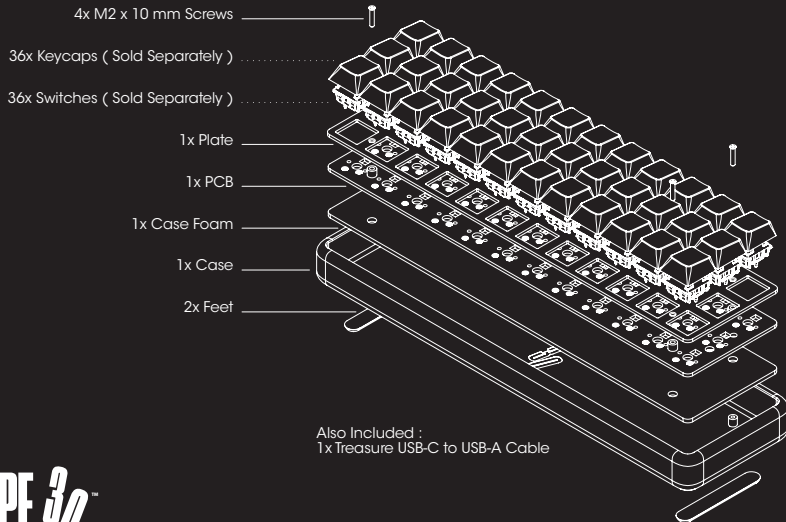

TYPE 30

1 Assemble TYPE-30

Please follow the instructions of the online guide :

[tre.sr/support](https://treasuretech.com/support)

- 1.1 Align the PLATE on top of the PCB
Ensuring the PLATE notch is aligned with the top side
and top edge of the keyboard.



- 1.2 Insert the SWITCHES into the PLATE/PCB, starting with the four (4) corner switches for stability
- 1.3 Place the Case FOAM on the bottom of the CASE.
Position the PLATE/PCB/SWITCHES assembly in the CASE and
secure it with the four (4) SCREWS
- 1.4 Install the two (2) FEET under the CASE and install the KEYCAPS

Your Keyboard is now ready to use, connect it using the USB-C
cable. The default layout is shown on the back of this card

2 Customize TYPE-30 with VIA

[tre.sr/via](https://treasuretech.com/via)

Treasure