



Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Del		Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Up		Up
	Info		Info / Angle
	Left		Left
	OK / CH List		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 Vol+	 Vol+	 << / TV/Radio	 TV/Radio /
 Home	 D.Menu / Top	 >> / Hold	 >> / Tune+
 CH+	 CH+ / Page+	 >> / Hold	 Shift + Stop /
 Vol-	 Vol-	 Stop / Reveal	 Stop / Hold
 Browser	 Smart / List	 I<< / Size	 I<< / Preset-
 CH-	 CH- / Page-	 >>I / Index	 >>I / Preset+
 Rec	 Rec / Rec Mode		
 Fav / Goto	 Fav / Marker / PC		
 Fav / Goto	 Shift + Text /		
 T.Shift	 Setup / OPT /		
 PVR List	 Display / Media		
 S.Page	 Eject / Surround		
 Zoom	 Zoom / Size		
 Play/Pause / TTX	 Pause / Step / Freeze		
 Play/Pause / TTX	 Text / Goto		
 Play/Pause / TTX	 Play / Slow		
 << / TV/Radio	 << / Tune-		

