

Brookstone®

Studio Headphones

WHEN YOUR MUSIC HAS TO BE PERFECT

USING YOUR HEADPHONES

1. Place the earcups over the correct ears by noting the appropriate R and L indicators on each earcup.
2. Adjust headphones to comfortably fit on your head, and have the earcups sit directly over your ears, by sliding the headband in or out to the correct length.

Note: Placing the headphones over the correct ears is important, since they are designed to fit the shape of the head.

MAINTENANCE AND STORAGE

1. Clean with a slightly damp cloth. Do not use abrasive cleansers, rubbing alcohol or mineral spirits.
2. The Studio Headphones are designed for easy, compact storage. Twist the earcups so that they lay flat, and then turn the earcups in towards the center of the headband.

Note: The earcups twist in only one direction—forcing them to twist in the wrong direction will damage the headphones.

3. Keep the headphones in the included bag for storage or travel.

SPECIFICATIONS

Driver Unit: Large 40mm Neodymium Magnet Speaker

Voice Coil: CCAW (Aluminum Voice Coil)

Impedance: 30 Ohms \pm 10% at 1K Hz

Sensitivity: 108 \pm 3 dB at 1 kHz S. P. L.

Frequency Response: 20-20,000Hz

Diaphragm: Ultra Thin PET Diaphragm

WARNINGS

1. Do not place unit near heat sources such as radiators or heating vents, in direct sunlight, or where there is a lot of dust, moisture, rain, vibration or shock.
2. Listening to audio at excessive volumes can cause permanent hearing damage. Use at as low a volume as possible.
3. Use this unit only for its intended use as described in these instructions.
4. Do not use when failure to hear your surroundings could be dangerous, such as while driving, or when biking, walking or jogging where traffic is present.
5. Turn up the volume control only far enough to hear properly.
6. Ringing in your ears may indicate that the level of the volume is too high. Try lowering the volume.

634907

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) to any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.