


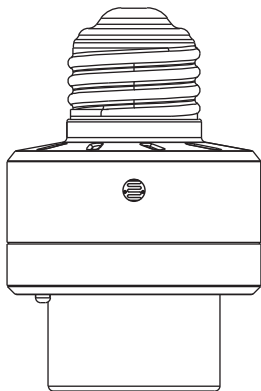

# Light Sensor Socket

[Instruction Manual]




Please pay attention to the warning signs  
Read the instructions with caution before operating  
and keep it properly

## Warning:

**To reduce the risk of fire, electric shock or personal injury, please strictly follow the instructions.**

1. Cut off the power before installation the Light Control.
2. Do not use it with opaque or frosted-glass light fixtures.
3. Make sure your lamp is waterproof when using outdoors.
4. Make sure the automatic photocell sensor is facing the window and the distance is less than 3 feet when using indoors.
5. Please use it in dry place.
6. Do not connect it to any devices that may exceed the power limits of the product.
7. Do not repair it except by authorized service staff.
8. To prevent a choking hazard, keep the packing materials away from children.

## Product Illustration

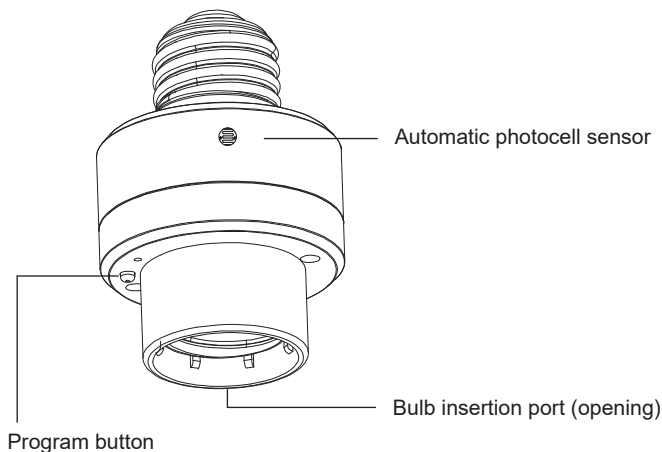

## Product function description

Three modes for the light controller:

1. Light sensing mode: the light bulb on the light controller will be automatic to turn on at dusk and turn off at dawn.
2. Timing mode: three timer 2, 5, 8 hours to choose to turn off the light bulb on the socket freely.
3. Random mode: the light bulb on the socket will turn on or off randomly from dusk to dawn (Note: the interval between turning on/off is no less than 10 minutes and no more than 2 hours).

## Operating Instructions

1. Turn off power in the working area of main circuit breaker or fuse box.
2. Screw your light bulb into Light Control, and screw it to the light fixture.
3. Rotate the photocell sensor to face a strong source of daylight, but away from any artificial or reflected light source.
4. Light sensing mode: when turning on the power, the light bulb on the controller will flash once, indicating that the light controller enters the light sensing mode.
5. Timing mode: short press the program button on the light controller to program the timing mode:
  - (1) In the light sensing mode, tap the button once, and the light bulb will flash twice, indicating that the light controller has entered the 2H timing mode.
  - (2) Press the program button again, the light bulb will flash 3 times, indicating that the light controller has entered the 5H timing mode.
  - (3) Press the program button again, the light bulb will flash 4 times, indicating that the light controller has entered the 8H timing mode.
  - (4) Press the program button again, the light bulb will flash once, indicating that the light controller exits the timing mode and enters the light sensing mode.
6. Random mode: Long press the program button on the light controller to program the random mode:
  - (1) In any mode, press the button for 3s, the light bulb will be off after 3s, indicating that the light controller enters the random mode.
  - (2) In random mode, tap the program button once, the light bulb will flash once, indicating that the light controller exits random mode and enters

light sensing mode.

7. When you install it during the day, the light bulb will not be lit after flashing once. If it is night, the light bulb will turn on back after flashing once.
8. When power out aged, once restore the power, the light controller will directly enter the light sensing mode until you reprogram it. To reprogram, just do it again from step 5.

### **NOTE:**

- This Light Control is for use with incandescent、halogen bulbs、compact fluorescent and LED bulbs. Use 100 watts or less if bulb is installed pointing up or 60 watts or less if bulb is installed pointing down.
- Do not use with opaque or frosted glass fixture.
- Do not exceed lamp wattage specified on lamp fixture.
- Do not use with yellow "bug light" bulb.
- Adjacent light bulbs can cause the light control to operate improperly (blink on & off). This problem can be overcome by rotating the photocell opening slightly.
- In light sensitive mode, the light control has an Off Delay function to prevent the bulbs from flickering repeatedly if there is a sudden strong light source. So, the Off Delay function allows the bulbs to be switched off by the light sources lasting for 60S or longer.

### **Specifications**

- Input voltage: 120VAC 60HZ
- Max.load Power:100W
- Socket Type: Standard Medium E26

### **One Year Limited Warranty**

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

