

KLIPSCH

M i a m i

MANUAL



LEGENDARY AMERICAN SOUND



SINCE 1946

TABLE OF CONTENTS

APPLICATION KLIPSCH CONNECT PLUS • APLICACIÓN KLIPSCH CONNECT PLUS • KLIPSCH CONNECT PLUS APP • APP KLIPSCH CONNECT PLUS • APLICATIVO KLIPSCH CONNECT PLUS
KLIPSCH CONNECT PLUS 应用程序 • KLIPSCH CONNECT PLUS 應用程式 • KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱

- 1. Klipsch Connect Plus App**
- 2. What's in the Box**
- 3. Product Overview**
- 4. Retractable Handle**
- 5. Power and Battery**
- 6. Lighting Control**
- 7. Bluetooth Connection**
- 8. Aux Connection**
- 9. USB Connection**
- 10. Microphone/Guitar Input**
- 11. TWS Pairing**
- 12. Broadcast Mode Pairing**
- 13. Factory Reset**
- 14. Care and Cleaning**

KLIPSCH CONNECT PLUS APP

APPLICATION KLIPSCH CONNECT PLUS • APLICACIÓN KLIPSCH CONNECT PLUS • KLIPSCH CONNECT PLUS APP • APP KLIPSCH CONNECT PLUS • APLICATIVO KLIPSCH CONNECT PLUS
KLIPSCH CONNECT PLUS 应用程序 • KLIPSCH CONNECT PLUS 應用程式 • KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱

Scan the QR code for enhanced functionality.

Scannez le code QR pour une fonctionnalité améliorée. Escanee el código QR para obtener una funcionalidad mejorada. Scannen Sie den QR-Code für erweiterte Funktionalität. Scansiona il codice QR per funzionalità avanzate. Digitalize o código QR para funcionalidade aprimorada. 扫描二维码以获取增强功能。 掃描二維碼以取得增強功能。 拡張機能についてはQRコードをスキャンしてください。 향상된 기능을 보려면 QR 코드를 스캔하세요.

VIRTUAL REMOTE

EQUALIZER



LIGHT SHOW CONTROL

SUPPORT

Virtual Remote Télécommande virtuelle Control remoto virtual Virtuelle Fernbedienung Telecomando virtuale Remoto virtual 虚拟遥控器 虛擬遙控器 仮想リモート 가상 원격	Equalizer Égaliseur Iqualada Equalizer Equalizzatore Equalizador 均衡器 均衡器 イコライザ 평형 장치	Light Show Control Contrôle du spectacle lumineux Control del espectáculo de luces Lichtshow-Steuerung Controllo dello spettacolo di luci Controle de show de luzes 灯光秀控制 燈光秀控制 ライトショーコントロール 라이트 쇼 컨트롤	Support Soutien Apoyo Unterstützung Supporto Apoiar 支持 幫助 サポート 지원하다
---	--	--	---

INSIDE

CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • 内 • 含量 • 内部 • 내용물 내부

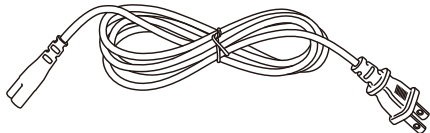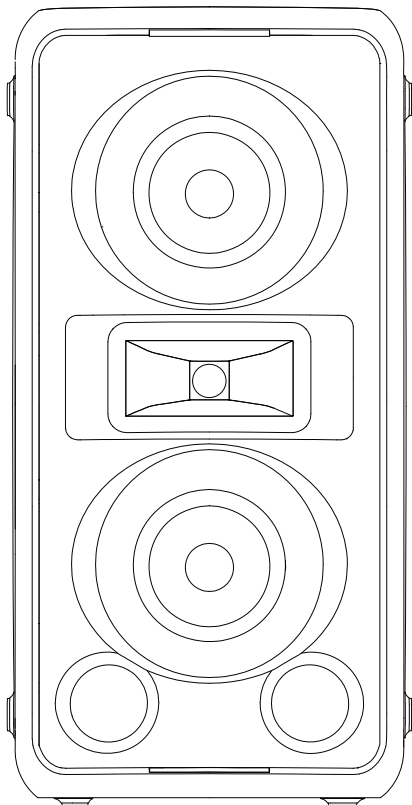


SAFETY AND
WARRANTY
INFORMATION

QUICK
START
GUIDE


CONTROLS

CONTRÔLES • CONTROLES • STEUERUNG • CONTROLLI • CONTROLES • 控制 • 控制装置 • コントロール • 통제 수단

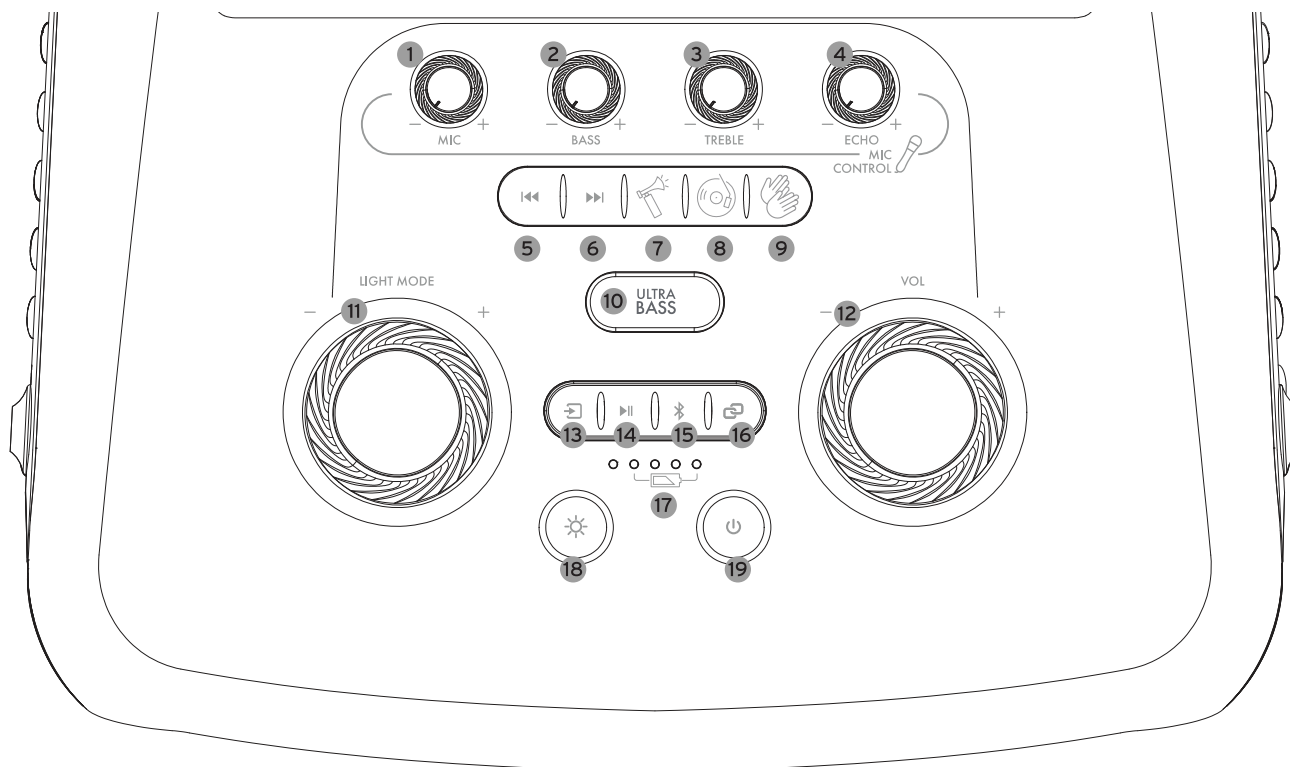

1. Microphone Volume Knob: Controls volume of microphone.
2. Bass Level Knob: Controls bass level of microphone input.
3. Treble Level Knob: Controls treble level of microphone input.
4. Echo Knob: Controls amount of echo in microphone.
5. Previous Button: Plays the previous song from the beginning.
6. Next Button: Plays the next song from the beginning.
7. Airhorn Button: Plays an airhorn sound effect.
8. Record Scratch Button: Plays a record scratch sound effect.
9. Applause Button: Plays an applause sound effect.
10. Ultra Bass Button: Enables ultra bass mode, boosting bass levels.

11. Light Mode Knob: Controls selection of light modes.
12. Volume Knob: Controls output volume of speaker.
13. Input Button: Controls which input the speaker is connected to. Only live inputs are available.
14. Play/Pause Button: Allows the user to play and pause the music.
15. Bluetooth Button: Used to connect the speaker to other devices. (phones, laptops, etc.)
16. TWS/Broadcast Button: Used to connect the speaker to other Music City Party speakers.
17. Battery Indicator Lights: Shows the current battery level.
18. Light Button: Toggle the light show on and off.
19. Power Button: Turns the speaker on and off.

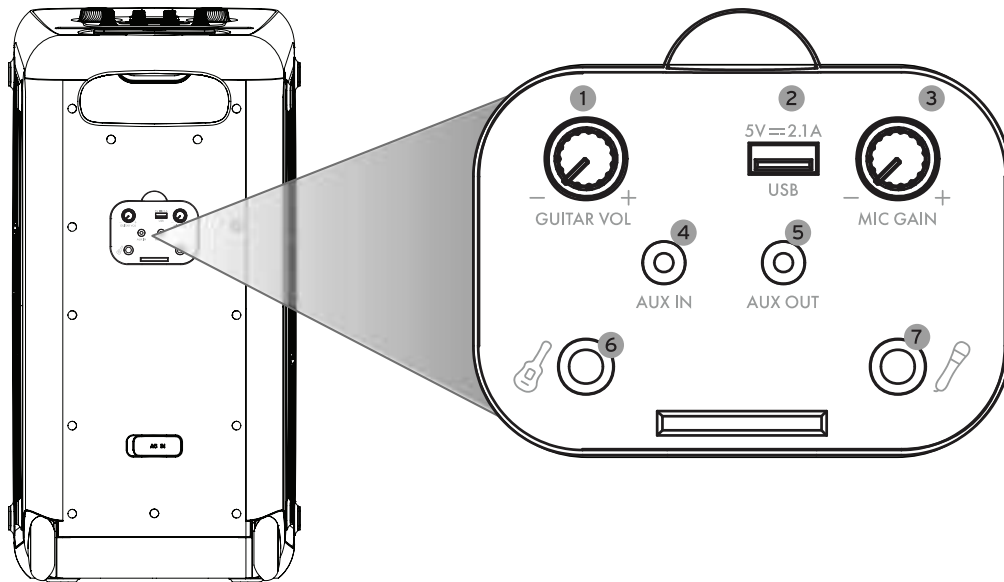

1. Guitar Volume Knob: Controls input level of guitar input.
2. USB Port: Allows reverse-charging of devices via USB connection and for firmware updates.
3. Microphone Gain Knob: Controls input level of microphone.
4. Aux Input: Allows input via Aux connection from compatible devices.
5. Aux Output: Allows output via Aux connection to compatible devices.
6. Guitar Input: Allows input via 1/4" cable connection for instruments.
7. Microphone Input: Allows input via 1/4" cable connection for microphones.

RETRACTABLE HANDLE


POIGNÉE RÉTRACTABLE • MANGO RETRÁCTIL • EINZIEHBARER GRIFF • MANIGLIA RETRATTILE • ALÇA RETRÁTIL • 伸缩手柄 • 伸縮手柄 • 引き込み式ハンドル • 개폐식 핸들



POWER AND BATTERY

PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 电源和電池
電源和電池 • 電源とバッテリー • 전원 및 배터리


ON

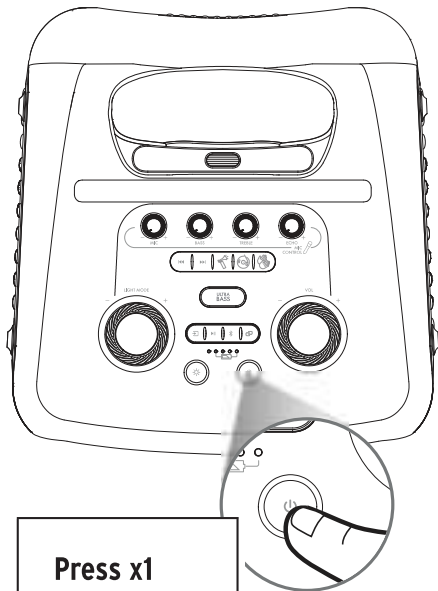

Press x1

- Appuyer 1 fois
- Oprima 1 vez
- 1x drücken
- Premere 1 volta
- Pressionar uma vez
- 按 1 次
- 按x1
- X1を押します
- 1번 누르기

OFF

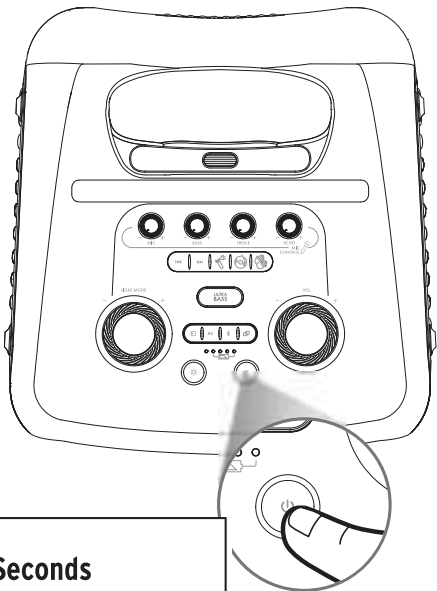


Hold 2 Seconds

- Appuyer pendant 2 secondes
- Mantenga oprimido durante 2 segundos
- 2 Sekunden gedrückt halten
- Tenere premuto per 2 secondi
- Manter pressionado por 2 segundos
- 保持 2 秒
- 維持 2 秒
- 2秒間押し続ける
- 2초 동안 유지


POWER AND BATTERY

PUISSANCE ET BATTERIE • POTENCIA Y BATERÍA • STROM UND BATTERIE • ALIMENTAZIONE E BATTERIA • POTÊNCIA E BATERIA • 电源和电池
電源和電池 • 電源とバッテリー • 전원 및 배터리


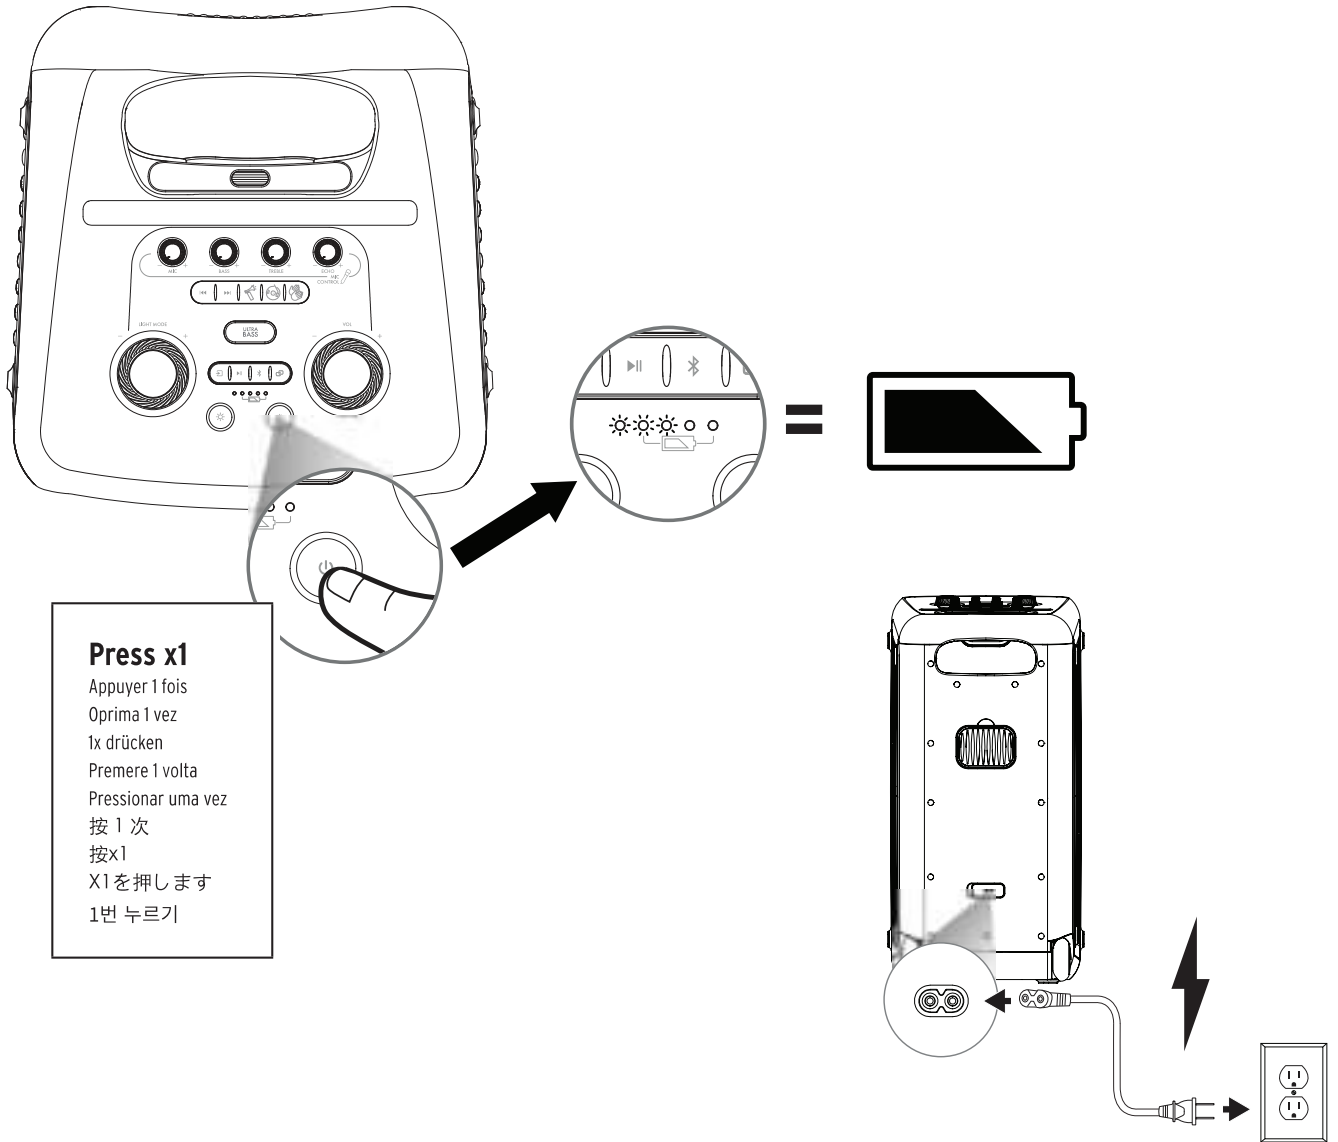


LIGHT CONTROL

CONTRÔLE DE LA LUMIÈRE • CONTROL DE LUZ • LICHTSTEUERUNG • CONTROLLO DELLA LUCE • CONTROLE DE LUZ • 灯光控制 • 光控 • 照明制御
조명 제어

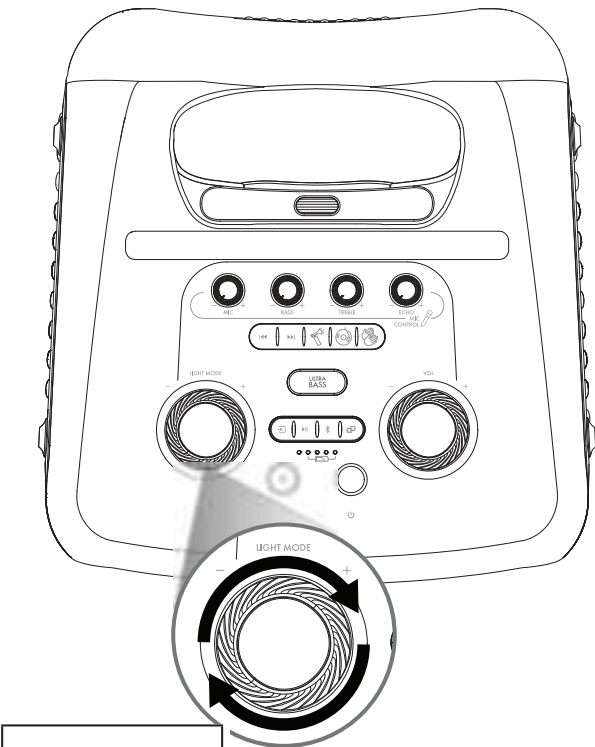

Turn
Tourner
Doblar
Drehen
Giro
Vez
转动
轉動
ターン
회전하다

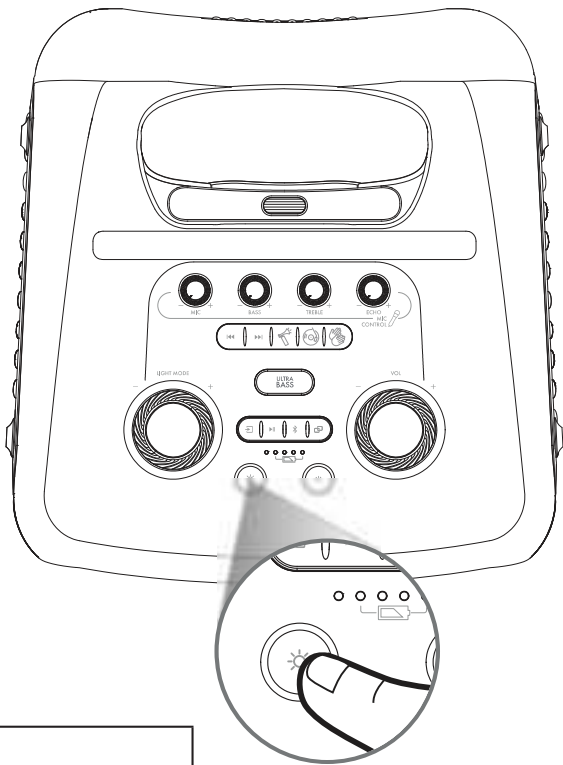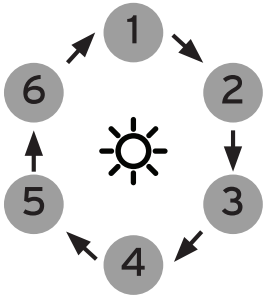


Press x1
Appuyer 1 fois
Oprima 1 vez
1x drücken
Premere 1 volta
Pressionar uma vez
按 1 次
按x1
X1を押します
1번 누르기

FRONT + SIDE LIGHTS ON
↓
LIGHTS OFF
↓
FRONT LIGHT ON


LIGHT CONTROL

CONTRÔLE DE LA LUMIÈRE • CONTROL DE LUZ • LICHTSTEUERUNG • CONTROLLO DELLA LUCE • CONTROLE DE LUZ • 灯光控制 • 光控 • 照明制御
조명 제어

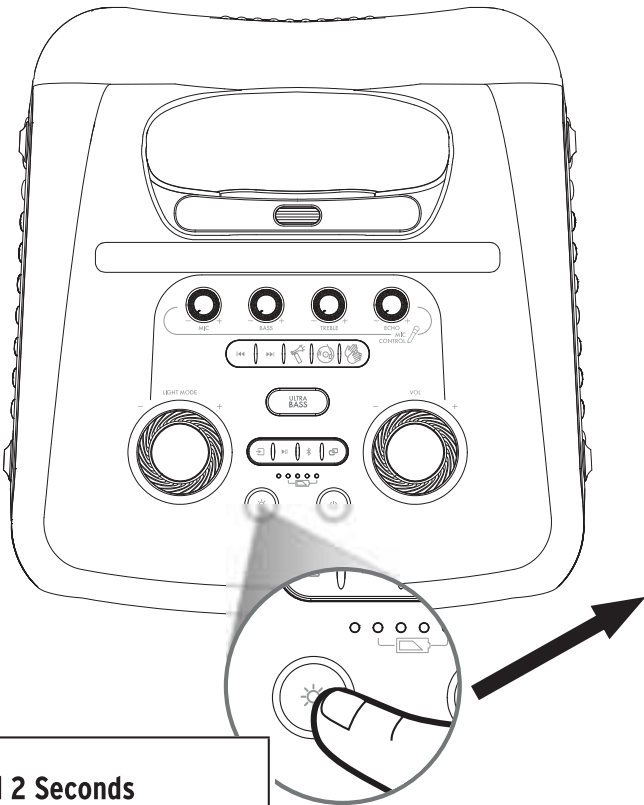

Hold 2 Seconds

Appuyer pendant 2 secondes
Mantenga oprimido durante 2 segundos
2 Sekunden gedrückt halten
Tenere premuto per 2 secondi
Manter pressionado por 2 segundos
保持 2 秒
維持 2 秒
2秒間押し続ける
2초 동안 유지

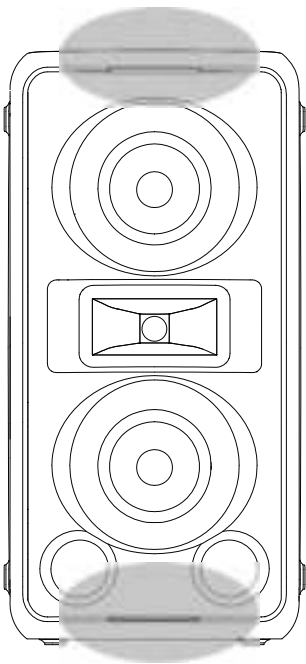


Flashing

Clignotant
Destello
Blinkt
Lampeggiante
Intermitente
闪烁
点滅
閃爍
점멸


BLUETOOTH® PAIRING MODE

MODE DE COUPLAGE *BLUETOOTH*® • MODO DE EMPAREJAMIENTO *BLUETOOTH*® • *BLUETOOTH*®-KOPPLUNGSMODUS • MODALITÀ DI ABBINAMENTO *BLUETOOTH*®
MODO DE EMPARELHAMENTO *BLUETOOTH*® • *BLUETOOTH*® 配对模式 • *BLUETOOTH*® 配对模式 • *BLUETOOTH*®ペアリングモード
BLUETOOTH® 페어링 모드

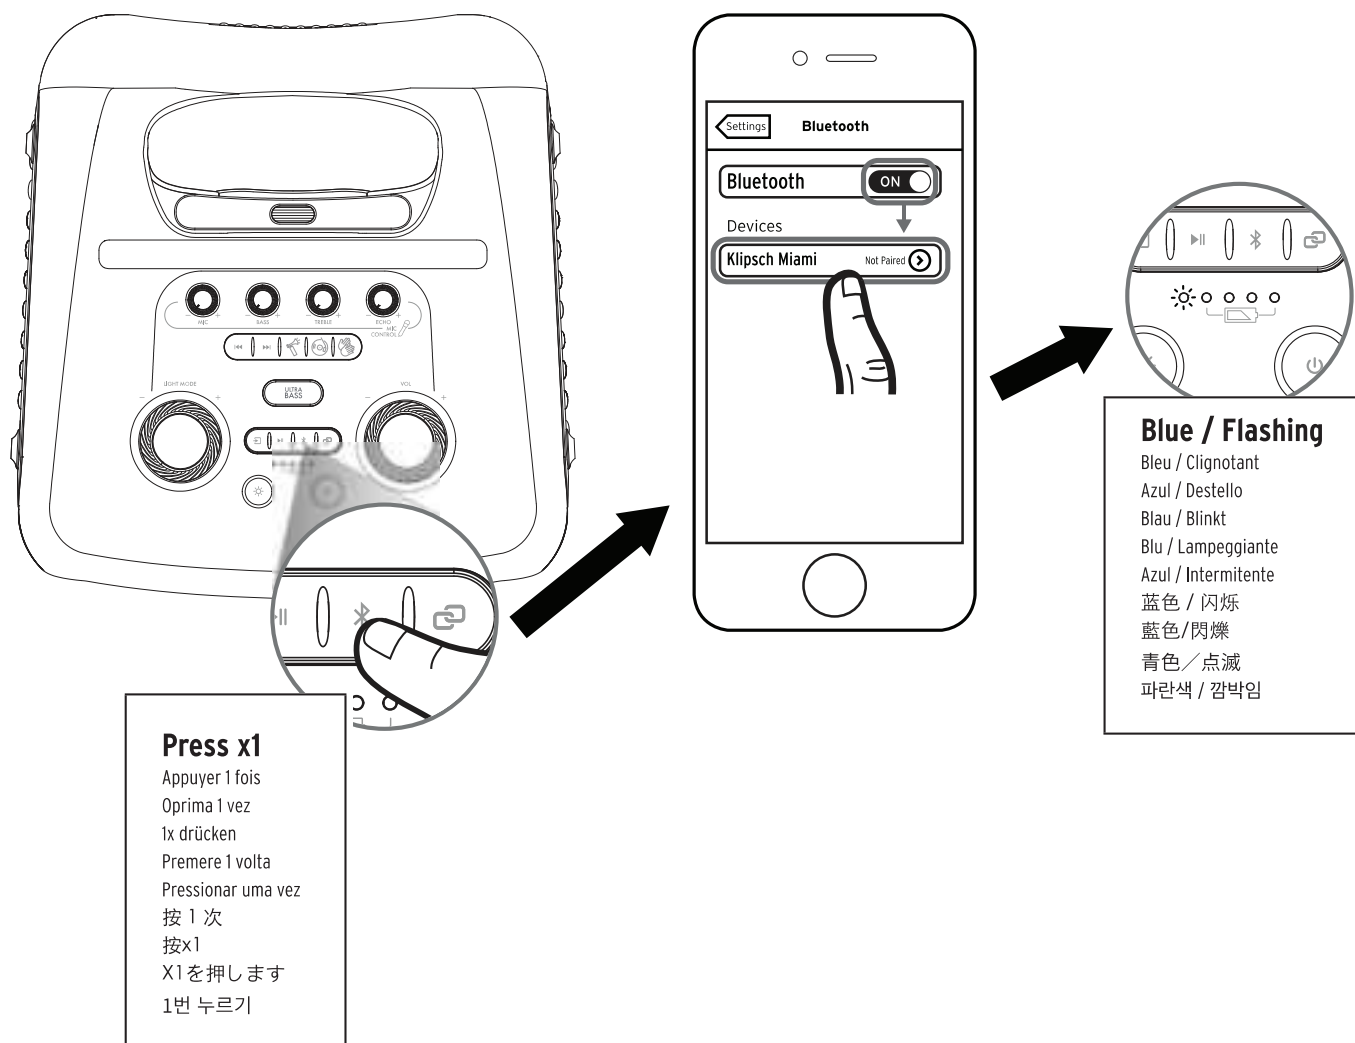


CONNECTIONS - AUXILIARY

CONNEXIONS - AUXILIAIRE • CONEXIONES - AUXILIAR • ANSCHLÜSSE - AUX • CONNESSIONI - INGRESSO AUSILIARIO • CONEXÕES - AUXILIAR • 连接 - 辅助 • 接続 - 補助 • 연결 - 보조

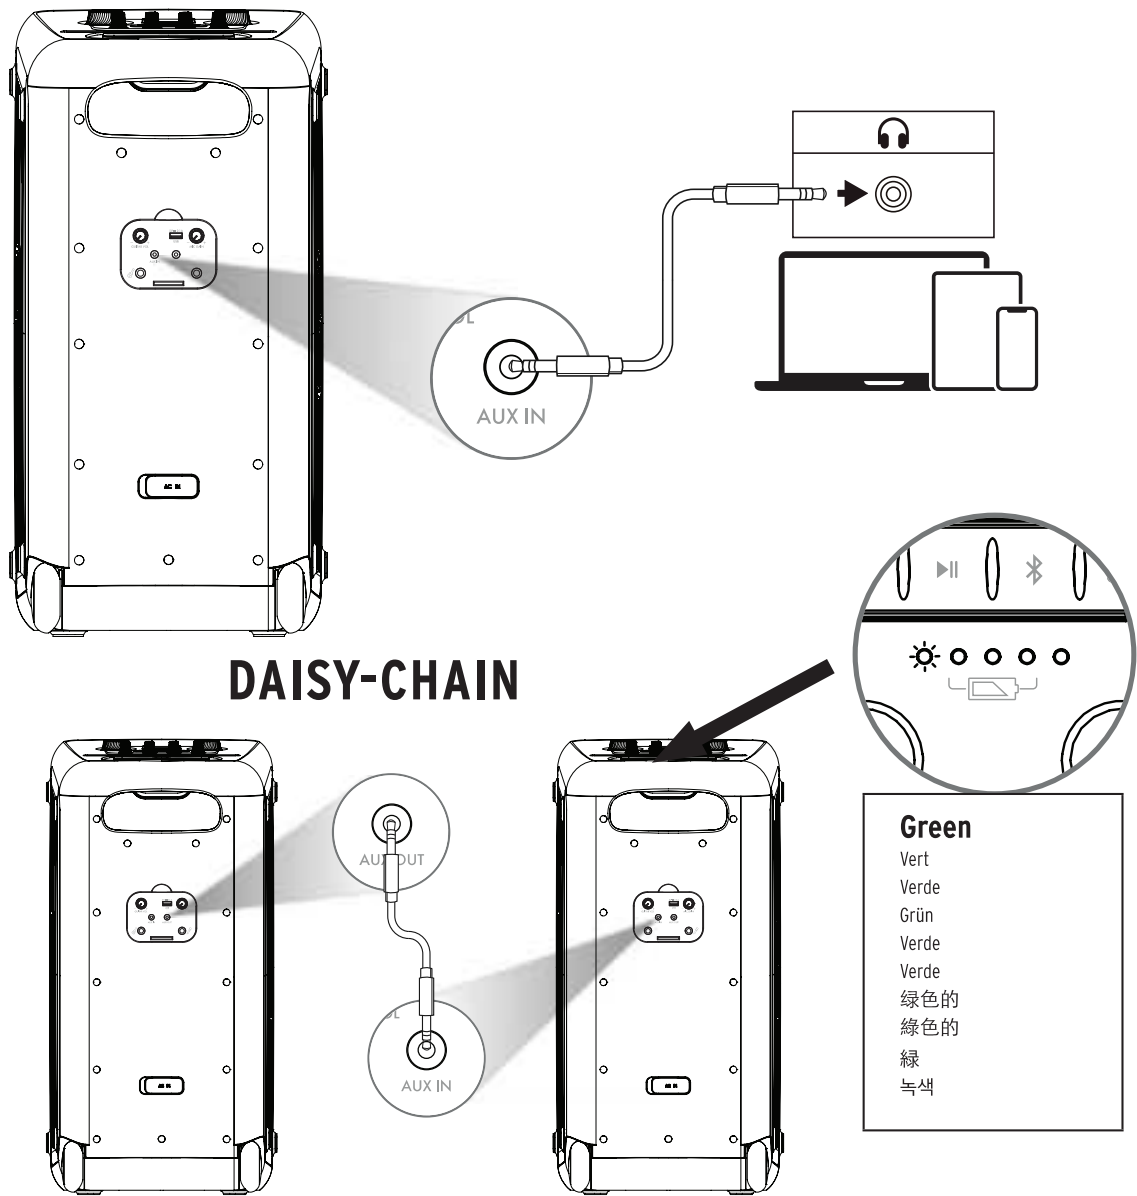

CONNECTIONS - USB

TCONNECTIONS - USB • CONEXIONES - USB • ANSCHLÜSSE - USB • CONNESSIONI - USB • CONEXÕES - USB • 连接 - USB • 接続 - USB • 연결 - USB

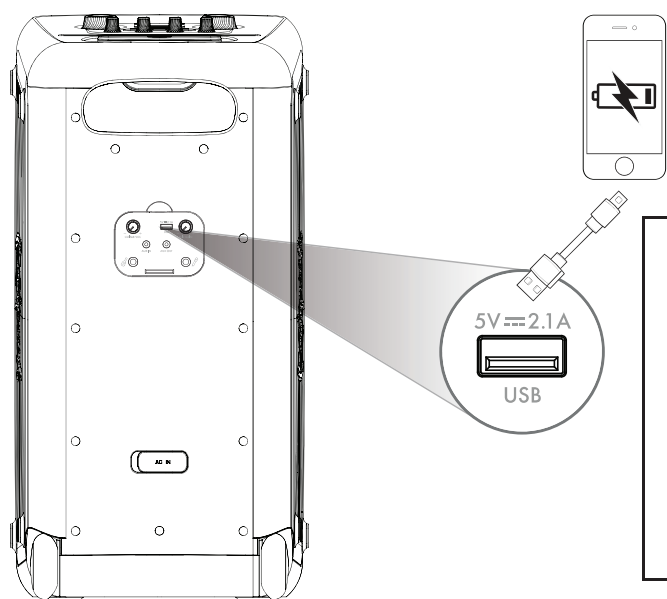


The Klipsch Miami must be powered on to charge your device.

LE KLIPSCH Miami DOIT ÊTRE SOUS TENSION POUR CHARGER VOTRE APPAREIL.
EL KLIPSCH Miami DEBE ESTAR ENCENDIDO PARA CARGAR SU DISPOSITIVO.
DER KLIPSCH Miami MUSS EINGESCHALTET SEIN, UM IHR GERÄT AUFZULADEN.
O KLIPSCH Miami DEVE ESTAR LIGADO PARA CARREGAR SEU DISPOSITIVO.
IL KLIPSCH Miami DEVE ESSERE ACCESO PER CARICARE IL TUO DISPOSITIVO.
KLIPSCH Miami 必须开机才能为您的设备充电。
デバイスを充電するには、KLIPSCH Miami の電源が入っている必要があります。


CONNECTIONS - 1/4" INPUT

CONNEXIONS - ENTRÉE 1/4" • CONEXIONES - ENTRADA 1/4" • ANSCHLÜSSE - 1/4" EINGANG • CONNESSIONI - INGRESSO 1/4" • CONEXÕES - ENTRADA 1/4"
连接 - 1/4" 输入 • 连接 - 1/4" 输入 • 接続 - 1/4" 入力 • 연결 - 1/4" 입력

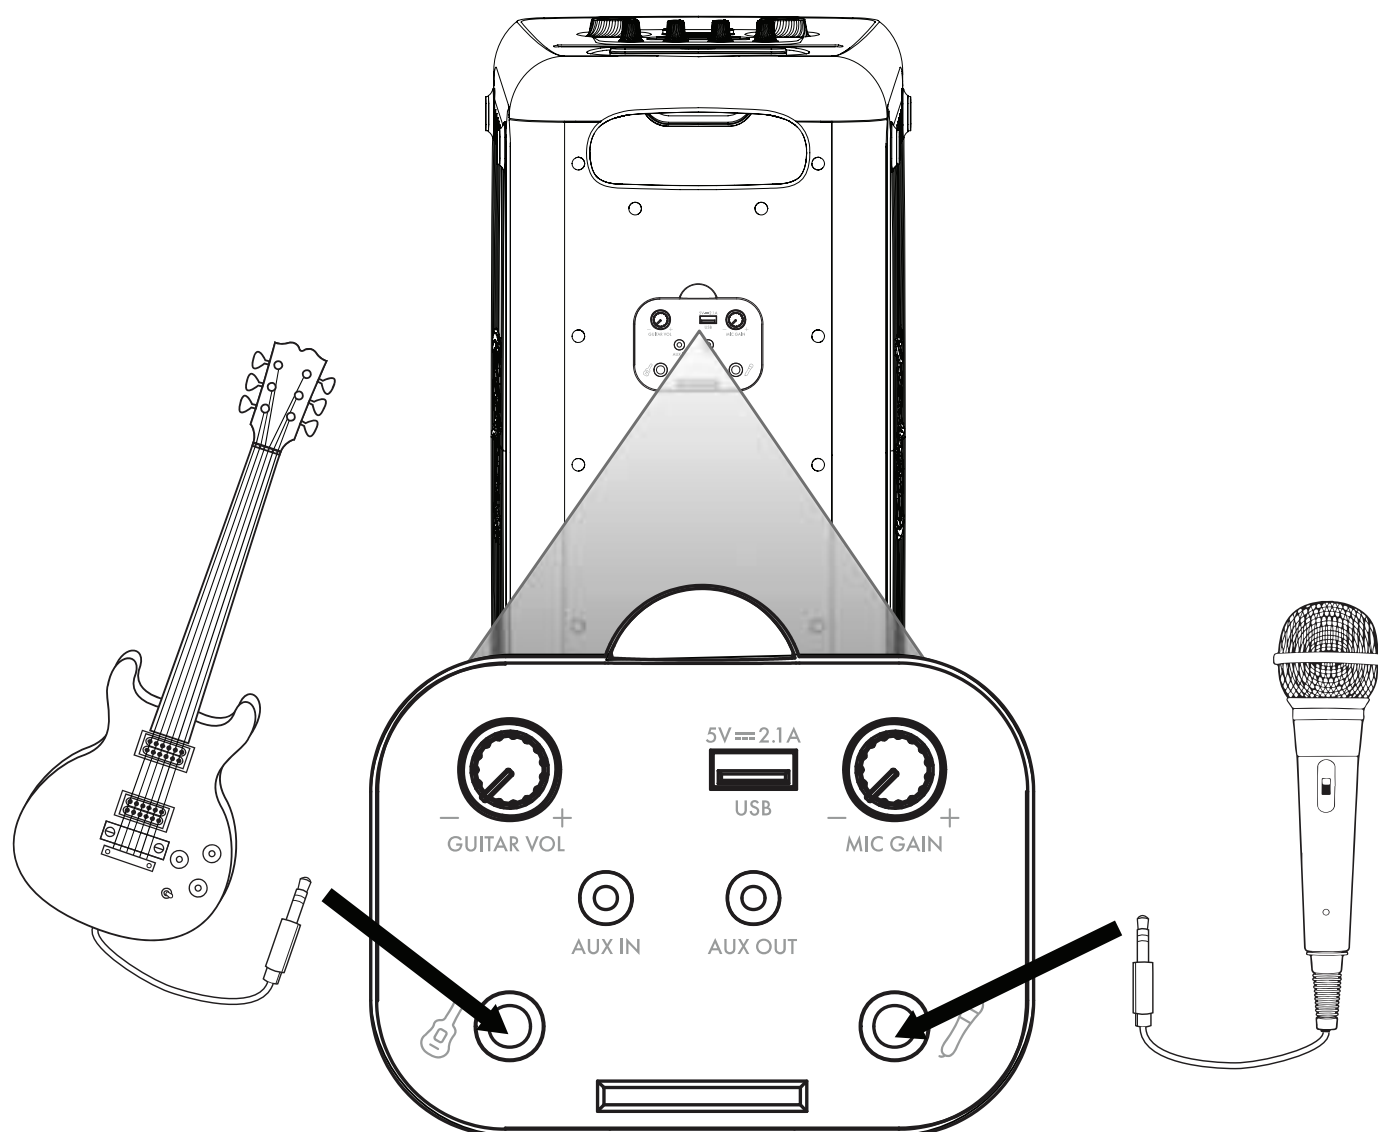

TRUE WIRELESS STEREO PAIRING


VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉREO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉREO SEM FIO VERDADEIRO

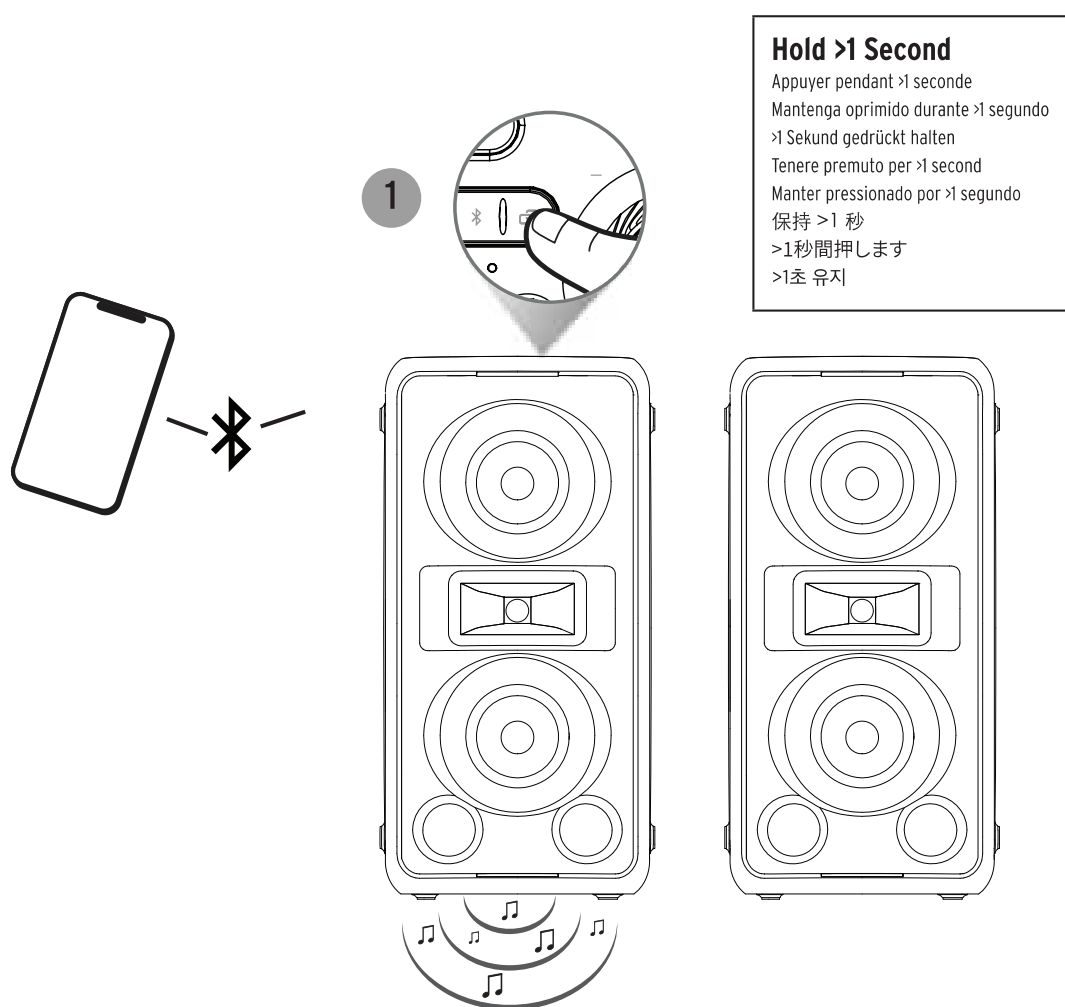

TRUE WIRELESS STEREO PAIRING

VÉRITABLE COUPLAGE STÉRÉO SANS FIL • VERDADERO EMPAREJAMIENTO ESTÉRÉO INALÁMBRICO • ECHTE KABELLOSE STEREO-KOPPLUNG • VERO ACCOPPIAMENTO STEREO WIRELESS • EMPARELHAMENTO ESTÉRÉO SEM FIO VERDADEIRO


2

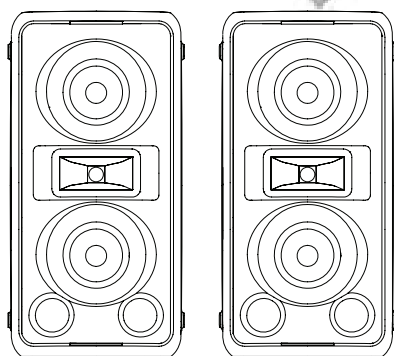

Press x1

Appuyer 1 fois
Oprima 1 vez
1x drücken
Premere 1 volta
Pressionar uma vez
按 1 次
按x1
X1を押します
1번 누르기

3

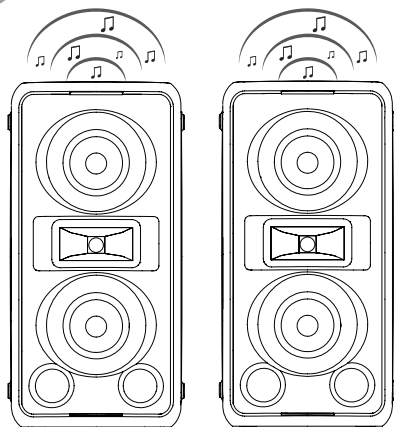


L

R

BROADCAST MODE PAIRING


COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링

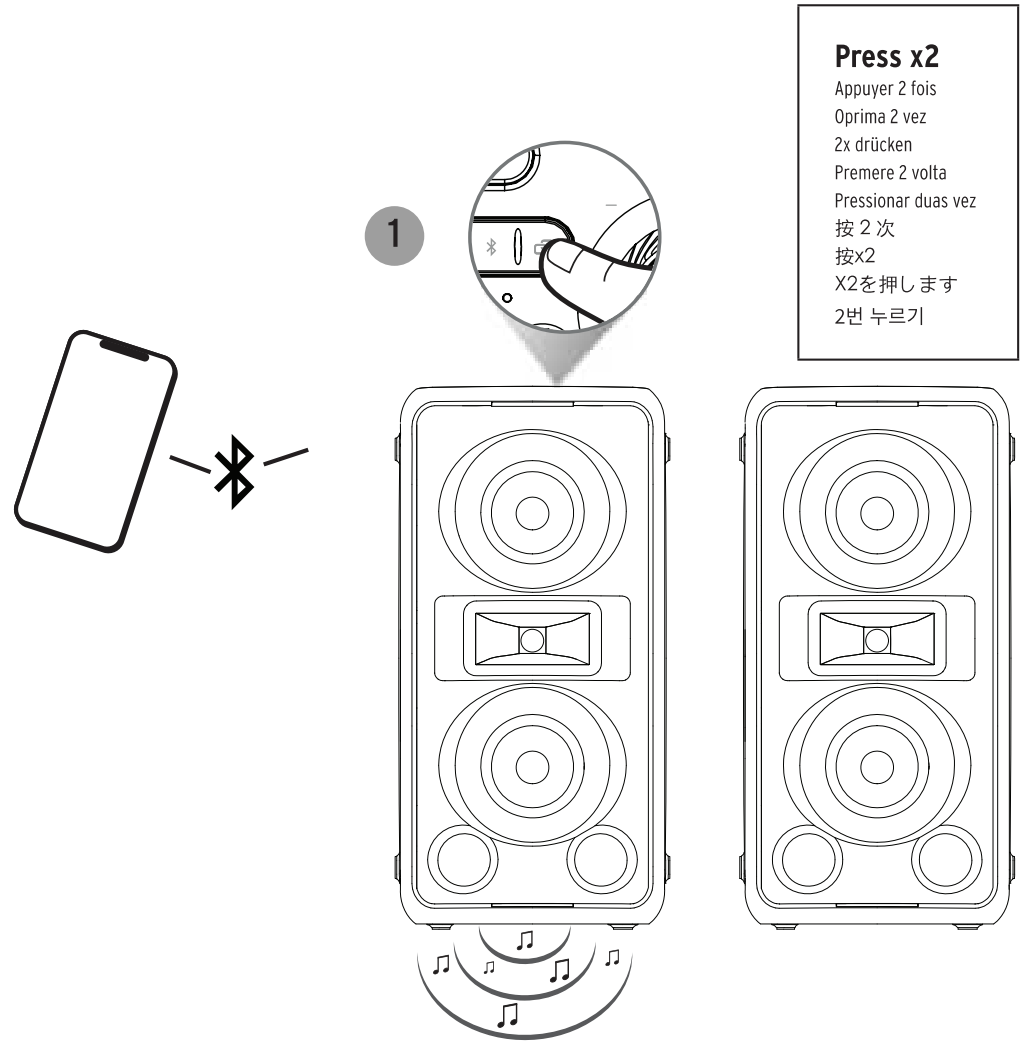

BROADCAST MODE PAIRING

COUPLAGE EN MODE DIFFUSION • EMPAREJAMIENTO DEL MODO DE TRANSMISIÓN • KOPPLUNG IM BROADCAST-MODUS • ACCOPPIAMENTO IN MODALITÀ TRASMISSIONE • EMPARELHAMENTO DO MODO DE TRANSMISSÃO • 广播模式配对 • ブロードキャストモードのペアリング • 브로드캐스트 모드 페어링



2

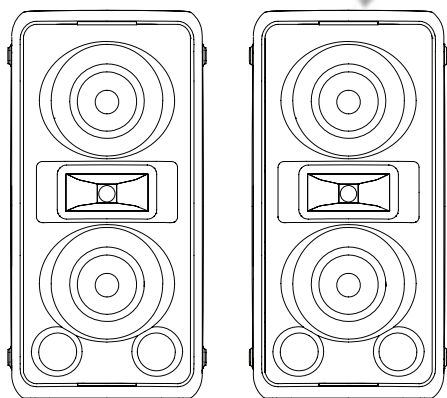

Press x1

Appuyer 1 fois
Oprima 1 vez
1x drücken
Premere 1 volta
Pressionar uma vez
按 1 次
按x1
X1を押します
1번 누르기

3

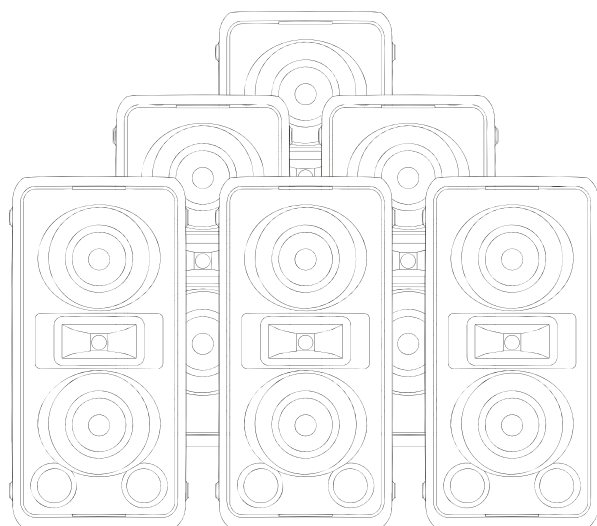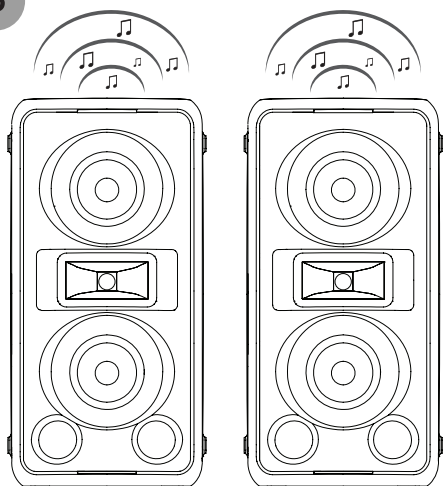


FACTORY RESET



REINITIALIZATION • RESTABLECIMIENTO DE FÁBRICA • RÜCKSETZUNG AUF WERKSEINSTELLUNG • RIPRISTINO IMPOSTAZIONI DI FABBRICA
RESTABELECIMENTO DAS CONFIGURAÇÕES DE FÁBRICA • 恢复出厂设置 • 恢復出廠設定 • ファクトリーリセット • 공장 초기화

Hold 10 Seconds

Appuyer pendant 10 secondes
Mantenga oprimido durante 10 segundos
10 Sekunden gedrückt halten
Tenere premuto per 10 secondi
Manter pressionado por 10 segundos
保持 10 秒
維持 10 秒
10秒間押し続ける
10초 동안 유지

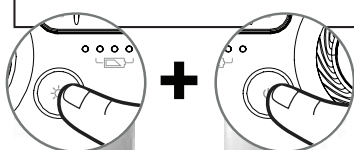


"FACTORY RESET"

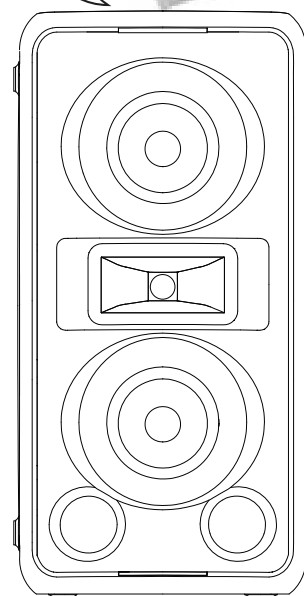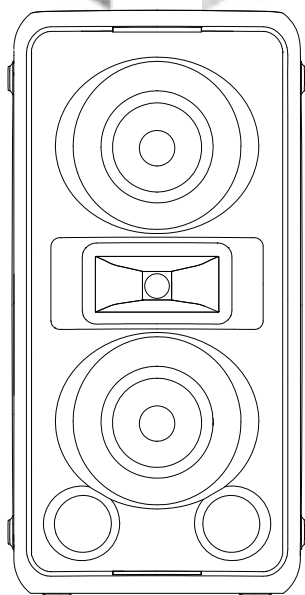

CARE AND CLEANING

ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA • CUIDADOS E LIMPEZA • 保养与清洁 • お手入れ • 護理
和清潔 • 관리 및 청소

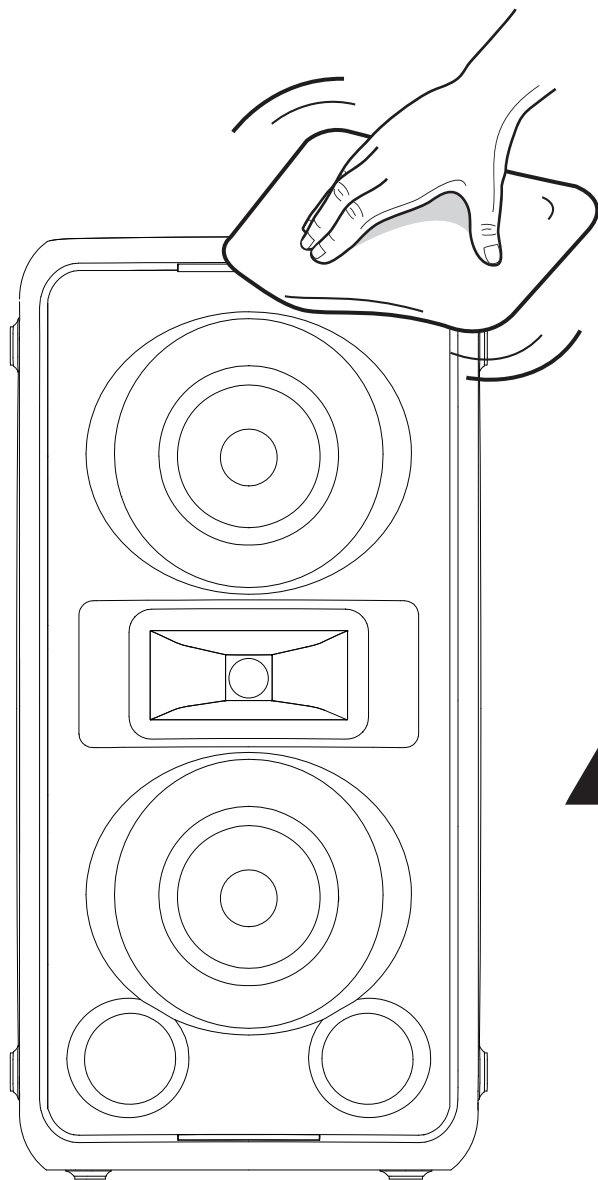

Klipsch®

KEEPERS OF THE SOUND™

3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

KLIPSCH.COM

©2024, Klipsch Group, Inc. Klipsch Group, Inc. is a wholly-owned subsidiary of Vox International Corporation.
Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth*® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V01 - 241120

