

正面, 风琴3折, 成品315*142mm

anko

Instruction Manual
3 in 1 Keyboard Set
K:43-455-287 | T:70-035-940
Model No.:43351282



Safety Instruction:

- Please read the instruction manual before using the device and follow all the safety instructions to avoid damage caused by improper use.
- Read the instruction manual for future reference. Should the device be given to a third party, then the instruction manual must also be provided along.
 - Use this device only for its intended purpose.
 - For indoor use only.
 - Plug the appliance away from all hot surfaces and naked flames.
 - Always put the appliance on a level, stable, clean dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and shock or pile of water.
 - Do not immerse the appliance in water or in other liquids.
 - Do not open the housing under any circumstances.
 - Do not introduce any objects into the interior of the housing.

Features:


- 3 in 1 device (keyboard, mouse, receiver)
- Working distance up to 10 m (without any obstacles)
- Compatible with Windows XP, Win 7 & 10

Multimedia Hotkeys Functions:

FN+F1	Mute	FN+F2	Volume Down
FN+F3	Volume Up	FN+F4	Stop
FN+F5	Previous Track	FN+F6	Next Track
FN+F7	Play/Pause	FN+F8	Stop
FN+F9	Homepage	FN+F10	Mailbox
FN+F11	My computer	FN+F12	Favorites

Some Hotkeys function may not work because of the different device system or application compatibility.

Product overview:

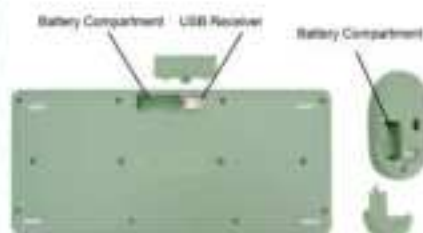

2

反面, 风琴3折, 成品315*142mm

User guide:

1. Remove the battery compartment cover of receiver and insert 3 x 1.5 AA battery. Please pay attention to the polarity diagram printed inside the battery compartment of receiver. This wireless device used one USB receiver, remove the USB receiver from its compartment inside the keyboard.
2. Remove the battery compartment cover of mouse and insert 3 x 1.5 AA battery. Please pay attention to the polarity diagram printed inside the battery compartment of mouse. Caution! Danger of explosion if the batteries are incorrectly inserted.
3. When the battery indicator light blinks, please charge the battery in time.
4. Replace the battery compartment cover again, making sure it is closed properly.
5. Plug the USB receiver into a free USB port on the computer.
6. Mouse and keyboard will connect automatically with the device technology.

Notes on batteries:

- Only use top-quality batteries. Cheap batteries could lead to damage the device as a result.
- If the batteries heat, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid on your skin, flush them thoroughly with lots of water and consult a physician immediately if battery acid comes into contact with your skin, wear the affected area with lots of water and soap.
- If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak. If the device becomes wet/dirty, replace all batteries.
- Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.
- Batteries are very dangerous if swallowed. Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.
- Batteries must not be recharged or connected with other devices. Short-circuits may lead to an electric shock.
- Remove the batteries prior to disposing of the device.

3

Keyboard connect:

- USB 1.1/2.0
- When the keyboard does not match the receiver, please enter the keyboard setting key. Then press "ESC" and "F12" at the same time, and the up light green battery indicator light turns on.
- Plug the USB receiver into the computer.
- The receiver will successfully connect to the computer if the indicator light goes off.

Mouse connect:

- If the mouse is in operation, you can connect by following below step:
- Press the left and middle button of the mouse and do not let go after install battery to the mouse. Then plug USB Receiver into the computer. At this stage you can move the left and middle key and the mouse start to work.

Please note this step is only for the keyboard and mouse which is not match the receiver automatically. Carefully plug the receiver to the computer the keyboard and mouse will finally connect to the computer.

And this step can not be used in other brands of receiver and keyboard/mouse.